



# netTerrain 10.1

## Administrator Guide



# Contents

<b>1 About this Guide</b>	<b>7</b>
1.1 Who should use it	7
1.2 Assumptions	7
<b>2 User Management</b>	<b>7</b>
2.1 Adding users	8
2.2 User table	11
2.2.1 Locked users	13
2.2.2 Disabling MFA	13
2.2.3 Deleting users	14
2.2.4 User groups	14
2.3 Audit trail	15
2.3.1 Accessing the audit trail from the project and catalog	17
2.4 Filters	18
2.5 Active Directory	20
2.5.1 Azure Active Directory	20
<b>3 Group Management</b>	<b>26</b>
3.1 Security roles and default group types	26
3.2 Group table	28
3.3 Custom groups	29
3.3.1 Creating new groups	30
3.3.2 Adding users from the groups table	31
3.3.3 Configuring Azure Active Directory roles	31
3.4 Managing group exceptions	37
3.4.1 Removing restrictions for a group	41
<b>4 Global Settings</b>	<b>42</b>
4.1 Result sets	42
4.2 Notifications	43
4.3 Page Setup	45
4.3.1 Default page size and margins	46
4.3.2 Default page color	46
4.3.3 Default grid settings	47
4.4 API Settings	47
4.5 Miscellaneous Settings	48
4.5.1 Open URL links in new window	49

4.5.2 Show event messages	49
4.5.3 Show confirmation for object type change	50
4.5.4 Show confirmation for bulk displayed field change	51
4.5.5 Display Devices in hierarchy Browser	52
4.5.6 Vendor Categories	53
4.5.7 'Thought of the Day'	53
4.5.8 IP Toolset	54
4.5.9 Predefined status visual override for devices	57
4.5.10 Company logo image	60
4.5.11 Enabling and disabling import / export buttons	61
4.5.12 Enabling the collector	62
4.5.13 Rendering exports from server	63
4.5.14 Controlling OSP-related small markers	64
4.5.15 Bend point consolidation	65
4.5.16 Object blink count	66
4.5.17 Show on Diagram effect	67
4.5.18 Go up effect	68
4.5.19 Workorder settings	68
4.5.20 Default Font family	70
4.5.21 Date format	70
4.5.22 24 hour time format	71
<b>4.6 Custom user actions</b>	<b>72</b>
4.6.1 Setting up the CustomUserAction	73
4.6.2 Preparing the dll and configuration files	74
4.6.3 Custom actions: setting up a label printer	79
<b>4.7 License Information</b>	<b>84</b>
4.7.1 Activating a new key	86
<b>4.8 Requesting a netTerrain upgrade patch</b>	<b>87</b>
4.8.1 Upgrade via Zendesk ticket	87
4.8.2 Upgrade via ticket	88
<b>4.9 Additional settings using the settings.xml file</b>	<b>89</b>
4.9.1 Authentication and security settings	89
4.9.2 Directories	90
4.9.3 Default Global Settings	91
4.9.3.1 DefaultDiagramId	91
4.9.3.2 DefaultThemeName	91
4.9.3.3 AllowSymbolsInExpressions	91
4.9.3.4 DevExpressDefaultDashboard	91
4.9.4 netTerrain notifications and IT visualization parameters	91
4.9.4.1 ShowErrors and ErrorLog	92

4.9.4.2 IntervalHideQuote and IntervalHideHelpMessage	92
4.9.4.3 HelpMessageShowCount	92
4.9.4.4 ShowAlertIf90PercentsCapacityReached	92
4.9.5 Usability and visualization	93
4.9.5.1 SearchStringLength	93
4.9.5.2 EnableShortcutsToAddNodeRackDeviceAutomatically	93
4.9.5.3 EmbeddedDocumentsFileSizeLimit	93
4.9.5.4 EmbeddedDocumentsExtensions	93
4.9.5.5 LinkCreationByMouseHoverOver	94
4.9.5.6 Snapping	94
4.9.5.7 MinObjectsToShowSize	94
4.9.5.8 AutoZoomToNodeFactor	95
4.9.5.9 MinRelativeNodeSizePerc	95
4.9.5.10 MaxRelativeNodeSizePerc	95
4.9.5.11 DynamicReportsInvalidProperty	95
4.9.5.12 ShowNodeTitle, ShowLinkTitle and ShowFreeTextTitle	95
4.9.5.13 IsInStockColumnEnabled	96
4.9.6 Settings for fiber and outside plant diagram tuning	96
4.9.6.1 Map and general OSP settings	96
4.9.6.1.1 Map sources	96
4.9.6.2 ZoomedOutObjectMapping	97
4.9.6.3 Circuit settings	98
4.9.6.4 CLR settings	99
4.9.6.4.1 BlockCLRPathLinkLabel	99
4.9.6.4.2 Other CLR labels	99
4.9.6.5 Strand settings	100
4.9.6.6 Ribbon, subunit and stripe settings	100
4.9.6.6.1 StrandStripeColors	100
4.9.6.6.2 RibbonStripeColors	101
4.9.6.7 BOM settings	102
<b>5 Help and Logs</b>	<b>102</b>
5.1 Guides	103
5.2 Log Management	103
5.3 Other Menus	104
<b>6 Setting Up a Local OSM Server</b>	<b>104</b>
6.1 Getting ready	104
6.1.1 Pre-installation	105
6.1.2 Updating the Server	105

6.1.3 Installing OpenStreetMap Dependencies	105
6.1.4 Installing PostgreSQL / PostGIS	106
6.1.5 Creating a Unix User	106
6.1.6 Creating a Database User	106
<b>6.2 Installing OSM2PGSQL</b>	<b>107</b>
6.2.1 Creating a Directory for OSM2PGSQL	107
6.2.2 Installing Perquisites for OSM2PGSQL	107
6.2.3 Building OSM2PGSQL	108
<b>6.3 Installing Mapnik</b>	<b>108</b>
6.3.1 Mapnik and Dependency Installation	108
6.3.2 Checking Mapnik Install	108
6.3.3 Installing mod_tile and Renderd	109
6.3.4 Compiling mod_tile	109
<b>6.4 Stylesheet Configuration</b>	<b>109</b>
6.4.1 Downloading OpenStreetMap Carto	110
6.4.2 Installing a Carto Compiler	110
<b>6.5 Loading Data</b>	<b>110</b>
6.5.1 Downloading the Map Data	110
6.5.2 Installing the Map Data into the Database.	111
<b>6.6 Installing Shapefiles and Fonts</b>	<b>112</b>
6.6.1 Shapefile Installation	112
6.6.2 Font Installation	112
<b>6.7 Setting up the Web Server</b>	<b>112</b>
6.7.1 Editing the renderd.conf File	112
<b>6.8 Configuring Apache</b>	<b>113</b>
6.8.1 Create Directories for mod_tile and Renderd	113
6.8.2 Setting up Communication for mod_tile	114
6.8.3 Setting up Communication for Renderd	114
6.8.4 Restarting Apache	115
<b>6.9 Configuring netTerrain</b>	<b>115</b>
6.9.1 Editing the Web.config File	115
<b>6.10 Running Renderd</b>	<b>116</b>
6.10.1 Running Renderd in the Foreground	116
6.10.2 Running Renderd in the Background	117
6.11 Viewing Tiles	117
6.11.1 Copying the mod_tile file to the /var/www/html directory	117
6.11.2 Loading the Map in a Web Browser	118
6.11.3 Acknowledgements	118

Document Code. **GN\_D\_nT10-03**

Last revision: **02/20/2026**

**© 2026 Graphical Networks LLC. All rights reserved.**

Our "keep the lawyers happy" disclaimer: Graphical Networks and netTerrain are registered trademarks of Graphical Networks LLC. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged and stuff.

If rash, irritation, redness, or swelling develops, discontinue reading. Safety goggles may be required during use. Do not eat this guide, it's not yummy. This disclaimer is not intended as legal advice. For that, better call Saul.

Image: **Margaret Elaine Hamilton** (born August 17, 1936).

American computer scientist who coined the term "software engineering", directed the Software Engineering Division at the MIT Instrumentation Laboratory and led the development of the on-board flight software for NASA's Apollo Guidance Computer.



Graphical Networks LLC

Telephone: + 1-240-912-6223

Fax: +1-240-912-6339 (where you can send us the purchase orders)

# 1 About this Guide

This document is divided into the following chapters:

- Chapter 1, "About this Guide".
- Chapter 2, "User Management", which provides instruction on managing users.
- Chapter 3, "Group Management", which provides information about group management and group exceptions.
- Chapter 4, "Global Settings", explains global settings available in the admin console that affect all users in the project.
- Chapter 5, "Help and Logs".
- Chapter 6, "Setting Up a Local OSM Server".

## 1.1 Who should use it

This guide is intended for netTerrain admin users: administrators for the netTerrain application tasked with managing users, groups, and other system settings. You are the gatekeepers of order and sanity in the documentation universe.

### Attention!

To access the administrative console, a user must be part of the admin role in netTerrain.

 
## 1.2 Assumptions

This guide assumes that users have basic knowledge of browser navigation and general computer and networking skills. A basic understanding of netTerrain functions, such as navigating diagrams and working with objects doesn't hurt in case users start babbling about diagram filters or displayed fields and you don't want to have that deer-in-the-headlights look. When in doubt, mumble.

# 2 User Management

Users in netTerrain are accounts that have been granted a certain permission level (or role) to access netTerrain in some capacity. A user's role is (usually) inherited from its parent group. Users can, however, override a group's set of permissions with their own per-diagram roles.

Users are managed in the user section of the admin console. The admin console can be accessed from anywhere in netTerrain by clicking on the admin console button, as shown below. You must be an administrator to see that button.



Admin console button (shown in mojito lime)

If you want to return from the admin console to the project, you can do the following:


- Click on the project button (globe icon), which takes you back to the project's top level.
- Click on the left arrow icon, to the left of the project button, which takes you back to the last diagram you visited in the project.
- Click on the browser back button, which would take you to the previous project diagram if you came from the project during the current session.



Using the project button and arrow to return to the project

## 2.1 Adding users

To add new users, access the admin console and click on the user counter number (this is a hyperlink).

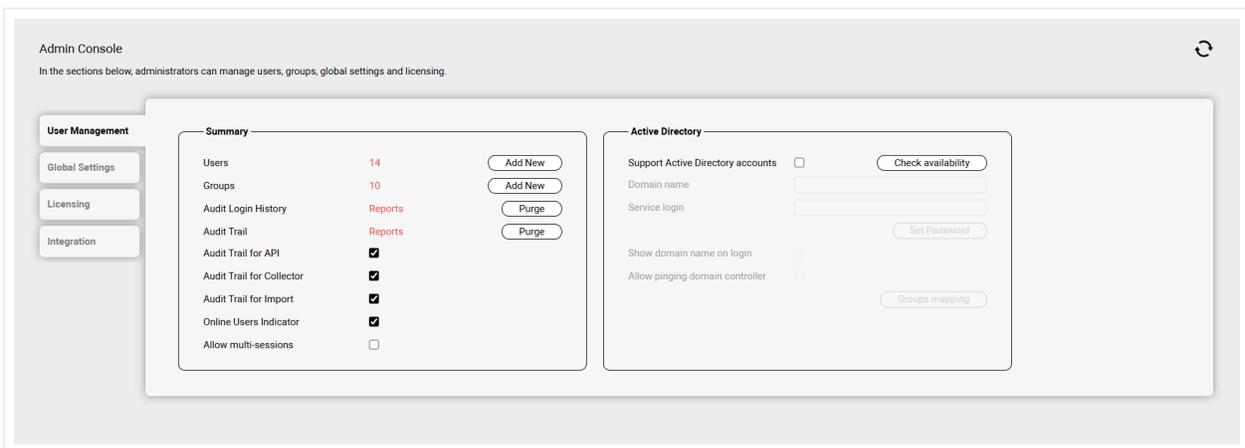

This will show you the complete list of users and from there you can click on the 'Create New' button to start adding more users.

#	Name	Email	Account type	Group	Online	Last Login	MFA	Description	Comments	Status	Loc
1	admin	admin@admin.com	NetTerrain	Admin	Online	07-10-2025, 1:42:35 PM	Off			-	
2	admin@graphicalnetworks.onmicrosoft.com		OpenIDConnect	NoAccess	Offline		n/a			-	
3	apple		NetTerrain	Admin	Offline	06-02-2023, 8:07:23 PM	Off			-	
4	collector		NetTerrain	Admin	Offline	03-24-2023, 2:13:56 AM	Off			-	
5	Diego.Rojas@graphicalnetworks.com		OpenIDConnect	Admin	Offline	07-03-2024, 4:10:03 PM	n/a			-	
6	fred.koh@graphicalnetworks.com		OpenIDConnect	Admin	Offline	09-05-2024, 1:15:18 PM	n/a			-	
7	hannah.ash@graphicalnetworks.com		OpenIDConnect	Admin	Offline	06-12-2024, 7:41:00 PM	n/a			-	
8	hernan.lopez@graphicalnetworks.com		OpenIDConnect	Admin	Offline	06-20-2024, 4:04:01 PM	n/a			-	
9	Jan		NetTerrain	Admin	Offline	02-20-2024, 5:38:56 PM	Off			-	
10	jan.durnhofer@graphicalnetworks.com		OpenIDConnect	Admin	Offline	04-10-2024, 8:50:55 PM	n/a			-	

### Adding new users in netTerrain

You can also add a user directly from the admin console by clicking on the 'Add New button'.

**Admin Console**  
In the sections below, administrators can manage users, groups, global settings and licensing.

**User Management**

- Global Settings
- Licensing
- Integration

**Summary**

Users	14	<b>Add New</b>
Groups	10	Add New
Audit Login History	Reports	Purge
Audit Trail	Reports	Purge
Audit Trail for API	<input checked="" type="checkbox"/>	
Audit Trail for Collector	<input checked="" type="checkbox"/>	
Audit Trail for Import	<input checked="" type="checkbox"/>	
Online Users Indicator	<input checked="" type="checkbox"/>	
Allow multi-sessions	<input type="checkbox"/>	

### Adding users straight from the console

The add user dialog has a series of fields, some of them mandatory, that identify the properties of the new user.

The screenshot shows a dialog box titled "Add User". It contains several input fields and two buttons at the bottom. The fields are: "Account Type" (a dropdown menu showing "Username and Password"), "Name" (a text input field), "Email" (a text input field), "Group" (a dropdown menu showing "Admin"), "Password" (a text input field with an eye icon for visibility), "Confirm" (a text input field with an eye icon for visibility), "Description" (a text input field), and "Comments" (a text input field). At the bottom of the dialog are two buttons: "Submit" and "Cancel".

#### *Add user dialog*

- 1) Account Type: Combo box that allows you to specify if the user to be added is a native netTerrain user or an Active Directory user type.
- 2) Name: This is the username assigned to the account. It may contain spaces in between characters, but any leading and trailing whitespaces will be truncated.
- 3) Email: The email address field is not mandatory.
- 4) Group: A user must belong to a group to inherit roles for accessing netTerrain. The group can be a system or custom defined group.
- 5) Password: password settings can be defined in the web.config file, but in general it must be 6 characters (or more) long with a maximum length of 100 characters. The password field must also be confirmed.
- 6) Confirm: Retype the password.
- 7) Description: A data field that can be used to populate additional information about the user. This is not a required field.

8) Comments: A data field that can be used to populate additional comments about the user. This is not a required field.

Users can change their passwords after they log into the system, so using a temporary generic password is acceptable for the initial setup process. When using active directory, there is no need to create users as they are synchronized automatically from the AD database.

## 2.2 User table

All users in netTerrain are depicted in the user table, which, as mentioned above, can be accessed from the Admin console user count button, as depicted below.

The screenshot shows the Admin Console interface. On the left, there is a sidebar with navigation buttons: **User Management** (selected), Global Settings, Licensing, and Integration. The main content area is titled **Summary** and contains a table with the following data:

Category	Count/Status	Action
Users	14	Add New
Groups	10	Add New
Audit Login History	Reports	Purge
Audit Trail	Reports	Purge
Audit Trail for API	<input checked="" type="checkbox"/>	
Audit Trail for Collector	<input checked="" type="checkbox"/>	
Audit Trail for Import	<input checked="" type="checkbox"/>	
Online Users Indicator	<input checked="" type="checkbox"/>	
Allow multi-sessions	<input type="checkbox"/>	

### Accessing the user table

The user table contains a variety of options for managing users. A screenshot of the table is depicted below.

Users To csv To Excel Add New **A**

Records on page: 14 Records in table: 14

Filter Apply Clear Records per page: 100 Show Id Field Default sorting

#	Name	Email	Account type	Group	Online	Last Login	MFA	Description	Comments	Status	Locked	Audit Trail	Last Audit Trail Date	Login Count	Token Events
1	admin	admin@admin.com	netTerrain	Admin	Online	09-26-2025, 4:20:27 AM	Off			-	<input type="checkbox"/>	19497	09-25-2025, 8:47:36 PM	379	0
2	admin@graphicalnetworks.onmicrosoft.com		OpenID Connect	NoAccess	Offline	n/a				-	<input type="checkbox"/>	0		0	0
3	apple		netTerrain	ReadOnly	Offline	09-02-2025, 5:27:03 PM	Off			-	<input type="checkbox"/>	0		5	0
4	collector		netTerrain	Admin	Offline	03-24-2023, 2:13:56 AM	Off			-	<input type="checkbox"/>	407235	03-24-2023, 2:14:40 AM	358955	0
5	Diego Rojas@graphicalnetworks.com		OpenID Connect	Admin	Offline	07-03-2024, 4:10:03 PM	n/a			-	<input type="checkbox"/>	29193	07-03-2024, 5:58:21 PM	34	0
6	fred.koh@graphicalnetworks.com		OpenID Connect	Admin	Offline	09-05-2024, 1:15:18 PM	n/a			-	<input type="checkbox"/>	0		2	0
7	hannah.ash@graphicalnetworks.com		OpenID Connect	Admin	Offline	06-12-2024, 7:41:00 PM	n/a			-	<input type="checkbox"/>	0		3	0
8	heman.lopez@graphicalnetworks.com		OpenID Connect	Admin	Offline	06-20-2024, 4:04:01 PM	n/a			-	<input type="checkbox"/>	801	06-18-2024, 12:24:47 PM	34	0
9	Jan		netTerrain	Admin	Offline	02-20-2024, 5:38:56 PM	Off			-	<input type="checkbox"/>	0		1	0
10	jan.dumhofer@graphicalnetworks.com		OpenID Connect	Admin	Offline	04-10-2024, 8:50:55 PM	n/a			-	<input type="checkbox"/>	682	04-08-2024, 4:21:15 PM	22	0

**B** **C**

## User table

In addition to the create new user button, section A above also has two more buttons to export the user table to csv and to synchronize users with Active Directory.

Section B above shows the column headers for each property. For convenience, these headers are sortable so for example, we can display all users alphabetically and in ascending order. Click twice on the column header to sort the table in descending order.

The information available for each user is the following:

- Password setup icon: allows an admin to change the user password

10		jan.dumhofer@graphicalnetworks.com	
11		Jason	jason@gn.com
12		jason.charman@graphicalnetworks.com	

- Delete user icon

10		jen.dummore@graphicalnetworks.com	
11	 	Jason	jason@gn.com
12		jason.charman@graphicalnetworks.com	

- User Name
- User Email
- Account Type (netTerrain created, API, etc)
- Group (see chapter 3 on managing groups)
- Online status (green when user is online)
- Last login date
- MFA status (On, when MFA has been enabled for that user)
- Description (optional field)
- Comments (optional field)
- Locked status
- Audit trail link
- Last audit trail date
- Login count
- Token events

## 2.2.1 Locked users

You will also take note of the locked status indicator. If any of your users try to log in unsuccessfully more than N times in a row, their accounts will be locked. The number N can be changed in the web.config file. As an administrator, you can unlock any user simply by unchecking that lock status. If your account is locked and you are the only admin, well that's not good... Not to worry, just contact us and we will provide you with a script to unlock you from the database backend.

## 2.2.2 Disabling MFA

In some cases a user that has MFA enabled may have to have it disabled. This can be easily done by clicking on the On link on the user table and then disabling MFA access.

Email	Account type	Group	Online	Last Login	MFA	records per page
	OpenIDConnect	Admin	Offline	05-08-2023, 9:38:03 AM	n/a	
	NetTerrain	Admin	Offline	05-25-2021, 1:09:37 PM	Off	
Dima	NetTerrain	Admin	Offline	04-12-2021, 1:38:26 AM	On	
	NetTerrain	Edit	Offline	04-21-2023, 9:47:23 AM	On	

### 2.2.3 Deleting users

To delete a user, simply select delete from the desired user row. Note that this option is only available when the user is offline. Consider that by deleting a user from netTerrain its audit trail will also be removed from the system. In many cases it is better to just assign a user to the 'No Access' group to avoid losing the audit trail records.

### 2.2.4 User groups

To change the group a user belongs to, select the group dropdown of the specific user row. Once an option is chosen, the group setting will automatically be saved. Please note your license count may be affected when adding or removing users from any group that is an editor or better. These roles include:

- Admins
- Power Users
- Editors.

Any user belonging to a group that includes any of the above roles requires an "Editor" license.

#### Attention!

If the system is not licensed for the appropriate editor license count, you may not be able to change a user to certain groups, like Admins, Power Users and Editors. We gladly accept purchase orders to fix that issue in no time.

## 2.3 Audit trail

The last three columns in the user table (see section C above) refer to the audit trail, which consists of a history of user changes in netTerrain. In simple terms, a history of who changed what and when.

To review the history of a user, simply click on the audit trail counter link. This will open the Audit Trail report window. This window allows you to select the audit trail based on the Action and Time Frame.

Audit Trail for User ([hernan.lopez@graphicalnetworks.com](#)) Purge

Filter	Time Frame	Time Range
All Inserts (296)	Today	Last 24 hours
	This week	Last 7 days
	This month	Last 30 days
	This year	Last 12 months
All Deletes (359)	Today	Last 24 hours
	This week	Last 7 days
	This month	Last 30 days
	This year	Last 12 months
All Updates (146)	Today	Last 24 hours
	This week	Last 7 days
	This month	Last 30 days
	This year	Last 12 months
Complete Audit Trail (801)	Today	Last 24 hours
	This week	Last 7 days
	This month	Last 30 days
	This year	Last 12 months

### Audit Trail Reports

Audit trail actions include:

- All Deletes: To see all the deletes performed within the time frame selected.
- All Inserts: View of all the inserts performed within the time frame selected.
- All Updates: View of all updates performed within the time frame.
- Complete Audit Trail: View of all Deletes, Inserts and Updates within the time frame selected.

The audit trail has various field names that help determine what the user has changed in the netTerrain system. The audit trail table can also be downloaded to a csv file by clicking the "To csv" button.

Audit Trail for User [Complete Audit Trail: (herman.lopez@graphicalnetworks.com)] [To csv](#) [To Excel](#)

Filter  [Apply](#) [Clear](#)

#	Link	ID	Parent ID	FieldAffected	Field Value Affected	Old Value	Action	User	On
1	<a href="#">Show on diagram</a>	2400000053227	2400000025874				INSERT	herman.lopez@graphicalnetworks.com	06-18-2024, 12:24:47 PM
2		2400000053222	2400000025874				DELETE	herman.lopez@graphicalnetworks.com	06-18-2024, 12:24:37 PM
3		2400000053222	2400000025874				INSERT	herman.lopez@graphicalnetworks.com	06-18-2024, 12:24:28 PM
4	<a href="#">Show on diagram</a>	2400000053059	2400000051728				INSERT	herman.lopez@graphicalnetworks.com	05-23-2024, 11:30:23 AM
5		2400000053058	2400000051728				DELETE	herman.lopez@graphicalnetworks.com	05-23-2024, 11:30:08 AM
6		2400000053058	2400000051728				INSERT	herman.lopez@graphicalnetworks.com	05-23-2024, 11:29:40 AM
7		2400000053057	2400000051728				DELETE	herman.lopez@graphicalnetworks.com	05-23-2024, 11:29:35 AM
8	<a href="#">Show in catalog</a>	2600000007454	2600000007454	Default Width [in]	398.593	190	UPDATE	herman.lopez@graphicalnetworks.com	05-23-2024, 11:29:27 AM
9	<a href="#">Show in catalog</a>	2600000007454	2600000007454	Default Height [in]	111.8618	17.5	UPDATE	herman.lopez@graphicalnetworks.com	05-23-2024, 11:29:27 AM
10		2400000053057	2400000051728				INSERT	herman.lopez@graphicalnetworks.com	05-23-2024, 11:29:06 AM
11		2400000053056	2400000051728				DELETE	herman.lopez@graphicalnetworks.com	05-23-2024, 11:28:59 AM
12		2400000053056	2400000051728				INSERT	herman.lopez@graphicalnetworks.com	05-23-2024, 11:28:52 AM

### Audit trail table

The audit trail table contains the following fields:

- 1) #: A sequence number that represents the row being viewed.
- 2) Link: this allows for navigation to the object that is being referenced in the Audit Trail. There will be no link for an object that has been deleted.
- 3) ID: this is the object ID referenced in that audit trail row. Remember that all objects in netTerrain have unique ID numbers.
- 4) Parent ID: if the object has a parent, this is the ID for the object's parent.
- 5) Field Affected: this column refers to the table field that was affected by an update.
- 6) Field Value Affected: this is the current (or changed) value.
- 7) Old Value: the original field value that was changed.
- 8) Action: the following actions are audited in netTerrain:
  - a. Update: the user has updated a data field value. The new and old values can be compared by reviewing the "Field Value Affected" and "Old Value" columns.
  - b. Insert: this means a user has created a new node, device, link, free text, or other object in netTerrain.
  - c. Delete: this means that a user has deleted an object from the system. Typically, a node, device, link, free text or other object in netTerrain.
- 9) User: user's name that made the change.

10) On: date and timestamp for the when the change was made.

### 2.3.1 Accessing the audit trail from the project and catalog


Audit trails can be viewed not only on a per user basis, as explained above, but also on a per diagram, per object and per object type basis. Access on a per diagram and per object basis occurs from the project, whereas the access on a per object type basis occurs from the catalog, as depicted in the screenshots below. Note that in all cases the audit trail buttons and tables are only accessible for administrators.

The screenshot displays the netTerrain interface with two main panels: Hierarchy and Inspector. The Hierarchy panel on the left shows a tree structure under 'Top Level', including 'Collector Data', 'Higher Ed Net', 'Logical Network Diagram', and 'UMD Campus Logical Network'. The Inspector panel on the right shows a list of object types and their counts. The 'Audit Trail' entry is highlighted with a green box and shows a count of 522.

Object Type	Count
Nodes	4
Cabinets	
Devices	2 (+61 aliases)
Free Texts	7
Rich Texts	0
Palette Objects	5
Pictures	0
Hidden Objects	0
Circuits	
<b>Audit Trail</b>	<b>522</b>


Accessing the audit trail for a specific diagram (bottom left link)

Below you can see how to access the audit trail for a specific link.

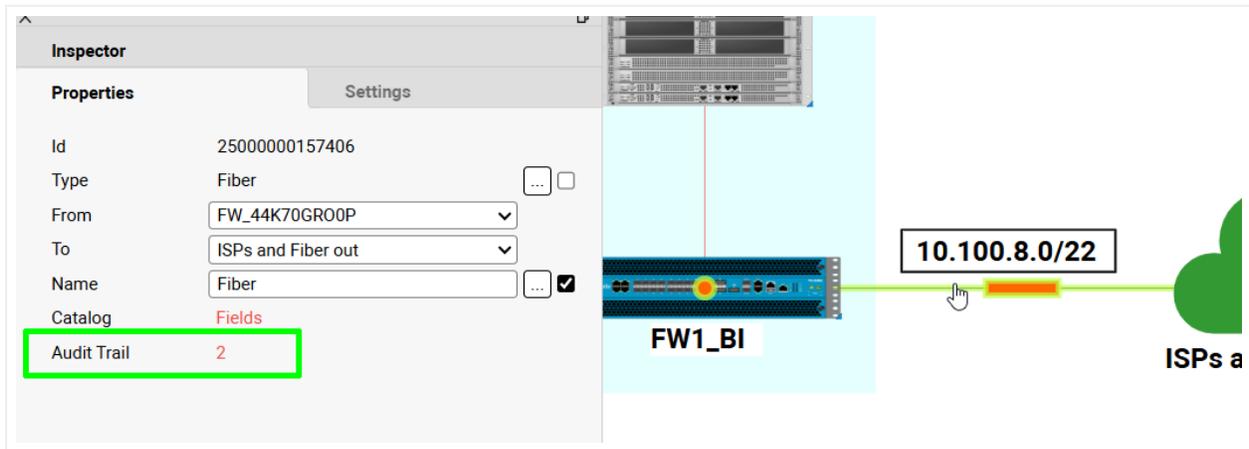

Accessing the audit trail for a link instance from its properties

And finally, below you can see how to access the audit trail for a given object type in the catalog.

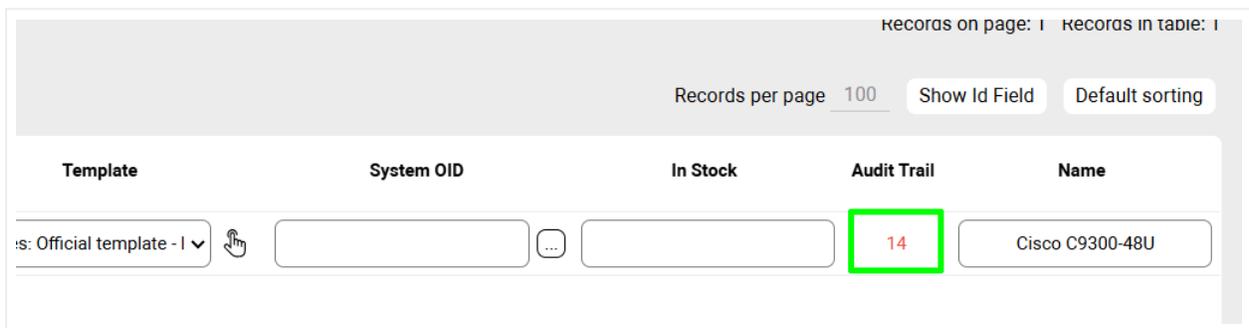

Audit trail link for catalog objects (on right side)

## 2.4 Filters

All tables in netTerrain have a filter text box that lets users narrow the list view by filtering out any records that have values matching the filter string. For example, typing the string 'chr' in the filter box will filter out any user records that do not contain that string sequence in any of its properties.

To use filters, simply type in the desired string and hit 'Enter' or click on the 'apply' button.

Users    To csv    To Excel    Add New

   Apply    Clear

#		Name ▲	
1		admin@graphicalnetworks.onmicrosoft.com	<input type="text"/>
2		Diego.Rojas@graphicalnetworks.com	<input type="text"/>
3		fred.koh@graphicalnetworks.com	<input type="text"/>
4		hannah.ash@graphicalnetworks.com	<input type="text"/>
5		hernan.lopez@graphicalnetworks.com	<input type="text"/>
6		jan.durnhofer@graphicalnetworks.com	<input type="text"/>
7		jason.sherman@graphicalnetworks.com	<input type="text"/>
8		justice.evans@graphicalnetworks.com	<input type="text" value="justice.evan"/>


1 out of 1    <    >    1    Go

### Filtering users

To remove the filter, simply remove the string from the filter box and hit 'Enter' or alternatively, click on the 'clear' button next to apply.

## 2.5 Active Directory

The Active Directory connection between the netTerrain application and your AD server can be setup from the admin console.

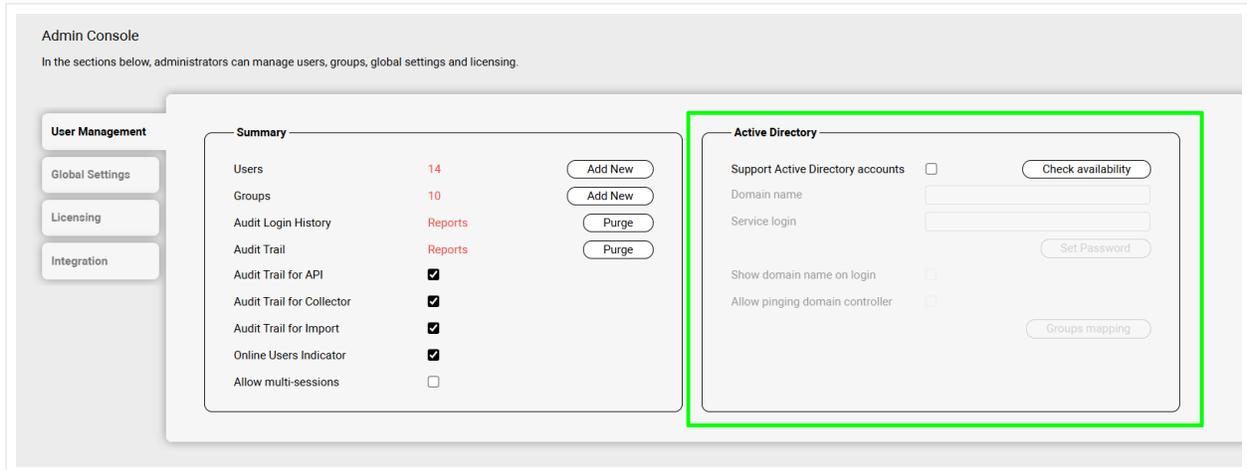

*Active Directory settings (in green)*

To enable Active Directory login, check the 'Support Active Directory accounts' option.

In addition, you need to specify the AD domain name and service login for netTerrain to be able to scan AD accounts correctly.

Please refer to the installation guide for the complete setup of Active Directory.

### 2.5.1 Azure Active Directory

netTerrain supports Azure Active Directory (AAD) for user authentication. Setting AAD up involves some edits in the database and the web.config file.

First, create an app registration in the Azure admin portal. This application ID needs to be added to the settings.xml document OAuth section:

**Web**
Quickstart Docs

### Redirect URIs

The URIs we will accept as destinations when returning authentication responses (tokens) after successfully authenticating or signing out users. The redirect URI you send in the request to the login server should match one listed here. Also referred to as reply URLs. [Learn more about Redirect URIs and their restrictions](#)

This app has implicit grant settings enabled. If you are using any of these URIs in a SPA with MSAL.js 2.0, you should migrate URIs. [→](#)

https://demo.graphicalnetworks.com/demo/	
https://demo.graphicalntetworks.com/demo	

[Add URI](#)

In the web.config file OAuth section add the Application Id, as shown below.

```

<!-- OAuth token auth option. 'true' is for testing. In production
mode set to 'false'! -->

<add key="OAuthAuthenticationAllowInsecureHttp" value="false" />

<!-- Microsoft Open ID authentication parameters. -->

<add key="OpenIdOptionsAuthEnabled" value="false" />

<add key="OpenIdOptionsClientId"
value="392f086b-665b-4646-8369-3a92c7eedd1b" />

<add key="OpenIdOptionsClientSecret" value="" />

<add key="OpenIdOptionsRedirectUrl" value="" />

<add key="OpenIdOptionsTenant" value="" />

<add key="OpenIdOptionsAuthority" value="https://
login.microsoftonline.com/{0}" />

<add key="OpenIdOptionsOAuth2AccessTokenEndpoint" value="/oauth2/
v2.0/token" />
```

Next, find the tenant ID for the application and add this information to the settings.xml file.

Home > App registrations > Eng demo server instance

Search [ ] Delete Endpoints Preview features

Get a second? We would love your feedback on Microsoft identity platform (previously Azure AD for developer). →

Overview

Quickstart

Integration assistant

Manage

Branding & properties

Authentication

Certificates & secrets

Token configuration

API permissions

Expose an API

App roles

Essentials

Display name : Eng demo server instance

Application (client) ID : 392f086b-665b-4646-8369-3a92c7eedd1b

Object ID : f1e57081-9c6f-4090-9abb-b2559654c27

Directory (tenant) ID : 101379fa-7b59-4db1-8945-b88dd265fa3b

supported account types : [www.microsoft.com](#)

Client credentials : 0 certificate, 1 secret

Redirect URIs : 2 web, 0 spa, 0 public client

Application ID URI : [Add an Application ID URI](#)

Managed application in local : Eng demo server instance

Get Started Documentation

Starting June 30th, 2020 we will no longer add any new features to Azure Active Directory Authentication Library (ADAL) and Azure AD Graph. We will continue to provide technical support and security updates but we will no longer provide feature updates. Applications will need to be upgraded to Microsoft Authentication Library (MSAL) and Microsoft Graph. [Learn more](#)

```
<!-- OAuth token auth option. 'true' is for testing. In production
mode set to 'false'! -->
```

```
<add key="OAuthAuthenticationAllowInsecureHttp" value="false" />
```

```
<!-- Microsoft Open ID authentication parameters. -->
```

```
<add key="OpenIdOptionsAuthEnabled" value="false" />
```

```
<add key="OpenIdOptionsClientId"
value="392f086b-665b-4646-8369-3a92c7eedd1b" />
```

```
<add key="OpenIdOptionsClientSecret" value="" />
```

```
<add key="OpenIdOptionsRedirectUrl" value="" />
```

```
<add key="OpenIdOptionsTenant" value="101379fa-7b59-4db1-8945-
b88dd265fa3b" />
```

```
<add key="OpenIdOptionsAuthority" value="https://
login.microsoftonline.com/{0}" />
```

```
<add key="OpenIdOptionsOAuth2AccessTokenEndpoint" value="/oauth2/
v2.0/token" />
```

Next, a redirect URL should be created to match the netTerrain instance URL.

Home > App registrations > Eng demo server instance

## Eng demo server instance | Authentication

Search  Got feedback?

- Overview
- Quickstart
- Integration assistant

Manage

- Branding & properties
- Authentication**
- Certificates & secrets
- Token configuration
- API permissions
- Expose an API

### Platform configurations

Depending on the platform or device this application is targeting, additional configuration may be required such as redirect URIs, specific authentication settings, or fields specific to the platform.

+ Add a platform

Web Quickstart Docs

#### Redirect URIs

The URIs we will accept as destinations when returning authentication responses (tokens) after successfully authenticating or signing out users. The redirect URI you send in the request to the login server should match one listed here. Also referred to as reply URLs. [Learn more about Redirect URIs and their restrictions](#)

<https://eng.graphicalnetworks.com/demo/>

```
<!-- OAuth token auth option. 'true' is for testing. In production mode set to 'false'! -->
```

```
<add key="OAuthAuthenticationAllowInsecureHttp" value="false" />
```

```
<!-- Microsoft Open ID authentication parameters. -->
```

```
<add key="OpenIdOptionsAuthEnabled" value="false" />
```

```
<add key="OpenIdOptionsClientId" value="392f086b-665b-4646-8369-3a92c7eedd1b" />
```

```
<add key="OpenIdOptionsClientSecret" value="" />
```

```
<add key="OpenIdOptionsRedirectUrl" value="https://eng.graphicalnetworks.com/demo/" />
```

```
<add key="OpenIdOptionsTenant" value="101379fa-7b59-4db1-8945-b88dd265fa3b" />
```

```
<add key="OpenIdOptionsAuthority" value="https://login.microsoftonline.com/{0}" />
```

```
<add key="OpenIdOptionsOAuth2AccessTokenEndpoint" value="/oauth2/v2.0/token" />
```

A client secret should be created, and the value needs to be copied and entered into the settings.xml file.

Microsoft Azure | Search resources, services, and docs (G+)

Home > App registrations > Eng demo server instance

## Eng demo server instance | Certificates & secrets

Search < Got feedback?

Overview  
Quickstart  
Integration assistant

Manage

- Branding & properties
- Authentication
- Certificates & secrets**
- Token configuration
- API permissions
- Expose an API
- App roles

Credentials enable confidential applications to identify themselves to the authentication service when receiving tokens at a web addressable location (using an HTTPS scheme). For a higher level of assurance, we recommend using a certificate (instead of a client secret) as a credential.

Application registration certificates, secrets and federated credentials can be found in the tabs below.

Certificates (0) **Client secrets (1)** Federated credentials (0)

A secret string that the application uses to prove its identity when requesting a token. Also can be referred to as application password.

+ New client secret

Description	Expires	Value	Secret ID
engdemo	4/1/2023	Nj*****	16fd9acc-f6e8-444d-b6ad-4025738f2766

```
<!-- OAuth token auth option. 'true' is for testing. In production mode set to 'false'! -->
```

```
<add key="OAuthAuthenticationAllowInsecureHttp" value="false" />
```

```
<!-- Microsoft Open ID authentication parameters. -->
```

```
<add key="OpenIdOptionsAuthEnabled" value="false" />
```

```
<add key="OpenIdOptionsClientId" value="392f086b-665b-4646-8369-3a92c7eedd1b" />
```

```
<add key="OpenIdOptionsClientSecret" value="16fd9acc-f6e8-444d-b6ad-4025738f2766" />
```

```
<add key="OpenIdOptionsRedirectUrl" value="https://eng.graphicalnetworks.com/demo/" />
```

```
<add key="OpenIdOptionsTenant" value="101379fa-7b59-4db1-8945-b88dd265fa3b" />
```

```
<add key="OpenIdOptionsAuthority" value="https://login.microsoftonline.com/{0}" />
```

```
<add key="OpenIdOptionsOAuth2AccessTokenEndpoint" value="/oauth2/v2.0/token" />
```

The "ID tokens" option needs to be enabled within the Azure admin console.

Home > Default Directory | App registrations > Eng demo server instance

## Eng demo server instance | Authentication

Search  Got feedback?

+ Add a platform

### Web

Quickstart Docs

#### Redirect URIs

The URIs we will accept as destinations when returning authentication responses (tokens) after successfully authenticating or signing out users. The redirect URI you send in the request to the login server should match one listed here. Also referred to as reply URLs. [Learn more about Redirect URIs and their restrictions](#)

[Add URI](#)

#### Front-channel logout URL

This is where we send a request to have the application clear the user's session data. This is required for single sign-out to work correctly.

#### Implicit grant and hybrid flows

Request a token directly from the authorization endpoint. If the application has a single-page architecture (SPA) and doesn't use the authorization code flow, or if it invokes a web API via JavaScript, select both access tokens and ID tokens. For ASP.NET Core web apps and other web apps that use hybrid authentication, select only ID tokens. [Learn more about tokens](#).

Select the tokens you would like to be issued by the authorization endpoint:

Access tokens (used for implicit flows)

ID tokens (used for implicit and hybrid flows)

#### Supported account types

Finally, once all the settings are setup and configured your users should have an option to sign in with Microsoft.



## 3 Group Management

netTerrain groups come in two flavors: system groups and custom (or user) created groups. Groups are logical constructs that contain users and share the same roles and diagram permissions.

By inheriting roles and permissions, users can login to netTerrain with the proper credentials.

### 3.1 Security roles and default group types

netTerrain has a security model based on 8 roles: No access, Diagram Read-Only, Read-only, Annotator, Updater, Editor, Power User and Admin. These roles comprise the following permission levels, and each one inherits the permission level from the previous one:

1) No access: this role is mostly used to 'park' users that may not have access to the project but should not be deleted from the database. This role can also be assigned on a per diagram basis, so that users may have no access to certain parts of the project.

2) Diagram Read-Only: users may view data and diagrams, but lack the permission levels to modify, add or remove data from the database or diagrams. Users will not be able to view the object properties or settings.

3) Read-only: users may view data and diagrams, but lack the permission levels to modify, add or remove data from the database or diagrams.

4) Annotator: users can add, edit, and delete their own comments and palette objects. The rest of the data can only be accessed in read-only mode.

5) Updater: users can modify object properties but cannot add new objects, move them on a diagram or delete them from the database.

6) Editor: users that have full permission to make any modifications in the project.

7) Power-User (or catalog managers): in addition to data-entry functionality in the project, power users can manage the catalog.

8) Admin: these users have the highest permission level and full access to the system. They can create new users and groups as well as run audit trail reports and change global settings.

Based on these 8 roles, netTerrain has 8 pre-built system groups that cannot be deleted plus a 'NotDefined' system group. This group is mainly for internal usage but may be used for parked users as well.

Groups				
	<a href="#">To csv</a>	<a href="#">To Excel</a>	<a href="#">Add New</a>	
Filter	<input type="text"/>	<a href="#">Apply</a>	<a href="#">Clear</a>	
#	Name ▲	Role	Users	Exceptions
1	<input type="text" value="Admin"/>	<input type="text" value="Admin"/>	11	
2	<input type="text" value="Annotator"/>	<input type="text" value="Annotator"/>	0	
3	<input type="text" value="DiagramReadOnly"/>	<input type="text" value="Diagram Read Only"/>	0	
4	<input type="text" value="Edit"/>	<input type="text" value="Edit"/>	0	
5	<input type="text" value="NoAccess"/>	<input type="text" value="No Access"/>	1	
6	 <input type="text" value="North Campus"/>	<input type="text" value="Edit"/> ▼	1	Exceptions
7	<input type="text" value="NotDefined"/>	<input type="text" value="No Access"/>	0	
8	<input type="text" value="PowerUser"/>	<input type="text" value="Power User"/>	0	
9	<input type="text" value="ReadOnly"/>	<input type="text" value="Read Only"/>	1	
10	<input type="text" value="Updater"/>	<input type="text" value="Updater"/>	0	


1 out of 1 < > 1 Go

List of netTerrain system groups (grayed out) and one custom group

As explained previously, netTerrain supports Active Directory (AD) so that groups defined in AD can be synchronized with netTerrain group roles.

### 3.2 Group table

Just as with users, the admin console also has a group table to aid the tasks of group management. To view existing netTerrain groups, select the group link from the admin console page, as depicted below.

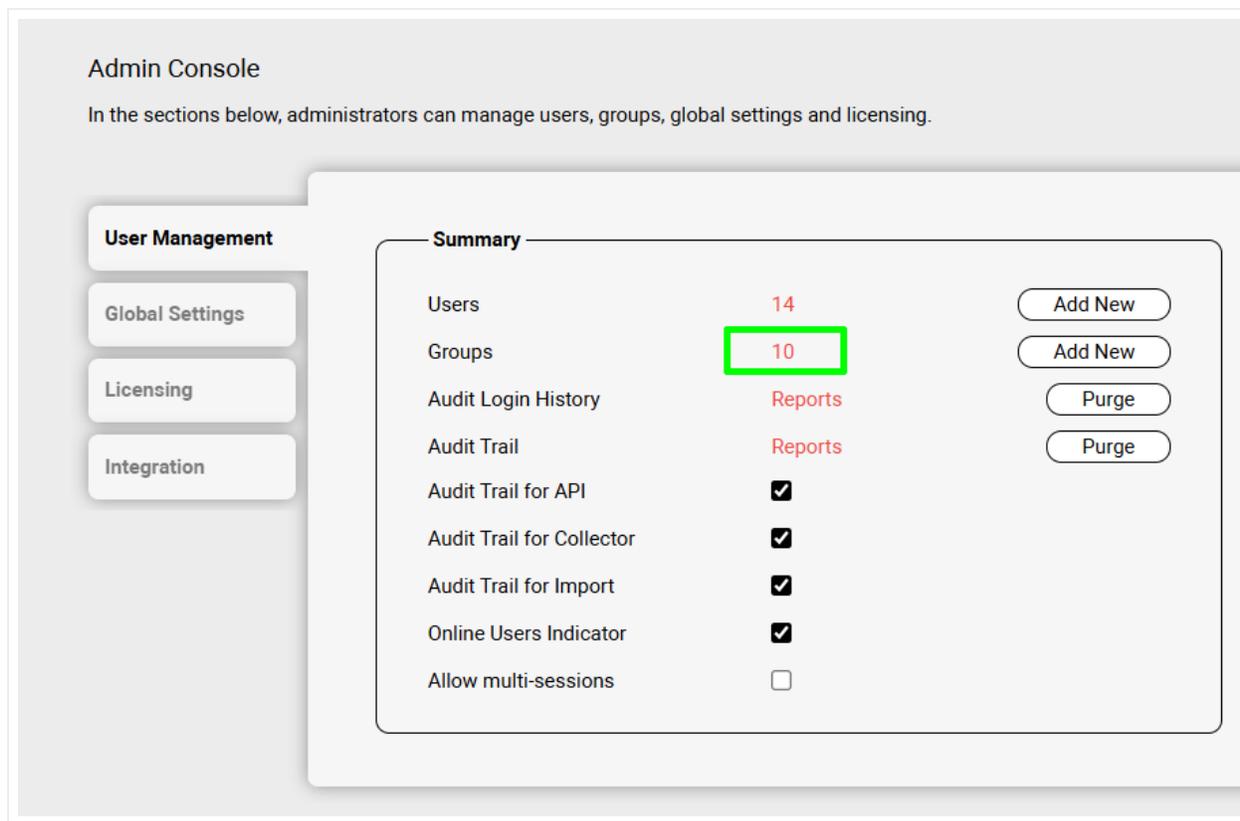

### Accessing the group table

A group table view will be depicted, showing the already familiar options for sorting, exporting to csv, filtering and deleting groups. Note that system groups cannot be deleted.

## 3.3 Custom groups

In the netTerrain security model, users are always assigned a group, whether this is done manually, or through AD group mapping. New groups can be created so that users can be assigned to those new groups, instead of just relying on the system groups. When creating a new group, a default role is assigned to it. This role can be overridden later on a per diagram basis.

For small deployments, having one group per role will suffice. Deployments that consist of several departments with overlapping roles may require the creation of multiple groups with the same role level. For

example, a large company with a purchasing, a NOC, and an engineering department (each with at least one user per role), may require the creation of the following groups assigned to the following access levels:

- Purchasing RO: read-only viewers in the purchasing department
- Purchasing DE: data-entry viewers in the purchasing department
- Purchasing PU: power users in the purchasing department
- Purchasing Admin: administrator for the purchasing department
- NOC RO: read-only viewers in the NOC department
- NOC DE: data-entry viewers in the NOC department
- NOC PU: power users in the NOC department
- NOC Admin: administrator for the NOC department
- Engineering RO: read-only viewers in the engineering department
- Engineering DE: data-entry viewers in the engineering department
- Engineering PU: power users in the Engineering department
- Engineering Admin: administrator for the engineering department

### 3.3.1 Creating new groups

Creating new groups is a simple task. From the admin console page, select the 'Add New' button in the group row.

The screenshot displays the 'User Management' admin console interface. On the left, there is a sidebar with navigation buttons for 'User Management', 'Global Settings', 'Licensing', and 'Integration'. The main content area is titled 'Summary' and contains a table with the following data:

Category	Count	Action
Users	14	Add New
Groups	10	Add New
Audit Login History	Reports	Purge
Audit Trail		Purge
Audit Trail for API		
Audit Trail for Collect		
Audit Trail for Import		
Online Users Indicate		
Allow multi-sessions		

An 'Add Group' dialog box is open in the foreground, featuring the following fields and buttons:

- Name:** A text input field containing 'My\_group'.
- Role:** A dropdown menu currently set to 'No Access'.
- Buttons:** 'Submit' and 'Cancel' buttons at the bottom.

The 'Add New' button for the 'Groups' row in the background table is highlighted with a green rectangular box.

## Adding a group


The group form includes two fields:

- 1) Name: the name of the group being created. Try to name these groups in a way that they describe the default role. That way, it will be easier to associate users with it later. The name can have leading and trailing whitespaces.
- 2) Role: this is the default (and highest) level of access for this group. When overriding permissions on a per diagram basis, the role will be equal or lower than the default.

### 3.3.2 Adding users from the groups table

Users can be added to a specific group directly from the groups table. Notice that for any group, a user counter link is provided. This link shows the count of all the users assigned to that group and provides a shortcut to the users table filtered by that group.

To add a user to a specific group simply click on the user counter link, and then from the filtered user view click on the 'Add New' button and proceed to add the user just as described in the previous chapter.

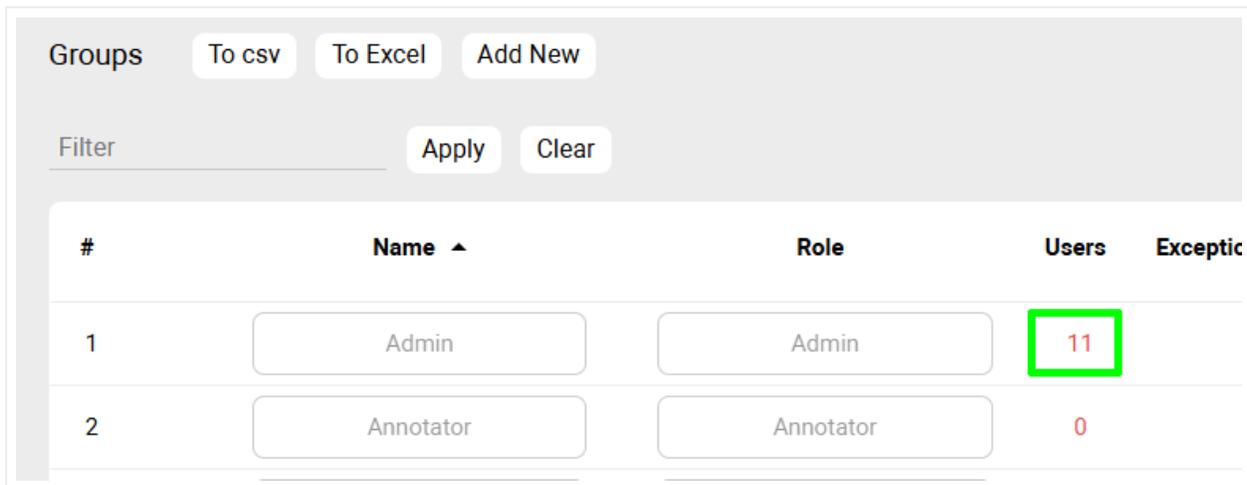

The screenshot shows a web interface for managing groups. At the top, there are buttons for 'To csv', 'To Excel', and 'Add New'. Below these is a 'Filter' input field with 'Apply' and 'Clear' buttons. The main content is a table with columns: '#', 'Name', 'Role', 'Users', and 'Exceptio'. The first row shows group #1 with Name 'Admin', Role 'Admin', and a 'Users' counter of 11 (highlighted with a green box). The second row shows group #2 with Name 'Annotator', Role 'Annotator', and a 'Users' counter of 0.

#	Name ▲	Role	Users	Exceptio
1	Admin	Admin	11	
2	Annotator	Annotator	0	

*User counter link shortcut to filtered users table*

### 3.3.3 Configuring Azure Active Directory roles

netTerrain administrators can configure Azure Active Directory roles through the Azure AD application settings following these steps:

1. Go to your application and select the "Create App roles" option

Home > App registrations > demo.graphicalnetworks.com/demo

demo.graphicalnetworks.com/demo | App roles

Search << + Create app role | Got feedback?

Overview  
Quickstart  
Integration assistant

Manage

- Branding & properties
- Authentication
- Certificates & secrets
- Token configuration
- API permissions
- Expose an API
- App roles

### App roles

App roles are custom roles to assign permissions to users or apps. The application defines and publishes the app roles and interprets them as permissions during authorization.

[How do I assign App roles](#)

Display name	Description	Allowed member types	Value	ID	State
Admin	Admin group for netTerrain	Users/Groups	Admin	aa8aaaff-1c98-4b68-...	Enabled

1. Create new app roles in Azure Active Directory matching a group type in netTerrain, such as the "Edit" and "ReadOnly" group types:

# Create app role

Display name \* ⓘ

Edit

Allowed member types \* ⓘ

- Users/Groups
- Applications
- Both (Users/Groups + Applications)

Value \* ⓘ

Edit

Description \* ⓘ

Editor user in netTerrain

Do you want to enable this app role? ⓘ



Apply

Cancel

## Create app role ✕

Display name \* ⓘ

 ✓

Allowed member types \* ⓘ

Users/Groups

Applications

Both (Users/Groups + Applications)

Value \* ⓘ

 ✓

Description \* ⓘ

Do you want to enable this app role? ⓘ

1. Click on the Enterprise Applications section:

**Enterprise applications | All applications** ...

Graphical Networks - Microsoft Entra ID for workforce

« + New application Refresh Download (Export) | i

**Overview**

- Overview
- Diagnose and solve problems

**Manage**

- All applications
- Application proxy
- User settings

View, filter, and search applications in your organization that are set up for your organization.

The list of applications that are maintained by your organization are in the following table.

demo.graphicalnetworks.com/demo Application type

5 applications found

Name	
DE demo.graphicalnetworks.com/demo	

1. Select 'Users and groups':

**demo.graphicalnetworks.com**  
Enterprise Application

«

**Overview**

- Overview
- Deployment Plan
- Diagnose and solve problems

**Manage**

- Properties
- Owners
- Roles and administrators
- Users and groups

**Properties**

DE

Nar

de

App


ae

Obj

84

**Getting Started**

1. Select 'add user/groups':

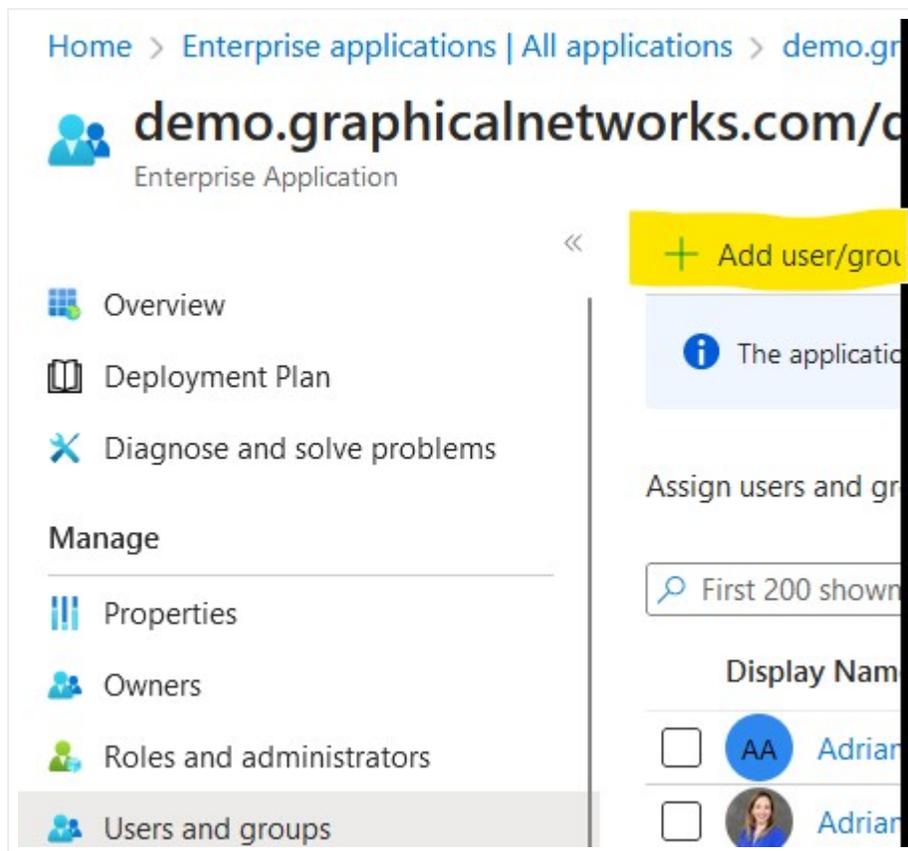

1. Select the role and users:



1. Finally select the role and then the users and press the "Assign" button:

## Add Assignment ...

Graphical Networks

Users and groups

1 user selected.

Select a role \*

ReadOnly

### 3.4 Managing group exceptions

Group exceptions are a feature available for custom groups. Each of them can have a set of exceptions, which override the default access to a particular diagram. Consider this scenario for a given group:

- Root diagram A: we want to grant users of this group editor access.
- Root diagram B: we want to grant users read-only access.
- Root diagram C: we want to grant them no access.

In this case, we should use a group with its default role being an editor, and then create two exceptions for diagrams b and c. Note the following rules when creating exceptions:

- 1) Exceptions can only have permission levels equal or less than the default access role.
- 2) If an exception is created for a certain diagram, it will be deleted if the diagram is deleted.
- 3) By default, all children of a certain diagram that is in an exception list, inherit the exception for that group.
- 4) Exceptions can only be assigned to custom groups.

To add an exception to a group, select the exceptions link on the groups table.


Groups To csv To Excel Add New

Filter Apply Clear

#	Name ▲	Role	Users	Exceptions
1	Admin	Admin	11	
2	Annotator	Annotator	0	
3	DiagramReadOnly	Diagram Read Only	0	
4	Edit	Edit	0	
5	NoAccess	No Access	1	
6 	North Campus	Edit ▼	1	<a href="#">Exceptions</a>
7	NotDefined	No Access	0	

*Accessing the exceptions tree*

This link will bring up the project hierarchy, which, upon right click on any leaf in the tree, provides the ability to override the permission to that diagram:

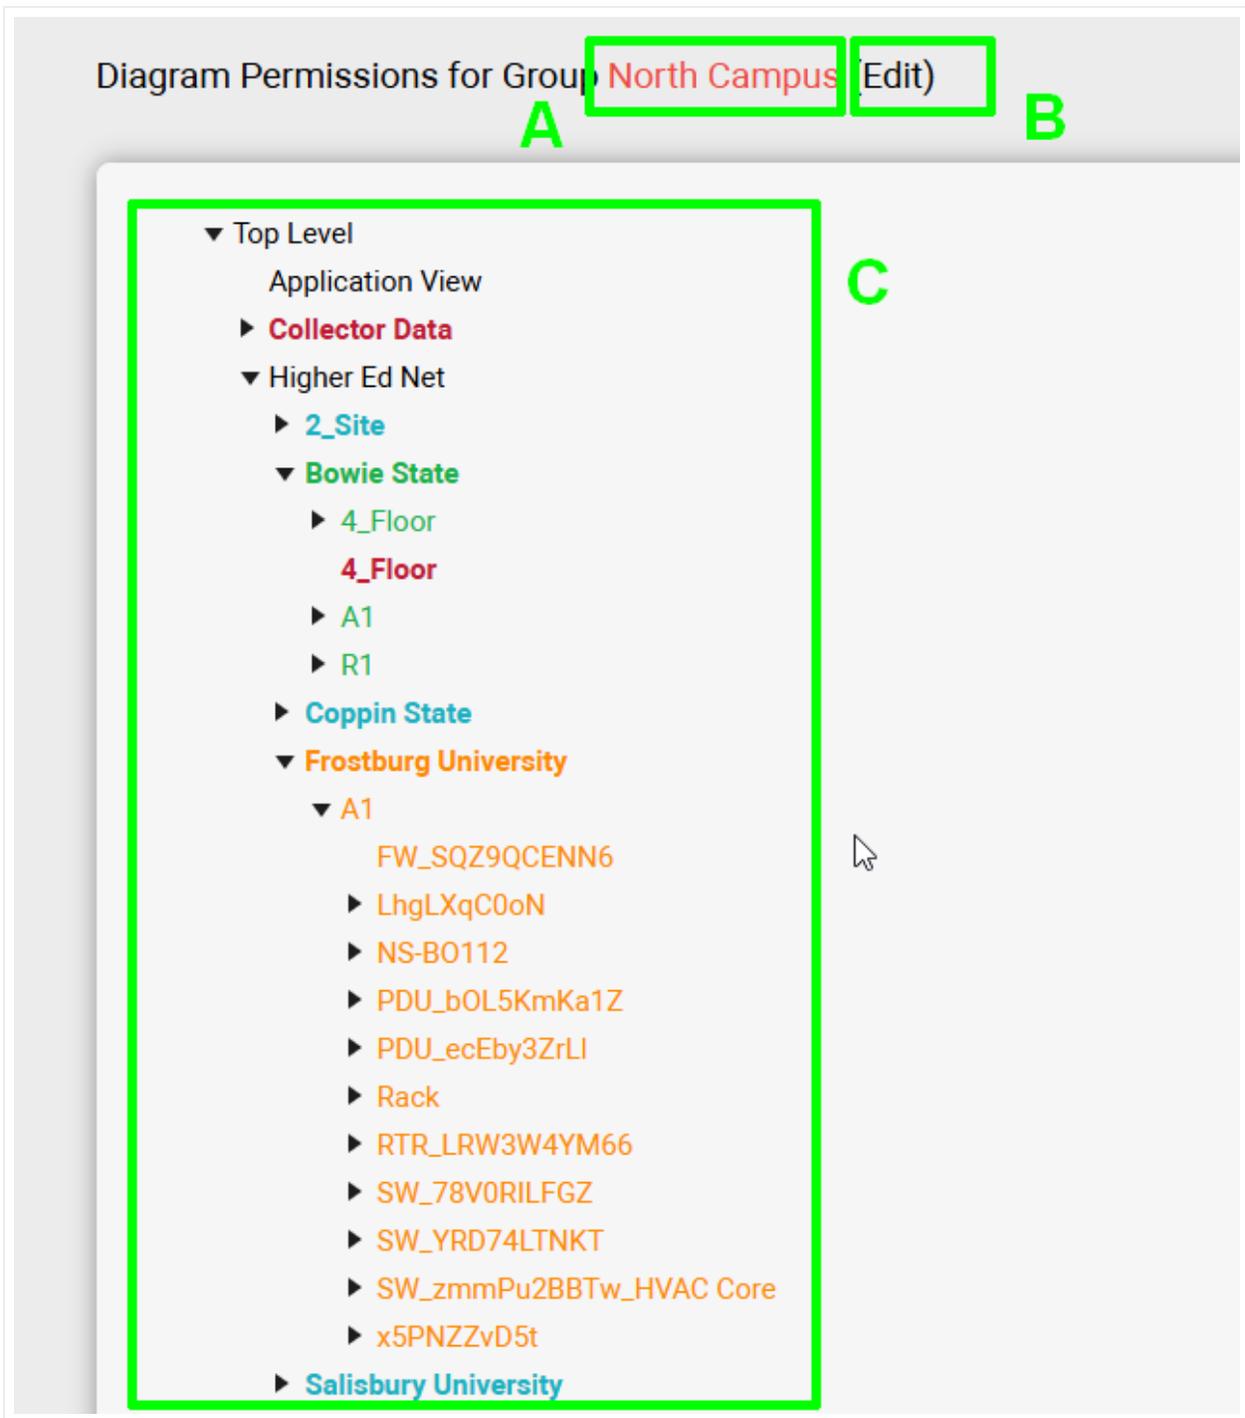

### Diagram exceptions


Note the following elements in this view:

- The name of the group where exceptions are being placed.
- Default role of the group.

c) netTerrain project hierarchy.

Once an exception is assigned to a node in the hierarchy via mouse right-click, that node, and all children underneath will override the permission level to the one selected from the right click context menu, using the following color coding:

- Dark Red: No access to diagram.
- Orange: Diagram Read-only access.
- Olive: Read-only access.
- Green: Annotator access.
- Light Blue: Updater access.
- Black: Edit rights (essentially not overridden).

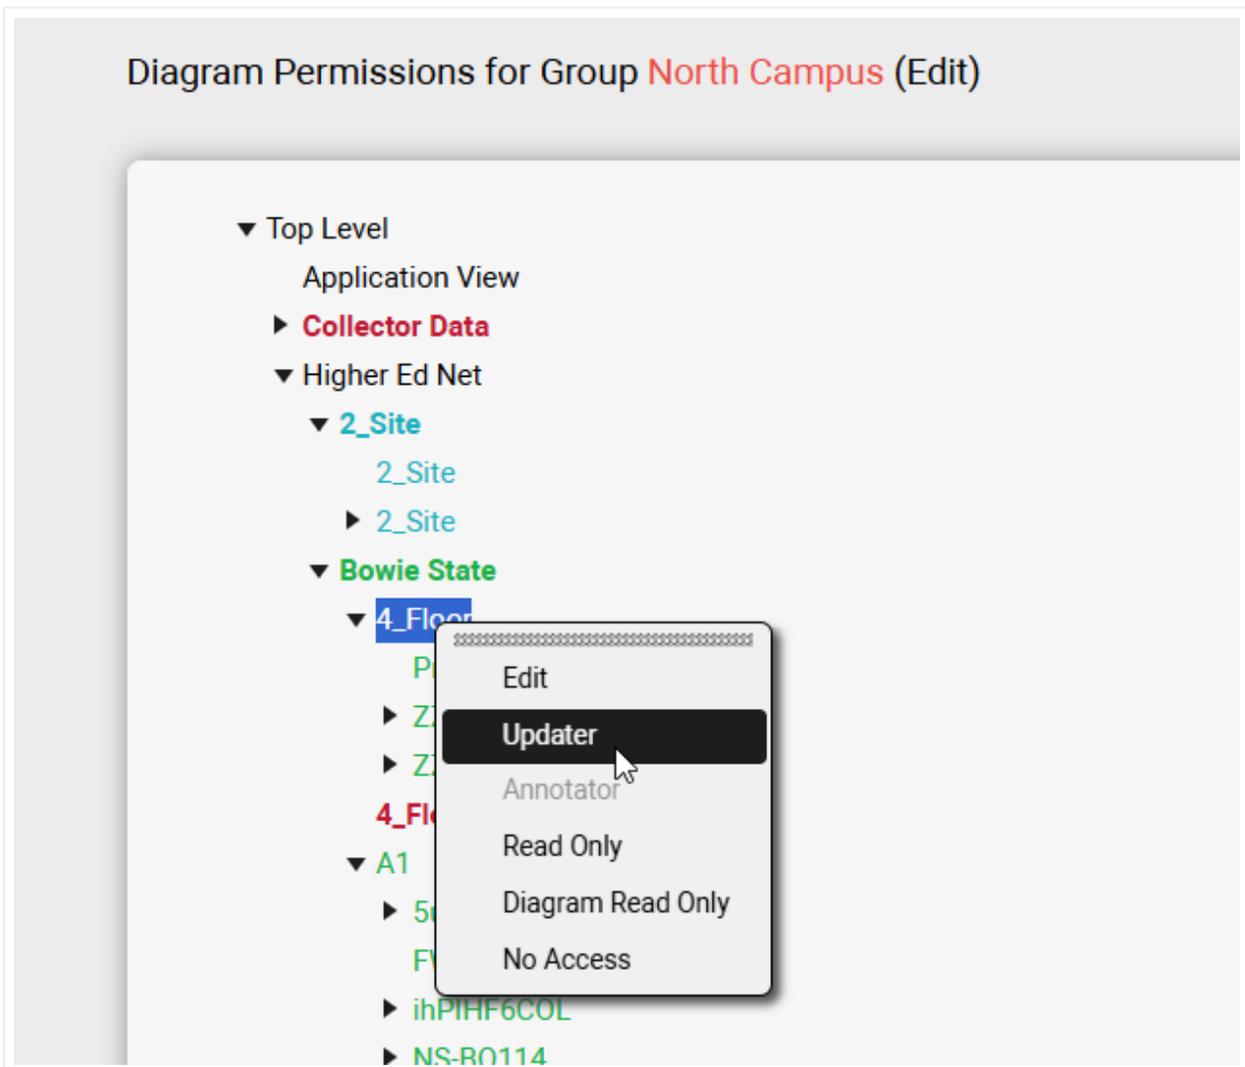


*Assigning permissions on a per diagram basis*

What about the Power-user and admin rights for exceptions? You may be wondering why those are not shown in the list of options for exceptions. Exceptions are used to control access to project diagrams, and in the context of a diagram, there is no higher permission level than an editor. As far as diagram access goes, an editor has the same permission level as a power-user or an admin.

### 3.4.1 Removing restrictions for a group

To remove existing exceptions or restrictions from a group, you can right click on the top-level and click on the Remove All Restrictions context menu. There is no undo for this option, so use carefully.

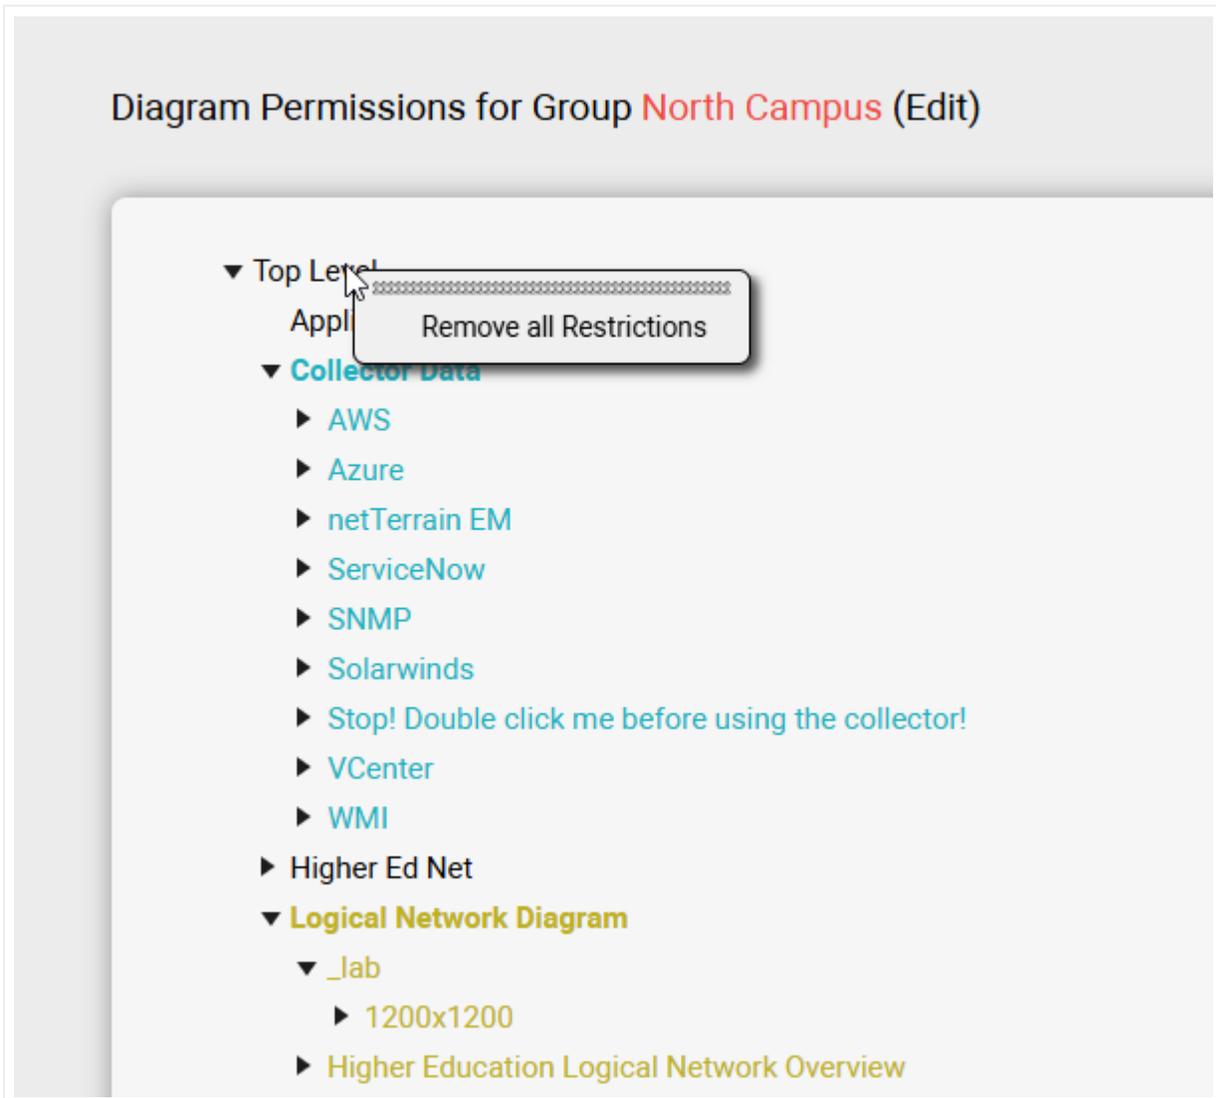


*Removing all diagram restrictions*

# 4 Global Settings

The netTerrain admin console includes a 'Global Settings' section to manage certain aspects of the user interface and licensing. These settings impact the entire netTerrain project. The global settings are broken up into four sub-sections:

- 1) Result Sets: settings for how tables in netTerrain should be displayed.
- 2) Email Notification Settings
- 3) Page Setup: settings for how netTerrain should display pages.
- 4) API Settings
- 5) Other: miscellaneous settings and importer settings.
- 6) License Info

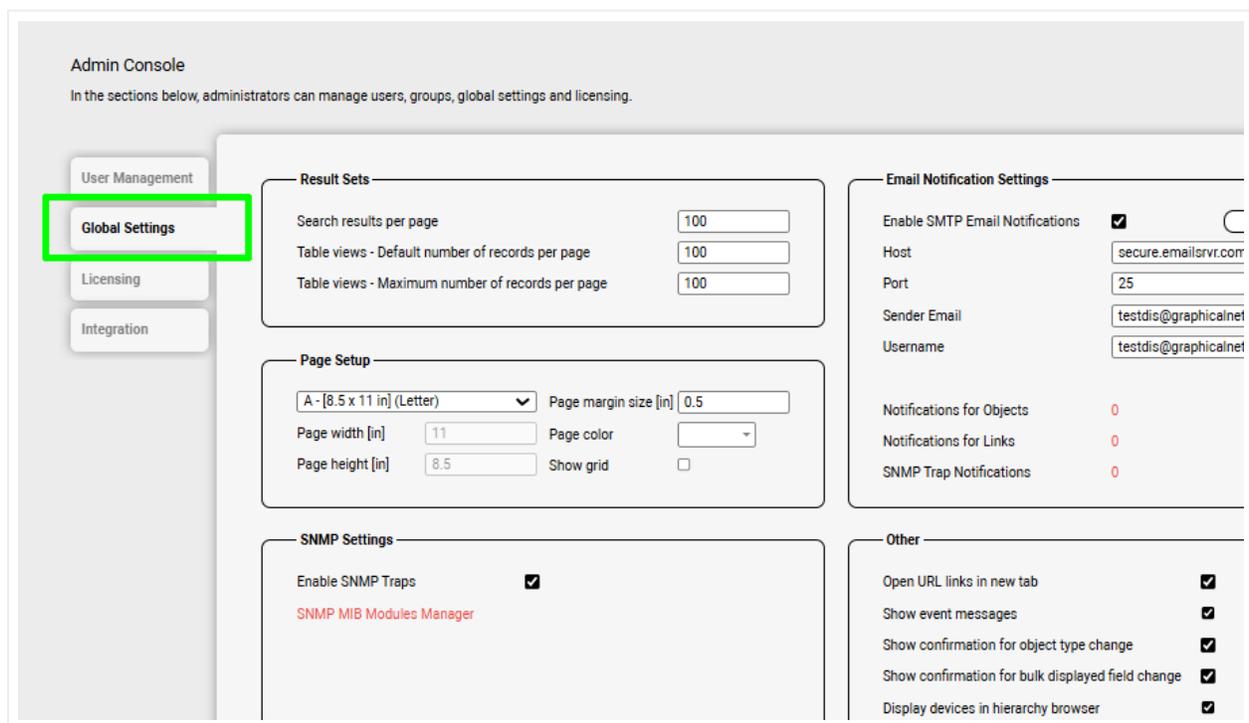

Global Settings page

## 4.1 Result sets

The 'result sets' sub section in global settings provides the ability to set the default number of records displayed on tables and search results.

- 1) Search results per page: limits the number of records displayed on a given page when using the search feature. The default setting is 100.
- 2) Table views default per page: sets the default number of records displayed for a given page. The default setting is also 100.
- 3) Table views max records per page: limits users from requesting a set of records greater than the value on a given page, with a default setting of 100.

#### **Attention!**

Note that increasing the values can cause longer load times for table pages. It can also be a good excuse to increase those trips to the coffee machine.

## **4.2 Notifications**

netTerrain can send email and SMS notifications to users when certain changes occur in the project. This feature is akin to the concept of visual overrides: when a property for a certain object type changes to a certain value, a user or group of users can receive an email. For example, the administrator can set up a rule that whenever the status of a room changes to “decommission”, the Data Center Manager receives an email. This behavior is defined in the Notifications Settings section.

To enable email notifications, first make sure the option is checked:

### Email Notification Settings

Enable SMTP Email Notifications  Check availability

Host

Port

Sender Email

Username  Set Password

Notifications for Objects 0

Notifications for Links 0


SNMP Trap Notifications 0

#### *Enabling email notifications*

Once notifications are enabled, proceed to set up the email account information, including:

- The email server host name.
- The port number (usually 25).
- Email, user and password for the sender email account.
- Notifications for objects, links and SNMP traps.

You can create email notifications for node objects as well as links and traps. Click on the number next to the category (say, Objects) and create a new object notification:

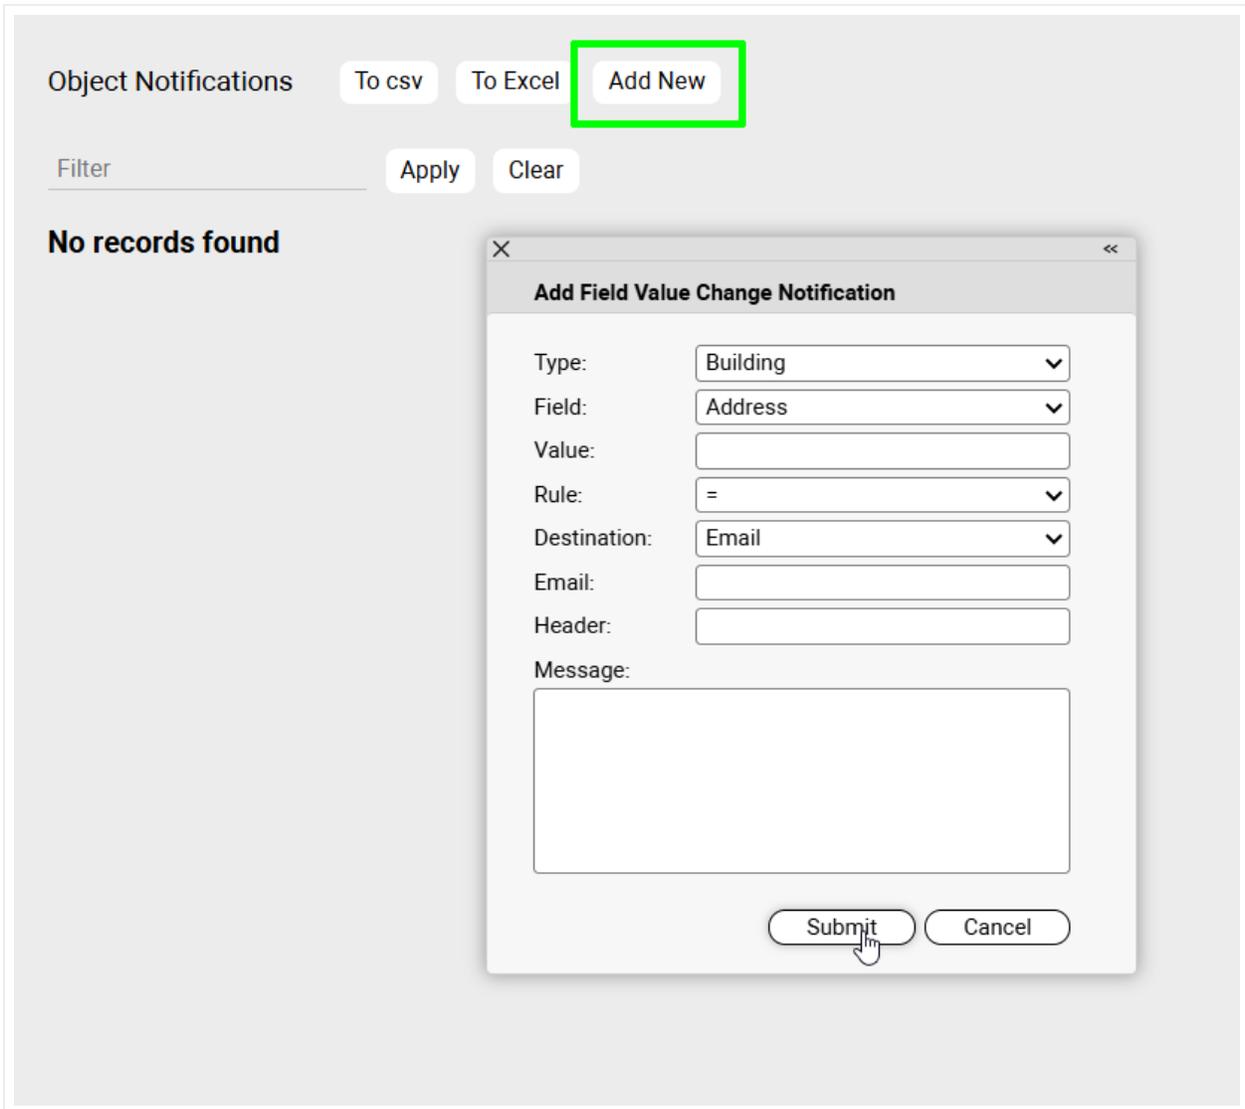

#### *New notifications dialog*

The notifications dialog first lets you pick which object type you want notifications to be triggered for. Then you pick the field and value along with the rule. As a next step you pick whether you want email or SMS notifications for that trigger.

For email notifications you can choose an email header and a message. If you want more than one recipient for the email, separate the email addresses with commas.

### **4.3 Page Setup**

The page setup area is used to determine default settings for new diagrams created in netTerrain. These settings include:

- 1) Page Size (standard options)
- 2) Page width
- 3) Page height
- 4) Page Margin
- 5) Page color
- 6) Grid

Notice that while the Page Size value is set to some standard size, the width and height options are greyed out. If the specific size you want is not available in a standard option, simply choose the custom option which then enables you to customize the height and width to your liking for any new pages generated in netTerrain.

Also notice that page sizes can be overridden in the project on a per page basis.

### 4.3.1 Default page size and margins

You can set the default page width, height and margins from this section of the admin console. All these settings are determined in inches. If you change any value, existing diagrams will not be changed, these settings only work as defaults for newly created diagrams.

### 4.3.2 Default page color

The page color opens the color dialog and lets you define the default background color a page should have when it is newly created.

**Page Setup**

A - [8.5 x 11 in] (Letter) Page margin size [in] 0.5

Page width [in] 11 Page color

Page height [in] 8.5 Show grid

**API Settings**

Enable RESTful API

Enable OAuth HTTP (insecure)

User Tokens Reports

Hex #ffffff

*Setting the default page background color*

### 4.3.3 Default grid settings

As with the other settings, you can specify the default grid settings for newly created diagrams. When this setting is checked, any new diagram created in netTerrain will display the grid by default.

**Tip:**

All size related values in these dialogs are assumed to be in inches. If you want to use floating numbers, use a dot to determine the fractional part of the number, such as '11.5'.

## 4.4 API Settings

If you want your end users to be able to leverage the netTerrain RESTful API, then make sure you check the Enable RESTful API checkbox. Once this option is checked, end user can try out REST commands directly from the Swagger documentation available from the Help ribbon. In addition in this section, the admin can set up user tokens and manage HMAC authentication for access. An additional specific API setting is the ability choose how to retrieve lat/long coordinates.

### API Settings

Enable RESTful API

Enable OAuth HTTP (insecure)

User Tokens

Lat/long for node map coords in API:

Reports

Manage HMAC authentication

## 4.5 Miscellaneous Settings

Any miscellaneous settings that are not included in the first two sub sections can be managed from here.

### Other

Open URL links in new tab <input checked="" type="checkbox"/>	netViz import <input checked="" type="checkbox"/>
Show event messages <input checked="" type="checkbox"/>	Visio import <input checked="" type="checkbox"/>
Show confirmation for object type change <input checked="" type="checkbox"/>	Visio export <input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change <input checked="" type="checkbox"/>	Excel import <input checked="" type="checkbox"/>
Display devices in hierarchy browser <input checked="" type="checkbox"/>	PDF export <input checked="" type="checkbox"/>
Display vendor categories in catalog <input type="checkbox"/>	KML import <input checked="" type="checkbox"/>
Turn on 'Thought of the day' <input checked="" type="checkbox"/>	KML export <input checked="" type="checkbox"/>
Enable IP toolset <input checked="" type="checkbox"/>	ArcGIS import <input checked="" type="checkbox"/>
Enable Predefined Device Overrides <input checked="" type="checkbox"/>	Static export <input checked="" type="checkbox"/>
<span style="border: 1px solid #ccc; border-radius: 15px; padding: 2px 10px; display: inline-block;">Change Logo Image</span>	Collector <input checked="" type="checkbox"/>
	Render exports from server <input type="checkbox"/>
Show small object markers in static diagrams <input type="checkbox"/>	Go up effect <input type="text" value="Show blinking rectangle"/>
Show small object markers in dynamic maps <input type="checkbox"/>	Objects with pending add tasks shown <input type="text" value="Outline Mode"/>
Consolidate bend points in static diagrams <input checked="" type="checkbox"/>	Objects with pending delete tasks shown <input type="text" value="Outline Mode"/>
Consolidate bend points in dynamic maps <input type="checkbox"/>	Default Font family <input type="text" value="Roboto"/>
Object blink count <input type="text" value="5"/>	Date format <input type="text" value="MM-dd-yyyy"/>
Show on diagram effect <input type="text" value="Show blinking rectangle"/>	Use 24 hour time format <input type="checkbox"/>

*Other Admin Settings*

## 4.5.1 Open URL links in new window


This setting controls the mode by which hyperlinks are treated. Hyperlinks (URLs) can either open in a new window or in the current netTerrain window.

The screenshot shows the 'Other' settings section in netTerrain. The 'Open URL links in new tab' checkbox is checked and highlighted with a green border. Other settings include checkboxes for 'Show event messages', 'Show confirmation for object type change', 'Show confirmation for bulk displayed field change', 'Display devices in hierarchy browser', 'Display vendor categories in catalog', 'Turn on 'Thought of the day'', 'Enable IP toolset', and 'Enable Predefined Device Overrides'. There is also a 'Change Logo Image' button. The right side of the settings includes options for imports and exports (netViz, Visio, Excel, PDF, KML, ArcGIS, Static, Collector), 'Render exports from server', 'Go up effect', 'Objects with pending add/delete tasks shown', 'Default Font family', 'Date format', and 'Use 24 hour time format'. Several settings on the right are controlled by dropdown menus: 'Show blinking rectangle', 'Outline Mode', 'Roboto', and 'MM-dd-yyyy'.

*Open URL links in new window setting*

## 4.5.2 Show event messages

This setting controls the enabling or disabling of user triggered database operation notifications. These event messages are the green dialogs that pop up on the bottom right corner after a database operation has been triggered by the user.

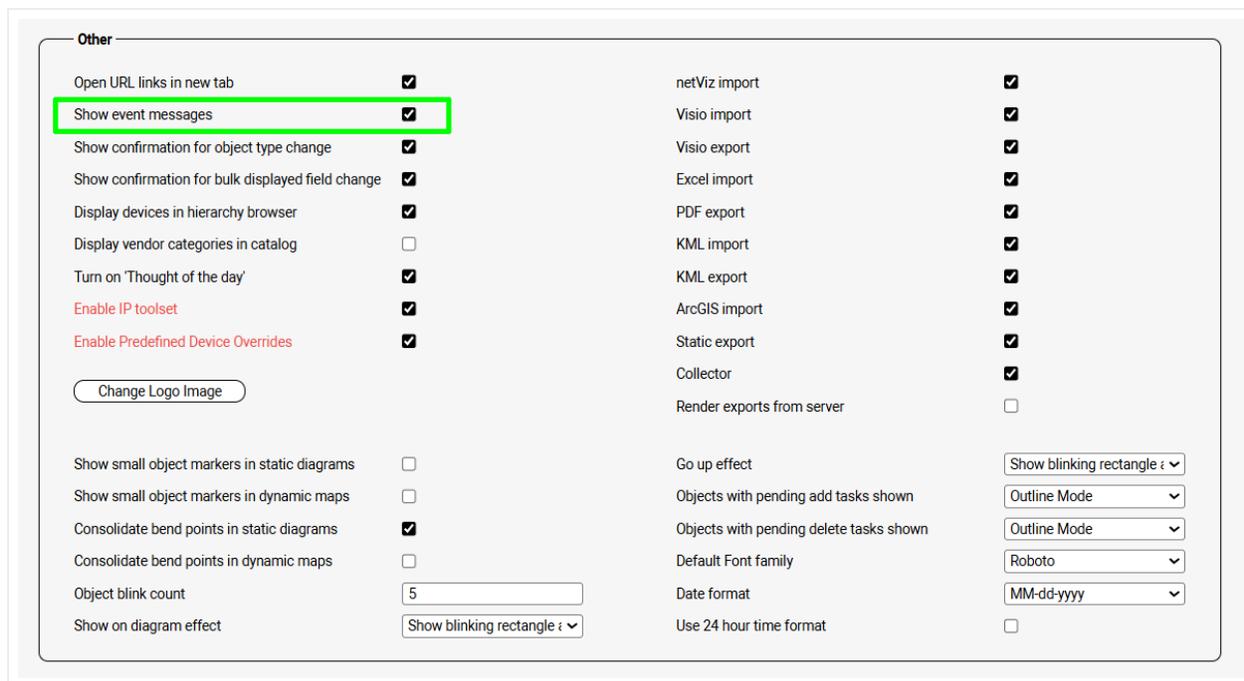

### Show event messages setting

If you get complaints from users about these notifications being too frequent or annoying, it may be time to turn them off here.

## 4.5.3 Show confirmation for object type change

When this setting is checked, every time a user is about to change the type of an instance, a dialog requesting confirmation of that action appears. The idea behind this confirmation is to warn users about this operation that does not have an undo action. Once your users become very proficient in netTerrain and savvy about the day-to-day documentation you may consider turning this setting off.

Other			
Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="checkbox"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="checkbox"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="checkbox"/>
Show on diagram effect	Show blinking rectangle <input type="checkbox"/>	Use 24 hour time format	<input type="checkbox"/>

*Show confirmation for object type change setting*

#### 4.5.4 Show confirmation for bulk displayed field change

When this setting is checked, every time a user is about to apply the changes to a displayed field for all instances of that type, a dialog requesting confirmation of that action appears. Same as above, the idea behind this confirmation is to warn users about an operation that does not have an undo action. In the same vein as the previous warning, once your users become very proficient in netTerrain and savvy about the day-to-day documentation you may also consider turning this setting off.

Other			
Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="checkbox"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="checkbox"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="checkbox"/>
Show on diagram effect	Show blinking rectangle <input type="checkbox"/>	Use 24 hour time format	<input type="checkbox"/>

Show confirmation for bulk displayed field change setting

## 4.5.5 Display Devices in hierarchy Browser

By default, netTerrain will not display a device in the hierarchy browser unless the device has been double clicked. If this setting is enabled, all devices will be displayed in the hierarchy browser.

Other			
Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="checkbox"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="checkbox"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="checkbox"/>
Show on diagram effect	Show blinking rectangle <input type="checkbox"/>	Use 24 hour time format	<input type="checkbox"/>

## 4.5.6 Vendor Categories

This is a cool feature that enables or disables vendor categories in the catalog pane on the project side: If you prefer to work with your own categories and think that a long list of vendors in the categories drop-down box is intrusive, we recommend disabling this here.

The screenshot shows the 'Other' settings panel with various options. The 'Display vendor categories in catalog' option is highlighted with a green box and is currently unchecked. Other options include 'Open URL links in new tab', 'Show event messages', 'Show confirmation for object type change', 'Show confirmation for bulk displayed field change', 'Display devices in hierarchy browser', 'Turn on Thought of the day', 'Enable IP toolset', 'Enable Predefined Device Overrides', 'netViz import', 'Visio import', 'Visio export', 'Excel import', 'PDF export', 'KML import', 'KML export', 'ArcGIS import', 'Static export', 'Collector', 'Render exports from server', 'Show small object markers in static diagrams', 'Show small object markers in dynamic maps', 'Consolidate bend points in static diagrams', 'Consolidate bend points in dynamic maps', 'Object blink count', 'Show on diagram effect', 'Go up effect', 'Objects with pending add tasks shown', 'Objects with pending delete tasks shown', 'Default Font family', 'Date format', and 'Use 24 hour time format'.


Enabling the vendor categories option in the catalog

## 4.5.7 'Thought of the Day'

As one of our world-famous quotes say, "Mix a little foolishness with your serious plans: it's lovely to be silly at the right moment." We take that foolish advice very seriously, so we add a bit of sizzle to your netTerrain experience by providing some funny quotes every time you log in. Well, at least we think they are funny.


TotD quotes are stored in a text file and netTerrain pulls them randomly as display pop up messages each time a user logs onto the system (unless they re-login on a diagram that is not the top level). The quote is displayed for a few seconds after the user logs on.

The thought of the day file is in the "Vis" folder on the netTerrain application server. The file is called "ThoughtOfTheDay.txt" and this name can be changed from the web.config file. Want to add your own quotes? Just open the TotD file and edit it with your favorite text editor.

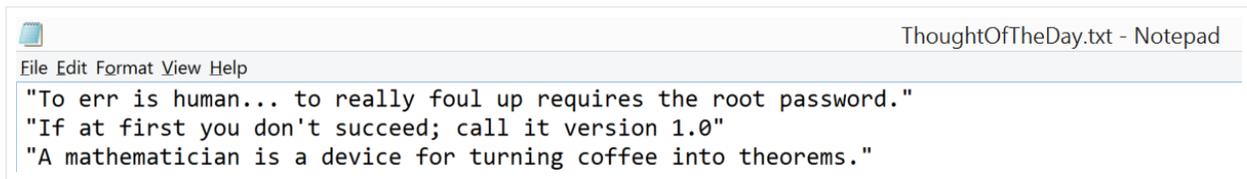

Thought of the day text file


In the extremely unlikely event that you find this feature annoying, we'll let you turn it off from the admin console, as displayed below. Please call us so we can also recommend you to a good spot to go rest for three months for a much-needed vacation.

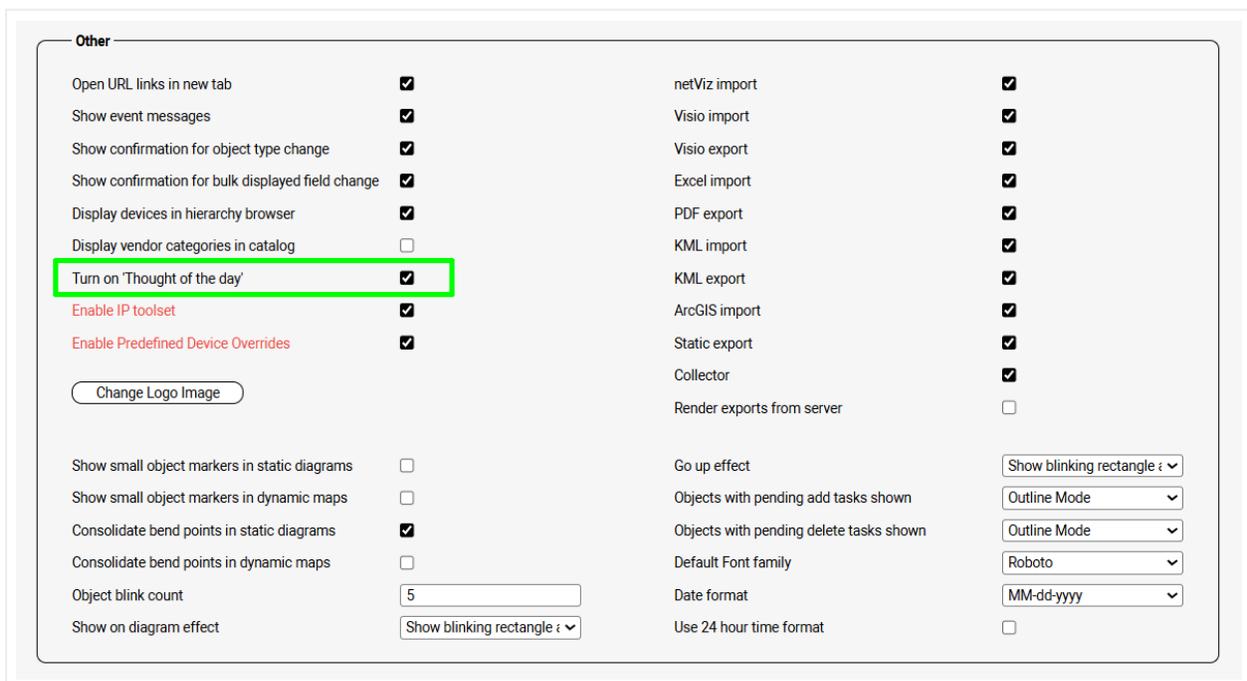

Thought of the day setting

## 4.5.8 IP Toolset

The enable IP toolset option controls the activation or deactivation of IP address-based programs executed from a client machine. When checked, this option will enable any programs that are configured in the IP Toolset Apps section (depicted below).

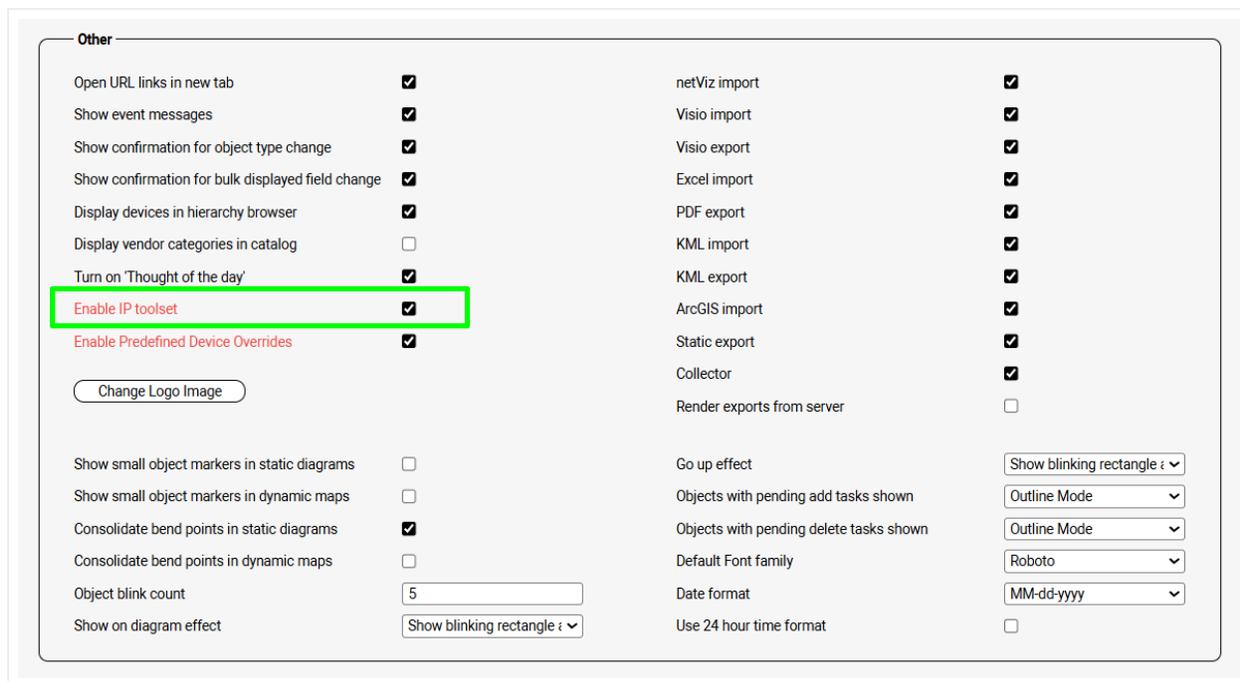


### IP toolset setting

These programs only work on a client machine if the IP toolset application has been installed on that machine. Also, these programs must exist in the client machine, since the activation is client based (browsers themselves cannot allow the execution of client programs for security reasons).

Any clients that need to utilize this feature must run the IP toolset installer on their machine. To get the toolset installer, the user can download it from the Tools->Utilities menu.

As can be seen from the screenshot below, this option provides a link to a table containing all the programs that the administrator configures.

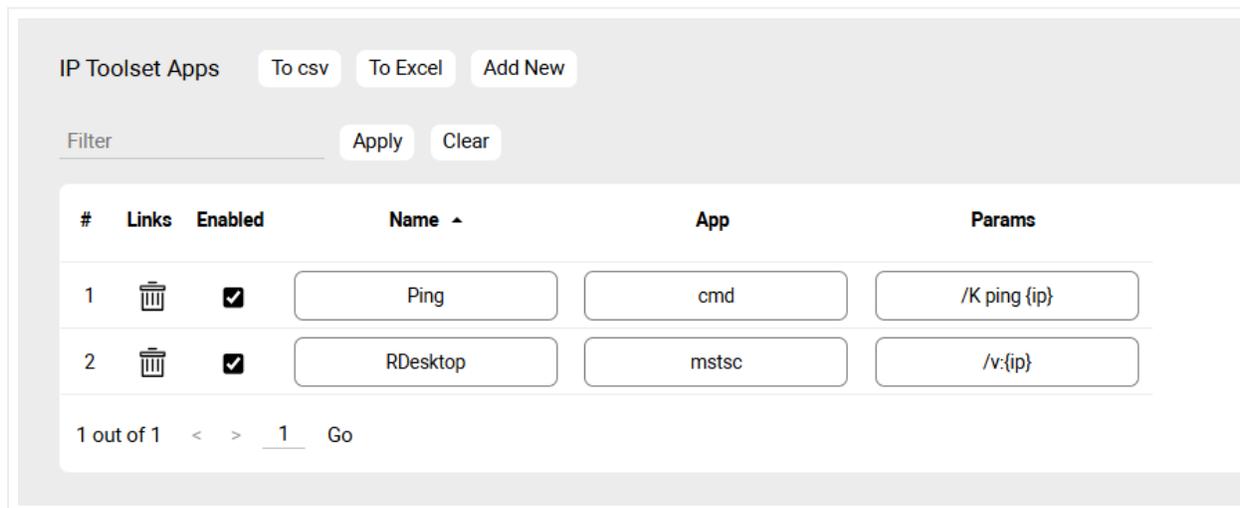


## IP Toolset App list

Any number of applications can be configured by an administrator and if the IP Toolset is enabled they will show up for any user (regardless of whether they have the app installed on the client machine or not) as a context menu list when clicking on a free text, displayed field or property value that has the format of an IP address.

To add a new application, proceed as follows:

- 1) Click on the Add new button.
- 2) Type in the Application name, as you want it to appear for end users.
- 3) Fill out the appropriate information in the application "App" field. Note that because this is a server-side setting, the server cannot possibly know where each client has the corresponding application installed. As such, only applications that can be executed directly from the windows start->run dialog using the same 'App' descriptor will work. For example, the telnet app will only work for every client in the organization, if every one of them can also launch the telnet app directly from their windows start->run dialog using the same string as the one entered in the App field (usually 'Telnet').
- 4) Enter the appropriate parameters for the application. The syntax for this is the same as the one that would be passed in the client machine when using the application followed by the {ip} parameter, which will pass the IP address of the text or property that triggered the app.

The image below shows the execution of the ping command, as seen by an end user.

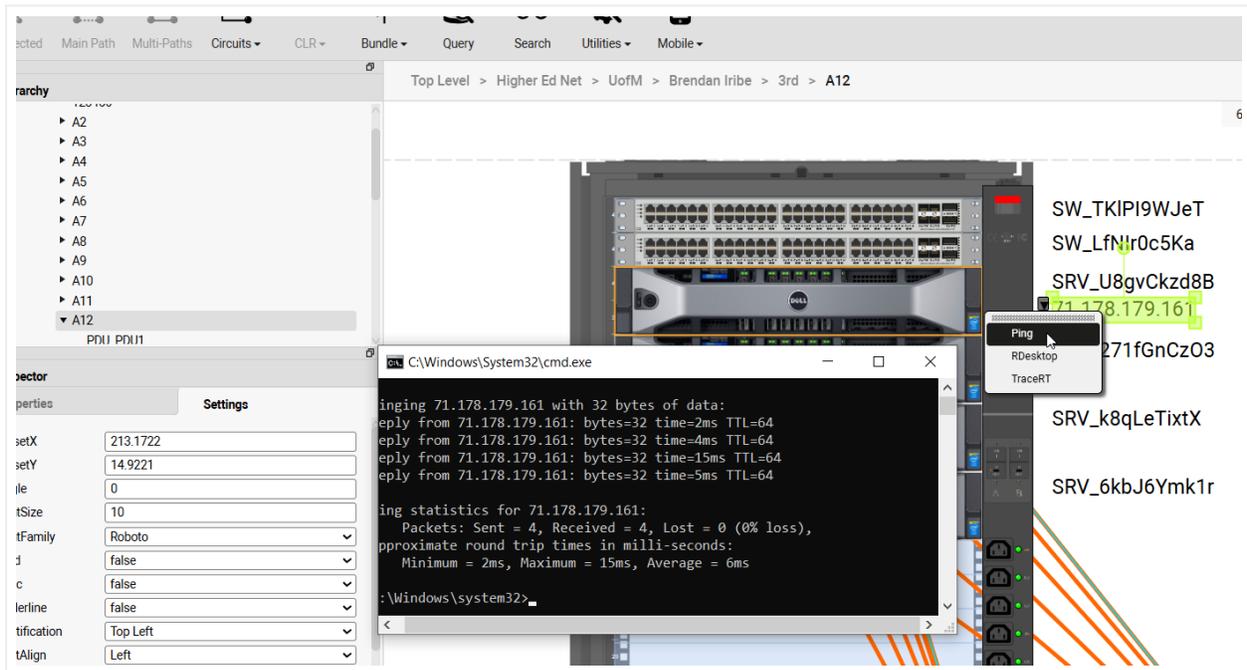

**Attention!**

Try to limit the number of apps to essential and ubiquitous ones for several reasons:

- 1) Obscure applications may not be available or installed on every machine.
- 2) The visibility of applications cannot be controlled in a granular fashion. Every user sees the same apps.
- 3) Too many applications would clutter the project-side context menu.

## 4.5.9 Predefined status visual override for devices

As netTerrain, along with the collector gets closer to a monitoring solution and not just a documentation tool, we keep adding features to make real-time alarming and notifications easier. One such feature is the global status visual override for devices.

Now if you want to display any device in, say, red, if it is alarmed, you don't have to create a visual override for each device. Instead, you can create a global visual override that applies to all devices, and you can do so for multiple criteria. This global override only applies to the status field, which is the field that will be mapped automatically with the collector for real-time status updates in case you are using our SNMP discovery to report on device status.

**Other**

Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
<a href="#">Enable IP toolset</a>	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
<a href="#">Enable Predefined Device Overrides</a>	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle ▾
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode ▾
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode ▾
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto ▾
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy ▾
Show on diagram effect	Show blinking rectangle ▾	Use 24 hour time format	<input type="checkbox"/>

### Enabling predefined device overrides

To enable the status visual override for devices, do the following:

- First check the 'Enable Predefined Device Override' checkbox.
- Click on the settings hyperlink to create a new global override.
- From the Predefined Device Override page, click on the 'Add New' button.

Predefined Device Overrides To csv To Excel Add New

Filter Apply Clear

#	Links	Effect	Value
1		Image As Rectangle	14
2		Image As Rectangle	Down
3		Image As Rectangle	0
4		Image As Rectangle	Alarmed

1 out of 1 < > 1 Go

**Add Predefined Device Override**

Effect:

Value:

Submit Cancel

- Choose an effect you want for all your devices.
- Pick a Value for which any devices that matches it, will display the effect.
- Submit

We typically recommend pairing this feature with our own discovery and using values that match the status values imported from SNMP or some connector corresponding to 'Down' states. That way you can visually see when a device is down in near-real time!

Predefined Device Overrides To csv To Excel Add New

Filter Apply Clear


#	Links	Effect	Value
1		Image As Rectangle	Down
2		Image As Rectangle	0
3		Image As Rectangle	Alarmed

1 out of 1 < > 1 Go

Typical 'Down' status values for devices, when paired with auto discovery


## 4.5.10 Company logo image

If you wish to replace the default Graphical Networks logo that shows up in netTerrain, with your own, you can do this easily from here:

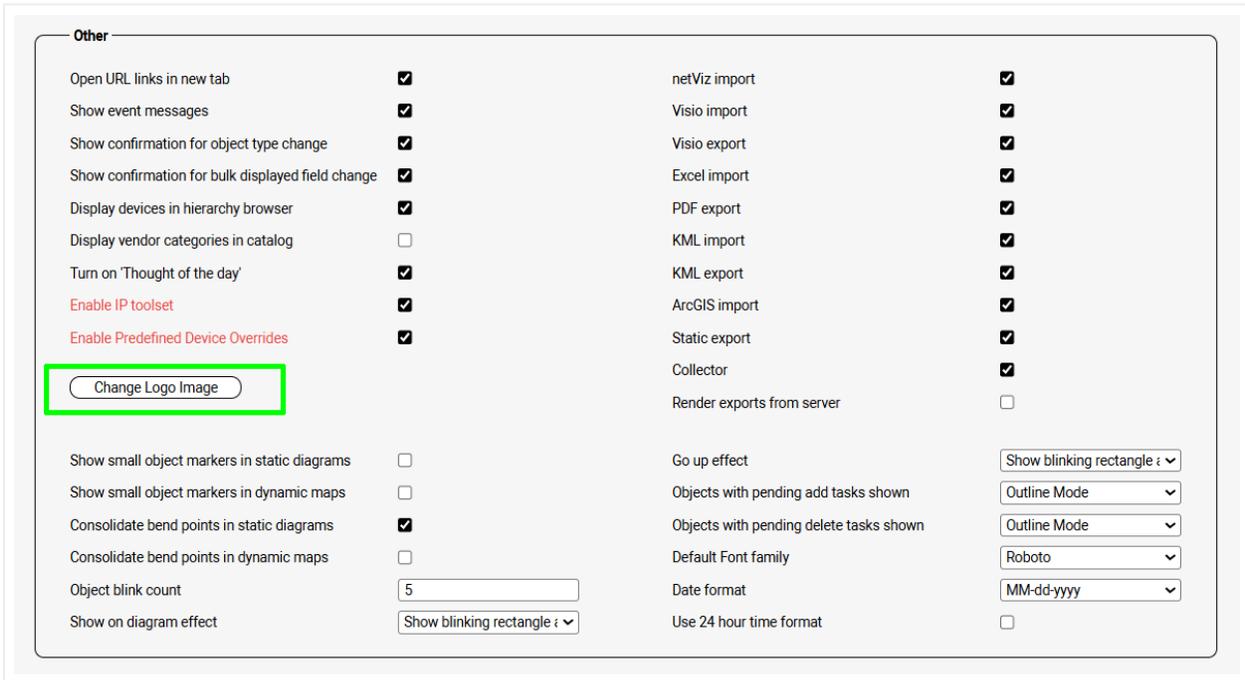

[Link to change application logo](#)

After clicking on the link, browse to the folder that has the image you want to use in netTerrain. This will replace the current one.

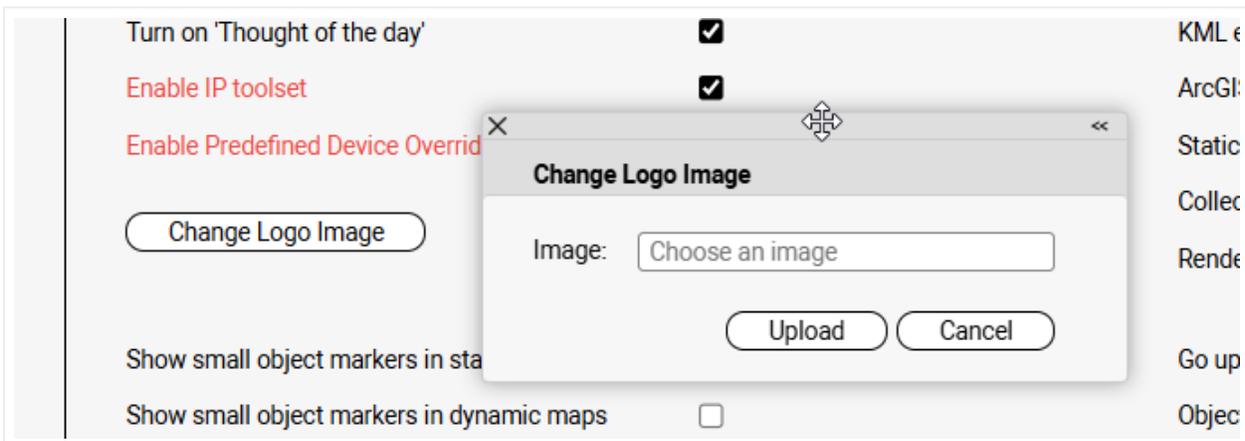

[Changing the logo image for the netTerrain application](#)

## 4.5.11 Enabling and disabling import / export buttons

Whether it's for security reasons or to reduce clutter, certain administrators don't want specific import or export buttons to be available in netTerrain. This can be controlled from the 8 checkboxes displayed below.

The screenshot shows the 'Other' settings page in netTerrain. A green box highlights the following options, all of which are checked:

- netViz import
- Visio import
- Visio export
- Excel import
- PDF export
- KML import
- KML export
- ArcGIS import
- Static export

Other visible settings include:


- Open URL links in new tab (checked)
- Show event messages (checked)
- Show confirmation for object type change (checked)
- Show confirmation for bulk displayed field change (checked)
- Display devices in hierarchy browser (checked)
- Display vendor categories in catalog (unchecked)
- Turn on 'Thought of the day' (checked)
- Enable IP toolset (checked)
- Enable Predefined Device Overrides (checked)
- Change Logo Image (button)
- Show small object markers in static diagrams (unchecked)
- Show small object markers in dynamic maps (unchecked)
- Consolidate bend points in static diagrams (checked)
- Consolidate bend points in dynamic maps (unchecked)
- Object blink count (5)
- Show on diagram effect (Show blinking rectangle)
- Collector (checked)
- Render exports from server (unchecked)
- Go up effect (Show blinking rectangle)
- Objects with pending add tasks shown (Outline Mode)
- Objects with pending delete tasks shown (Outline Mode)
- Default Font family (Roboto)
- Date format (MM-dd-yyyy)
- Use 24 hour time format (unchecked)

### Enabling or disabling import / export buttons


Any option that is checked will then enable the corresponding importer or exporter in the project toolbar. These include:

- netViz import
- Visio import
- Visio export
- Excel import
- PDF export
- KML import
- KML export
- ArcGIS import
- Static exports

The export buttons on the netTerrain toolbar can be enabled or disabled individually. The example below shows a toolbar where all imports and exports are enabled.

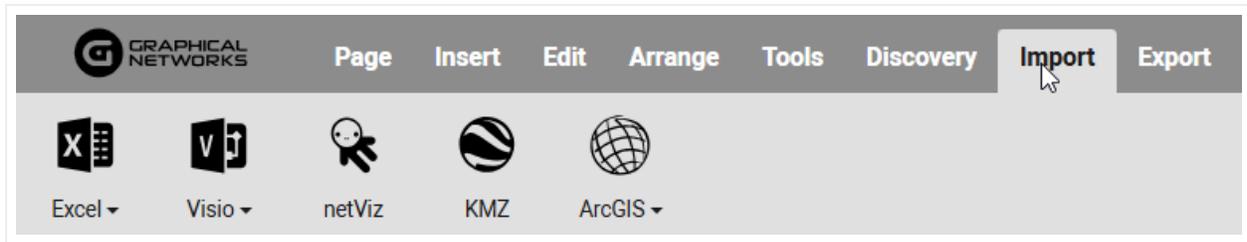

*netTerrain import ribbon*

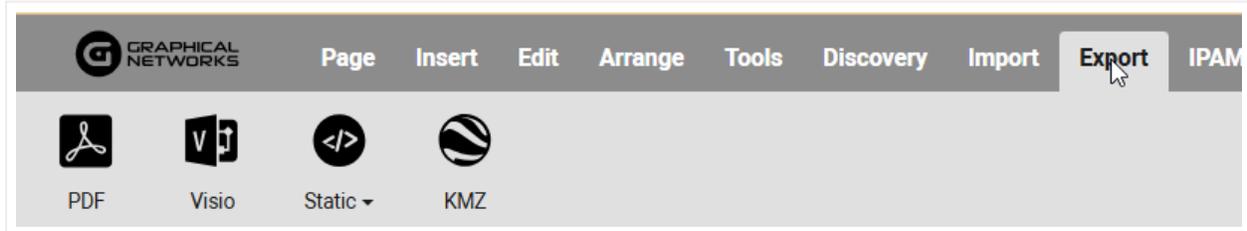

*netTerrain export ribbon*

The static exports in netTerrain provide a mechanism to export a diagram to both static HTML as well as PNG.

#### **Attention!**

Enabling the importers and exporters does not necessarily make them work. In particular, the Visio and netViz buttons will only work if the application server has been properly configured. Please consult the import – export guide.

Also notice that if only one of the Visio options is checked, the toolbar button will show up in the project with the other menu being disabled.

## **4.5.12 Enabling the collector**

The collector is netTerrains new multi-tenant discovery engine. It is outside of the scope of this guide to go over the collector specifics (check out the collector guide for that), but it is important to know that it can be enabled from here, which means that end users can then download it from the Tools menu in the project to perform network discoveries.

**Other**

Open URL links in new tab <input checked="" type="checkbox"/>	netViz import <input checked="" type="checkbox"/>
Show event messages <input checked="" type="checkbox"/>	Visio import <input checked="" type="checkbox"/>
Show confirmation for object type change <input checked="" type="checkbox"/>	Visio export <input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change <input checked="" type="checkbox"/>	Excel import <input checked="" type="checkbox"/>
Display devices in hierarchy browser <input checked="" type="checkbox"/>	PDF export <input checked="" type="checkbox"/>
Display vendor categories in catalog <input type="checkbox"/>	KML import <input checked="" type="checkbox"/>
Turn on 'Thought of the day' <input checked="" type="checkbox"/>	KML export <input checked="" type="checkbox"/>
Enable IP toolset <input checked="" type="checkbox"/>	ArcGIS import <input checked="" type="checkbox"/>
Enable Predefined Device Overrides <input checked="" type="checkbox"/>	Static export <input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>	<b>Collector</b> <input checked="" type="checkbox"/>
	Render exports from server <input type="checkbox"/>
Show small object markers in static diagrams <input type="checkbox"/>	Go up effect <input type="text" value="Show blinking rectangle"/>
Show small object markers in dynamic maps <input type="checkbox"/>	Objects with pending add tasks shown <input type="text" value="Outline Mode"/>
Consolidate bend points in static diagrams <input checked="" type="checkbox"/>	Objects with pending delete tasks shown <input type="text" value="Outline Mode"/>
Consolidate bend points in dynamic maps <input type="checkbox"/>	Default Font family <input type="text" value="Roboto"/>
Object blink count <input type="text" value="5"/>	Date format <input type="text" value="MM-dd-yyyy"/>
Show on diagram effect <input type="text" value="Show blinking rectangle"/>	Use 24 hour time format <input type="checkbox"/>

*Enabling the collector*

## 4.5.13 Rendering exports from server

Visio, Power Point and PDF exports can be rendered from the client or from the server. This checkbox controls that mechanism. Both mechanisms have somewhat obvious pros and cons. Server rendering simplifies the process for the user but requires the applications to be installed on the server, which can be complicated. Client rendering is a lot easier but requires every client going through a small setup.

**Other**

Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<input type="button" value="Change Logo Image"/>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle ▾
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode ▾
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode ▾
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto ▾
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy ▾
Show on diagram effect	Show blinking rectangle ▾	Use 24 hour time format	<input type="checkbox"/>

For more details on the import and export mechanisms available on netTerrain, please see the Import/Export Guide.

#### 4.5.14 Controlling OSP-related small markers

In OSP maps (see End-User guide) zoomed out states can prevent users from even seeing nodes on that map. When the show small object markers in dynamic maps feature is checked, then all nodes on a map will display a so-called 'halo' or marker, once the user is zoomed out beyond a point where the nodes would normally disappear (due to being small).

This feature is also available for static maps (not OSP related), but we do recommend leaving this setting unchecked for static maps.

**Other**

Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<input type="button" value="Change Logo Image"/>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	<input type="text" value="Show blinking rectangle"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	<input type="text" value="Outline Mode"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	<input type="text" value="Outline Mode"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	<input type="text" value="Roboto"/>
Object blink count	<input type="text" value="5"/>	Date format	<input type="text" value="MM-dd-yyyy"/>
Show on diagram effect	<input type="text" value="Show blinking rectangle"/>	Use 24 hour time format	<input type="checkbox"/>

*Controlling the usage of markers (halos) in static and dynamic maps*

## 4.5.15 Bend point consolidation

netTerrain simplifies the creation of bend points by consolidating what seem to be redundant bend points. In some cases, though, particularly for dynamic maps, you may need some very fine tuning of your bend points, where your consolidation could stand in the way of a smoother creation of links with bend points.

To prevent that, netTerrain lets you control whether you want bend points to be consolidated automatically or not.

Other			
Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<input type="button" value="Change Logo Image"/>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="button" value="v"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="button" value="v"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="button" value="v"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="button" value="v"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="button" value="v"/>
Show on diagram effect	Show blinking rectangle <input type="button" value="v"/>	Use 24 hour time format	<input type="checkbox"/>

*Bend point consolidation setting*

## 4.5.16 Object blink count

This setting controls how many times an object will blink when being redirected from an object search table or from another page where object blinking applies (such as when using the 'up' button).

Other			
Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<input type="button" value="Change Logo Image"/>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="button" value="v"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="button" value="v"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="button" value="v"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="button" value="v"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="button" value="v"/>
Show on diagram effect	Show blinking rectangle <input type="button" value="v"/>	Use 24 hour time format	<input type="checkbox"/>

## 4.5.17 Show on Diagram effect

This setting lets you choose what happens when you press a “Show on diagram” link or when you use the feeling lucky search option. The show on diagram link will appear after a search is performed or a table view is generated. After you click in the show on diagram link, one of the following effects is triggered:

- Show blinking rectangle around object
- Blink object
- Show big red arrow
- Select object

The screenshot shows the 'Other' settings panel with various configuration options. The 'Show on diagram effect' setting is highlighted with a green box and is set to 'Show blinking rectangle'. Other settings include checkboxes for 'Open URL links in new tab', 'Show event messages', 'Show confirmation for object type change', 'Show confirmation for bulk displayed field change', 'Display devices in hierarchy browser', 'Display vendor categories in catalog', 'Turn on 'Thought of the day'', 'Enable IP toolset', and 'Enable Predefined Device Overrides'. There are also dropdown menus for 'Go up effect', 'Objects with pending add tasks shown', 'Objects with pending delete tasks shown', 'Default Font family', and 'Date format'. A text input field for 'Object blink count' is set to 5. A 'Change Logo Image' button is also visible.

Show on diagram effect

## 4.5.18 Go up effect

This setting lets you choose what happens when you press the 'Go up' button or shortcut. After you press the up option or shortcut one of the following effects is triggered:

- Show blinking rectangle around object
- Blink object
- Show big red arrow
- Select object

The screenshot shows the 'Other' settings section of the netTerrain admin console. It contains a grid of settings with checkboxes, text inputs, and dropdown menus. The 'Go up effect' setting is highlighted with a green border and is currently set to 'Show blinking rectangle'. Other settings include 'Open URL links in new tab' (checked), 'netViz import' (checked), 'Show event messages' (checked), 'Visio import' (checked), 'Show confirmation for object type change' (checked), 'Visio export' (checked), 'Show confirmation for bulk displayed field change' (checked), 'Excel import' (checked), 'Display devices in hierarchy browser' (checked), 'PDF export' (checked), 'Display vendor categories in catalog' (unchecked), 'KML import' (checked), 'Turn on 'Thought of the day'' (checked), 'KML export' (checked), 'Enable IP toolset' (checked), 'ArcGIS import' (checked), 'Enable Predefined Device Overrides' (checked), 'Static export' (checked), 'Collector' (checked), 'Change Logo Image' (button), 'Render exports from server' (unchecked), 'Show small object markers in static diagrams' (unchecked), 'Go up effect' (dropdown, highlighted, value: Show blinking rectangle), 'Objects with pending add tasks shown' (dropdown, value: Outline Mode), 'Show small object markers in dynamic maps' (unchecked), 'Objects with pending delete tasks shown' (dropdown, value: Outline Mode), 'Consolidate bend points in static diagrams' (checked), 'Default Font family' (dropdown, value: Roboto), 'Consolidate bend points in dynamic maps' (unchecked), 'Object blink count' (text input, value: 5), 'Date format' (dropdown, value: MM-dd-yyyy), 'Show on diagram effect' (dropdown, value: Show blinking rectangle), and 'Use 24 hour time format' (unchecked).

*Go up effect*

## 4.5.19 Workorder settings

The work order feature in netTerrain can distinguish nodes that have pending tasks from regular nodes (or nodes with tasks that are closed). In the admin console you can choose how these nodes with pending tasks are rendered. The rendering options include:

- Outline mode – this is essentially a grey rectangle that defines the rect object boundaries of the node.
- Faint mode – this is similar to how you would see a node after you cut it and before you paste it.
- Normal mode - boring
- Hidden – for when you want some mystery in your netTerrain diagram and hide these nodes with pending tasks from everybody.

These rendering modes can be controlled separately between insert and delete tasks, as shown below:

The screenshot shows the 'Other' settings panel in netTerrain 10.1. The panel is divided into two columns of settings. The left column includes options like 'Open URL links in new tab', 'Show event messages', 'Show confirmation for object type change', 'Show confirmation for bulk displayed field change', 'Display devices in hierarchy browser', 'Display vendor categories in catalog', 'Turn on 'Thought of the day'', 'Enable IP toolset', 'Enable Predefined Device Overrides', 'Change Logo Image', 'Show small object markers in static diagrams', 'Show small object markers in dynamic maps', 'Consolidate bend points in static diagrams', 'Consolidate bend points in dynamic maps', 'Object blink count', and 'Show on diagram effect'. The right column includes options like 'netViz import', 'Visio import', 'Visio export', 'Excel import', 'PDF export', 'KML import', 'KML export', 'ArcGIS import', 'Static export', 'Collector', 'Render exports from server', 'Go up effect', 'Objects with pending add tasks shown', 'Objects with pending delete tasks shown', 'Default Font family', 'Date format', and 'Use 24 hour time format'. The 'Objects with pending delete tasks shown' dropdown is highlighted with a green box and set to 'Outline Mode'.

*Setting for WO rendering affecting objects with insert tasks*

The screenshot shows the 'Other' settings panel in netTerrain 10.1, identical to the one above. The 'Objects with pending delete tasks shown' dropdown is highlighted with a green box and set to 'Outline Mode'.

*Setting for WO rendering affecting objects with delete tasks*

## 4.5.20 Default Font family

You can set the default font for text created in netTerrain by changing the 'Default font family' setting.

The screenshot shows the 'Other' settings section in netTerrain. The settings are organized into two columns. The 'Default Font family' dropdown menu is highlighted with a green box and is set to 'Roboto'. Other settings include checkboxes for various features like 'Open URL links in new tab', 'Show event messages', and 'netViz import'. There are also dropdown menus for 'Go up effect', 'Objects with pending add tasks shown', 'Objects with pending delete tasks shown', 'Date format', and 'Use 24 hour time format'. A text input field for 'Object blink count' is set to '5'. A 'Change Logo Image' button is also visible.

Setting	Value
Open URL links in new tab	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>
Change Logo Image	Change Logo Image
Show small object markers in static diagrams	<input type="checkbox"/>
Show small object markers in dynamic maps	<input type="checkbox"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>
Object blink count	5
Show on diagram effect	Show blinking rectangle
netViz import	<input checked="" type="checkbox"/>
Visio import	<input checked="" type="checkbox"/>
Visio export	<input checked="" type="checkbox"/>
Excel import	<input checked="" type="checkbox"/>
PDF export	<input checked="" type="checkbox"/>
KML import	<input checked="" type="checkbox"/>
KML export	<input checked="" type="checkbox"/>
ArcGIS import	<input checked="" type="checkbox"/>
Static export	<input checked="" type="checkbox"/>
Collector	<input checked="" type="checkbox"/>
Render exports from server	<input type="checkbox"/>
Go up effect	Show blinking rectangle
Objects with pending add tasks shown	Outline Mode
Objects with pending delete tasks shown	Outline Mode
Default Font family	Roboto
Date format	MM-dd-yyyy
Use 24 hour time format	<input type="checkbox"/>

## 4.5.21 Date format

To change the date format used in any fields or text displaying dates, choose the appropriate date format from the combo box.

**Other**

Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="checkbox"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="checkbox"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="checkbox"/>
Show on diagram effect	Show blinking rectangle <input type="checkbox"/>	Use 24 hour time format	<input type="checkbox"/>

## 4.5.22 24 hour time format

Like the date format feature, you can also change the format used to display dates by switching to the 24-hour time format.


**Other**

Open URL links in new tab	<input checked="" type="checkbox"/>	netViz import	<input checked="" type="checkbox"/>
Show event messages	<input checked="" type="checkbox"/>	Visio import	<input checked="" type="checkbox"/>
Show confirmation for object type change	<input checked="" type="checkbox"/>	Visio export	<input checked="" type="checkbox"/>
Show confirmation for bulk displayed field change	<input checked="" type="checkbox"/>	Excel import	<input checked="" type="checkbox"/>
Display devices in hierarchy browser	<input checked="" type="checkbox"/>	PDF export	<input checked="" type="checkbox"/>
Display vendor categories in catalog	<input type="checkbox"/>	KML import	<input checked="" type="checkbox"/>
Turn on 'Thought of the day'	<input checked="" type="checkbox"/>	KML export	<input checked="" type="checkbox"/>
Enable IP toolset	<input checked="" type="checkbox"/>	ArcGIS import	<input checked="" type="checkbox"/>
Enable Predefined Device Overrides	<input checked="" type="checkbox"/>	Static export	<input checked="" type="checkbox"/>
<a href="#">Change Logo Image</a>		Collector	<input checked="" type="checkbox"/>
		Render exports from server	<input type="checkbox"/>
Show small object markers in static diagrams	<input type="checkbox"/>	Go up effect	Show blinking rectangle <input type="checkbox"/>
Show small object markers in dynamic maps	<input type="checkbox"/>	Objects with pending add tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in static diagrams	<input checked="" type="checkbox"/>	Objects with pending delete tasks shown	Outline Mode <input type="checkbox"/>
Consolidate bend points in dynamic maps	<input type="checkbox"/>	Default Font family	Roboto <input type="checkbox"/>
Object blink count	<input type="text" value="5"/>	Date format	MM-dd-yyyy <input type="checkbox"/>
Show on diagram effect	Show blinking rectangle <input type="checkbox"/>	Use 24 hour time format	<input type="checkbox"/>

## 4.6 Custom user actions

netTerrain right-click context menus include the feature of being able to create your own custom user actions via right-click context menus accessible from the custom actions menu.

Custom actions can be launched through an object or a diagram right-click context menu, as we can see from the image below.

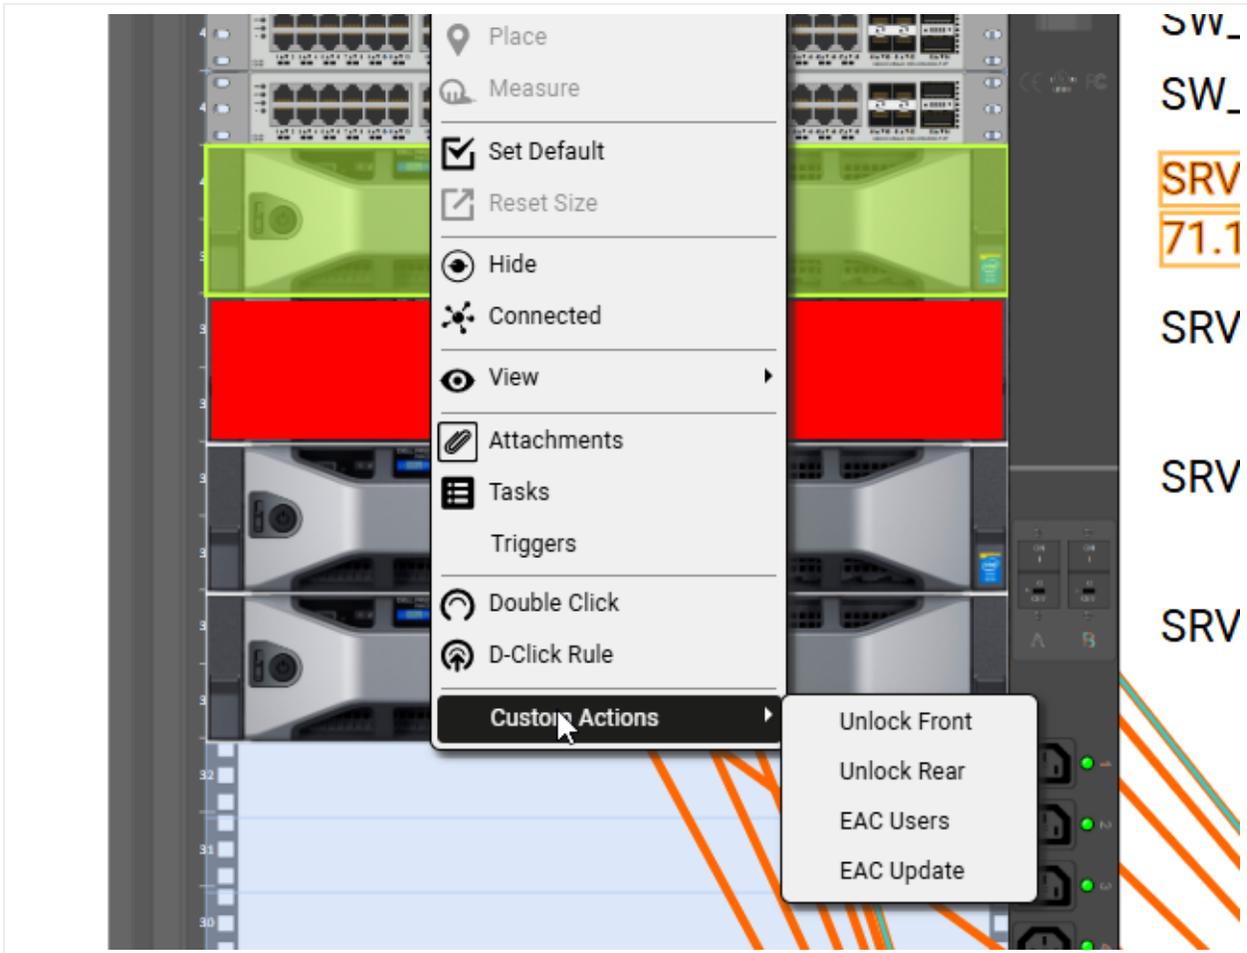

*Custom Actions menu*

To set up a custom action, an administrator must configure the CustomUserActions.xml file accessible from `<netTerrain root installation folder>\CustomActions`. When this xml is properly configured, your custom actions will be populated as sub menus inside the Custom Actions menu which can trigger specific custom-defined actions.

The configuration data inside the CustomUserActions.xml file usually triggers a dll (the custom action binary file, which is sometimes paired with another json custom action-specific configuration file), which can be found in `<netTerrain root installation folder>\WebApi\modules`.

Several predefined custom actions are included with a standard netTerrain installer including:

- ChatsworthExtModule.dll: an extension to control the opening and closing of rack doors
- CmdRunConnector.dll: an extension to run a cmd file
- NetTerrainLabelHelper.dll: an extension for label printing
- ReportLauncher.dll: an extension to expand the capabilities of table reports allowing for more complex queries
- ServiceNowConnector.dll: an extension to write back data from netTerrain to Service Now, thus extending the capabilities of the Service Now connector

To better understand how these custom actions work, we will explore the case of the CmdRunConnector, paired with a series of functions to power cycle a device (on and off).

### 4.6.1 Setting up the CustomUserAction

The first step in enabling your custom user action is to configure the CustomUserActions.xml file. As mentioned above, you can find it in `<netTerrain root installation folder>\CustomActions\`.

Open the xml file using notepad or some text editor that doesn't add strange foo inside the plain text file and insert a new xml node:

```
<CustomUserAction>
  <Name>Power cycle ON</Name>
  <Action>runextmethod</Action>
  <Filter>nodes</Filter>
  <Parameters>
    <Module>CmdRunConnector.dll</Module>
    <Method>RunCmd</Method>
    <MethodParameters>
      <nodeId>[Id]</nodeId>
      <commandId>PortOn</commandId>
    </MethodParameters>
  </Parameters>
</CustomUserAction>
```

Here we can see that the name of the node is "Power cycle ON", which is the name of the sub menu end users will see when they expand the Custom Action menu.

Custom actions call a dll, which can consist of several methods, which in turn can take multiple parameters. In our example the dll is CmdRunConnector.dll (already included by default in your netTerrain installer), the method is RunCmd and two parameters (nodeId, commandId) are supplied to the method.

## 4.6.2 Preparing the dll and configuration files

Notice that in this example we use a dll that already exists, but netTerrain developers (using the netTerrain SOAP API Guide) can create their own dlls. In that case place your own dlls in the \WebApi\modules folder.

For our CmdRunConnector dll we must also configure the corresponding json file (also for this case included in the default netTerrain installer).

```
{
  "CmdRules": [
    {
      "CommandId": "PortOn",
      "Command": "cmd",
      "IsAsync": false,
      "CommandArgs": "PowerCycleOn.cmd [IpVal] [DevVal]
[OutletVal]",
      "ArgReplacements": [
        {
          "Keyword": "[IpVal]",
          "PropName": "IP Address"
        },
        {
          "Keyword": "[DevVal]",
          "PropName": "Physical Address"
        },
        {
          "Keyword": "[OutletVal]",
          "PropName": "PortChannel"
        }
      ]
    }
  ]
}
```

Notice the following fields to be configured in the json file:

- Command: actual command to call
- CommandArgs: parameters of the command
- ArgReplacement: mapping of parameters with netTerrain fields containing the data

Finally, we must also include the actual cmd file in this case. Our PowerCycleOn.cmd file looks as follows:

```
set ip=%1

set devid=%2

set outletid=%3

curl --location --globoff --request GET "http://%ip%/api/dev/%devid%/
outlet/%outletid%" ^
--header "Content-Type: application/json" ^
--data "{\"username\": \"control\", \"password\": \"control\",
\"cmd\": \"control\", \"action\": \"off\"}"
```

You'll have to replace "control-control" username and password with your own of course. In addition, we need three parameters: ip, devid, outletid. These are conveniently taken from netTerrain fields as can be seen from the properties window of a port object that triggers the powering off command. The mapping of the parameters used by the command and the netTerrain fields is defined in the ArgReplacements section above.

Properties		Settings	
Type	Port		
Name	2	...	<input checked="" type="checkbox"/>
Protocol		...	<input type="checkbox"/>
Connector		...	<input type="checkbox"/>
Status		...	<input type="checkbox"/>
IP Address	127.0.0.1	...	<input type="checkbox"/>
Physical Address	93000000E7019812	...	<input type="checkbox"/>
Comments		...	<input type="checkbox"/>
PortConnectionPath	Top Level::110 Vertiv VP5665V::2	...	<input type="checkbox"/>
Description		...	<input type="checkbox"/>
Speed		...	<input type="checkbox"/>
Admin Status		...	<input type="checkbox"/>
Operational Status		...	<input type="checkbox"/>
Last Change		...	<input type="checkbox"/>
ifAlias		...	<input type="checkbox"/>
PortChannel	30	...	<input type="checkbox"/>
overrideMarker		...	<input type="checkbox"/>
Audit Trail			

We can also create a Power Off command in a similar fashion.

A PowerCycleOff.cmd command file would be configured as follows:

```
set ip=%1

set devid=%2

set outletid=%3

curl --location --globoff --request GET "http://%ip%/api/dev/%devid%/outlet/%outletid%" ^
```

```
--header "Content-Type: application/json" ^
--data "{\"username\": \"control\", \"password\": \"control\",
\"cmd\": \"control\", \"action\": \"off\"}"
```

A new xml node in the CustomUserAction.xml file would be set up as follows:

```
<CustomUserAction>
  <Name>Power cycle OFF</Name>
  <Action>runnextmethod</Action>
  <Filter>nodes</Filter>
  <Parameters>
    <Module>CmdRunConnector.dll</Module>
    <Method>RunCmd</Method>
    <MethodParameters>
      <nodeId>[Id]</nodeId>
      <commandId>PortOff</commandId>
    </MethodParameters>
  </Parameters>
</CustomUserAction>
```

And our CmdRunConnector.json should look like this:


```
{
  "CmdRules": [
    {
      "CommandId": "PortOn",
      "Command": "cmd",
      "IsAsync": false,
      "CommandArgs": "PowerCycleOn.cmd [IpVal] [DevVal]
[OutletVal]",
      "ArgReplacements": [
        {
          "KeyWord": "[IpVal]",
          "PropName": "IP Address"
        },
        {
          "KeyWord": "[DevVal]",
          "PropName": "Physical Address"
        },
        {
          "KeyWord": "[OutletVal]",
          "PropName": "PortChannel"
        }
      ]
    }
  ]
}
```

```

        }
    ]
},
{
    "CommandId": "PortOff",
    "Command": "cmd",
    "IsAsync": false,
    "CommandArgs": "PowerCycleOff.cmd [IpVal] [DevVal]
[OutletVal]",
    "ArgReplacements": [
        {
            "KeyWord": "[IpVal]",
            "PropName": "IP Address"
        },
        {
            "KeyWord": "[DevVal]",
            "PropName": "Physical Address"
        },
        {
            "KeyWord": "[OutletVal]",
            "PropName": "PortChannel"
        }
    ]
}
]
}
}

```

Here is how the custom menus should look like after everything is configured correctly.

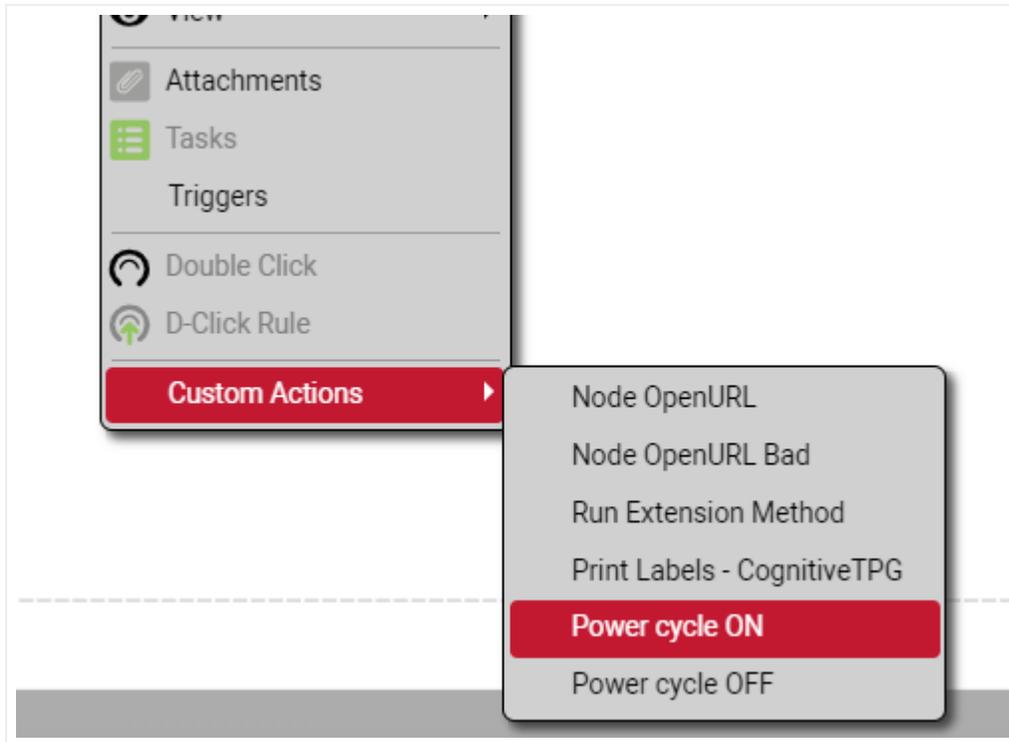

### 4.6.3 Custom actions: setting up a label printer

As a nice example of how to use custom actions we will go over the steps to set up a label printer. At Graphical Networks we have developed a custom dll (not so custom I guess if we did it ) and tested a label printer using the Cognitive TPG printer.

In our example, the printer uses port 9100, which should be configured along with its IP address to reach it. Usually that configuration is done from the printer admin console.

Once the printer is configured we need to set up the customUserAction file (usually located in C:\ProgramData\Graphical Networks\netTerrain\vis\CustomActions). Make sure to include the following code shown below as a new section in the xml file:

```
<CustomUserAction>
  <Name>Print Labels - CognitiveTPG</Name>
  <Action>runnextmethod</Action>
  <Filter>nodes,links</Filter>
  <Parameters>
    <Module>NetTerrainLabelHelper.dll</Module>
    <Method>PrintLabelsForSelectionCognitiveTPG</Method>
    <MethodParameters>
      <PrinterIp>172.16.10.6</PrinterIp>
    </MethodParameters>
  </Parameters>
</CustomUserAction>
```

```

<Port>9100</Port>
<Selection>[Selection]</Selection>
<NodeLabelTemplate>! 0 100 260 1
    PITCH 150
    TEXT 0(0,0,1,1) 0 0
    {{node_property_values['Name'].displayed_value}}
    BARCODE CODE128(2:4) 1 140 80 {{id}}
    END

</NodeLabelTemplate>
<RackLabelTemplate>! 0 100 260 1
    PITCH 150
    TEXT 0(0,0,1,1) 0 0
    {{base_node.node_property_values['Name'].displayed_value}}
    BARCODE CODE128(2:4) 1 140 80 {{id}}
    END

</RackLabelTemplate>
<DeviceLabelTemplate>! 0 100 260 1
    PITCH 150
    TEXT 0(0,0,1,1) 0 0
    {{base_node.node_property_values['Name'].displayed_value}}
    BARCODE CODE128(2:4) 1 140 80 {{id}}
    END

</DeviceLabelTemplate>
<CardLabelTemplate>! 0 100 260 1
    PITCH 150
    TEXT 0(0,0,1,1) 0 0
    {{base_node.node_property_values['Name'].displayed_value}}
    BARCODE CODE128(2:4) 1 140 80 {{id}}
    END

</CardLabelTemplate>
<PortLabelTemplate>{{name}}</PortLabelTemplate>
<LinkLabelTemplate>! 0 100 260 1
    PITCH 300
    TEXT 0(0,0,1,1) 0 0

    {{from_node.parent_node.parent_rack_container.parent_rack.name}}-
    {{from_node.parent_node.name}}:{{from_node.name}}
    TEXT 0(0,0,1,1) 0 30

    {{to_node.parent_node.parent_rack_container.parent_rack.name}}-
    {{to_node.parent_node.name}}:{{to_node.name}}
    END


```

```
</LinkLabelTemplate>
</MethodParameters>
</Parameters>
</CustomUserAction>
```



We can see here that the barcode printer has been configured in netTerrain to print labels for most object types: generic nodes, racks, devices and cards.

Next, make sure to copy the new NetTerrainLabelHelper.dll file over here:

```
C:\ProgramData\Graphical Networks\netTerrain\vis\WebApi\modules.
```

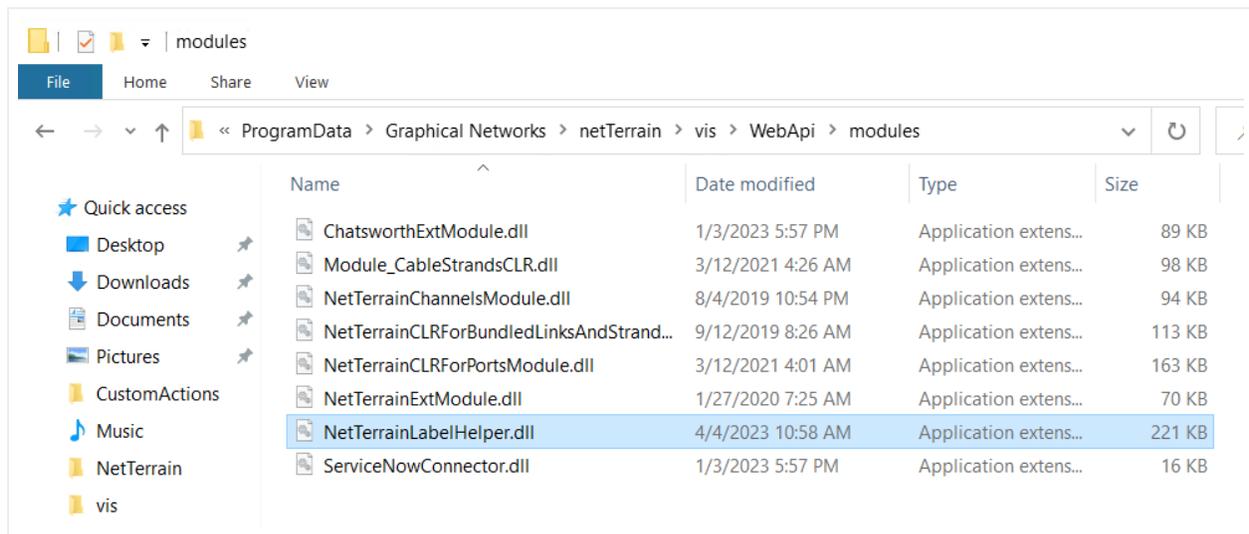


Next, make sure to enable the pipe protocol for Internet Information Services (IIS) using the IIS admin console:

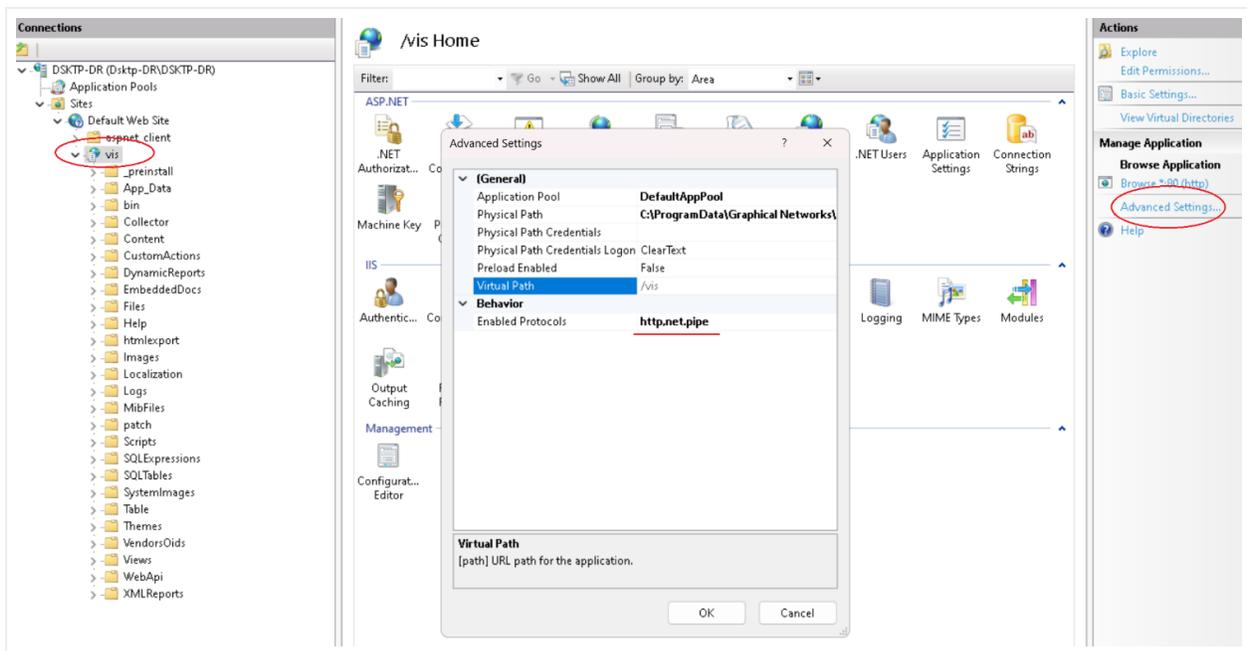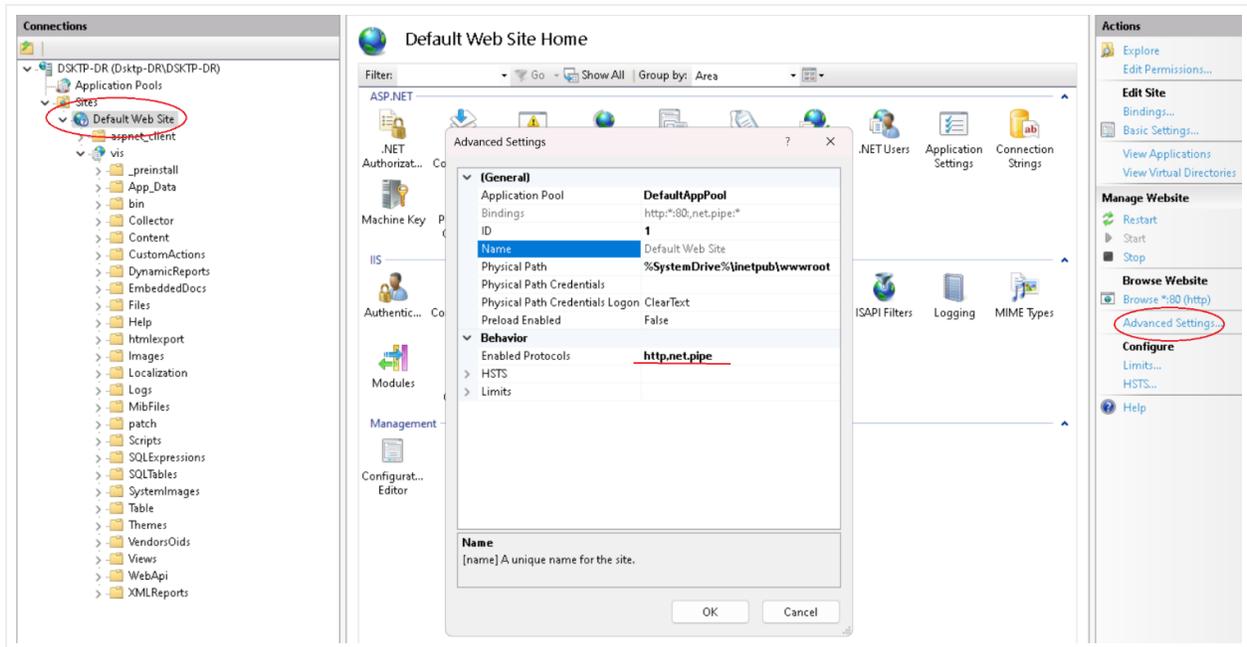

Once this is done, it is necessary to restart the server where netTerrain is running for the changes to take effect.

To test this out, you can print out a label from netTerrain by right-clicking on the custom actions menu:

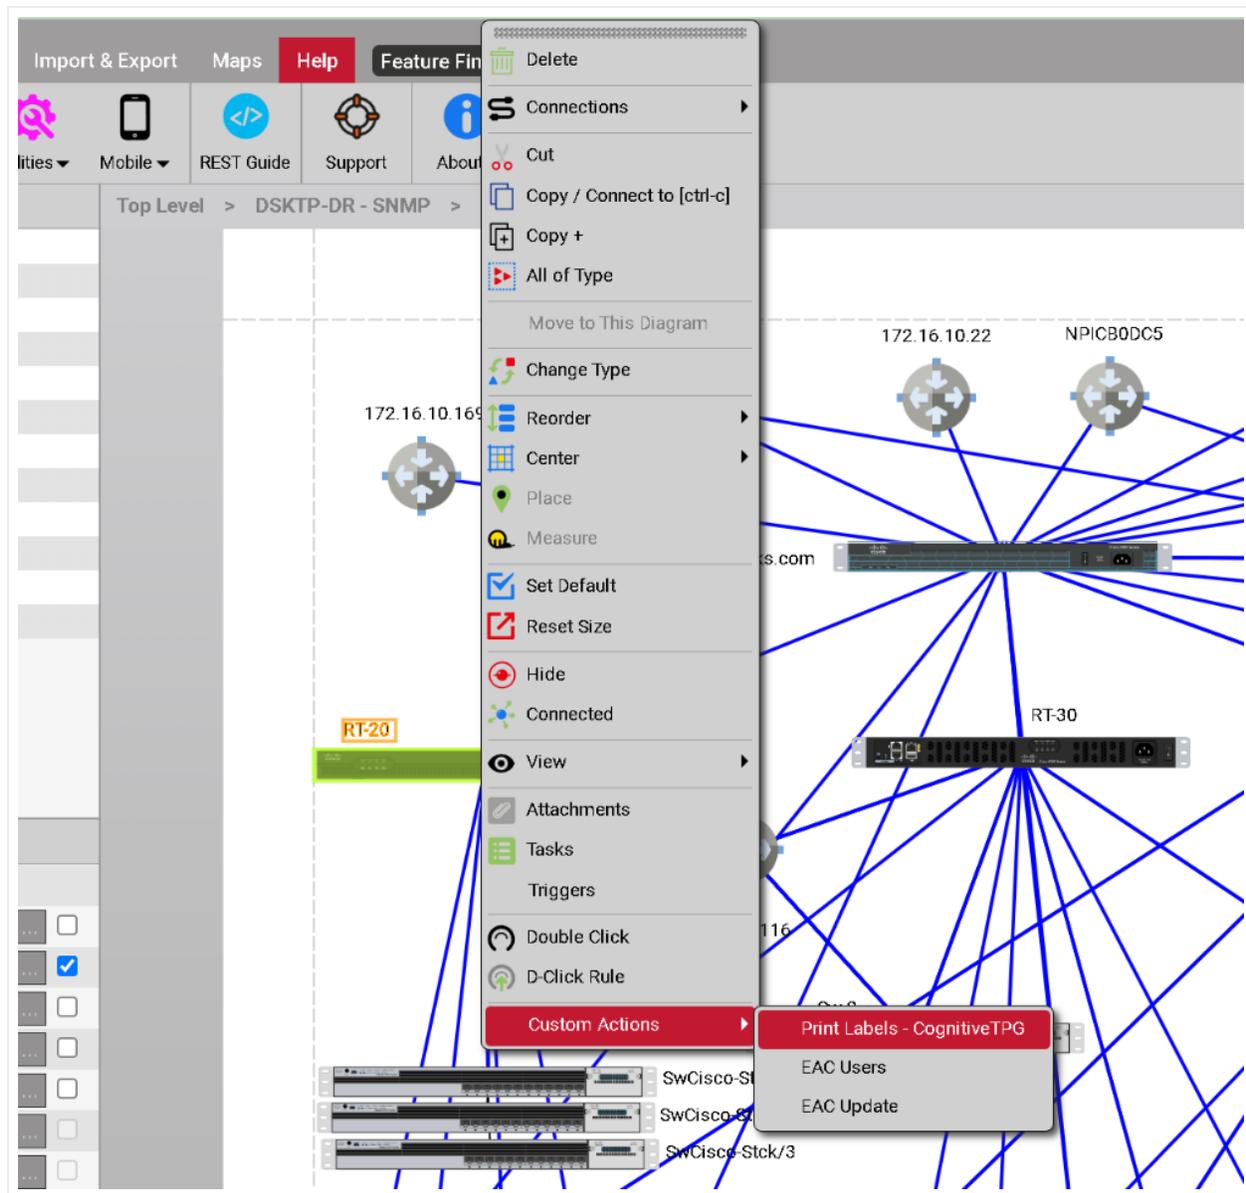


The printed label will look something like this:



## 4.7 License Information

The license info section details information about the netTerrain deployment and what it has been authorized for, as well as a button to add a new license key and another link to request a software upgrade.

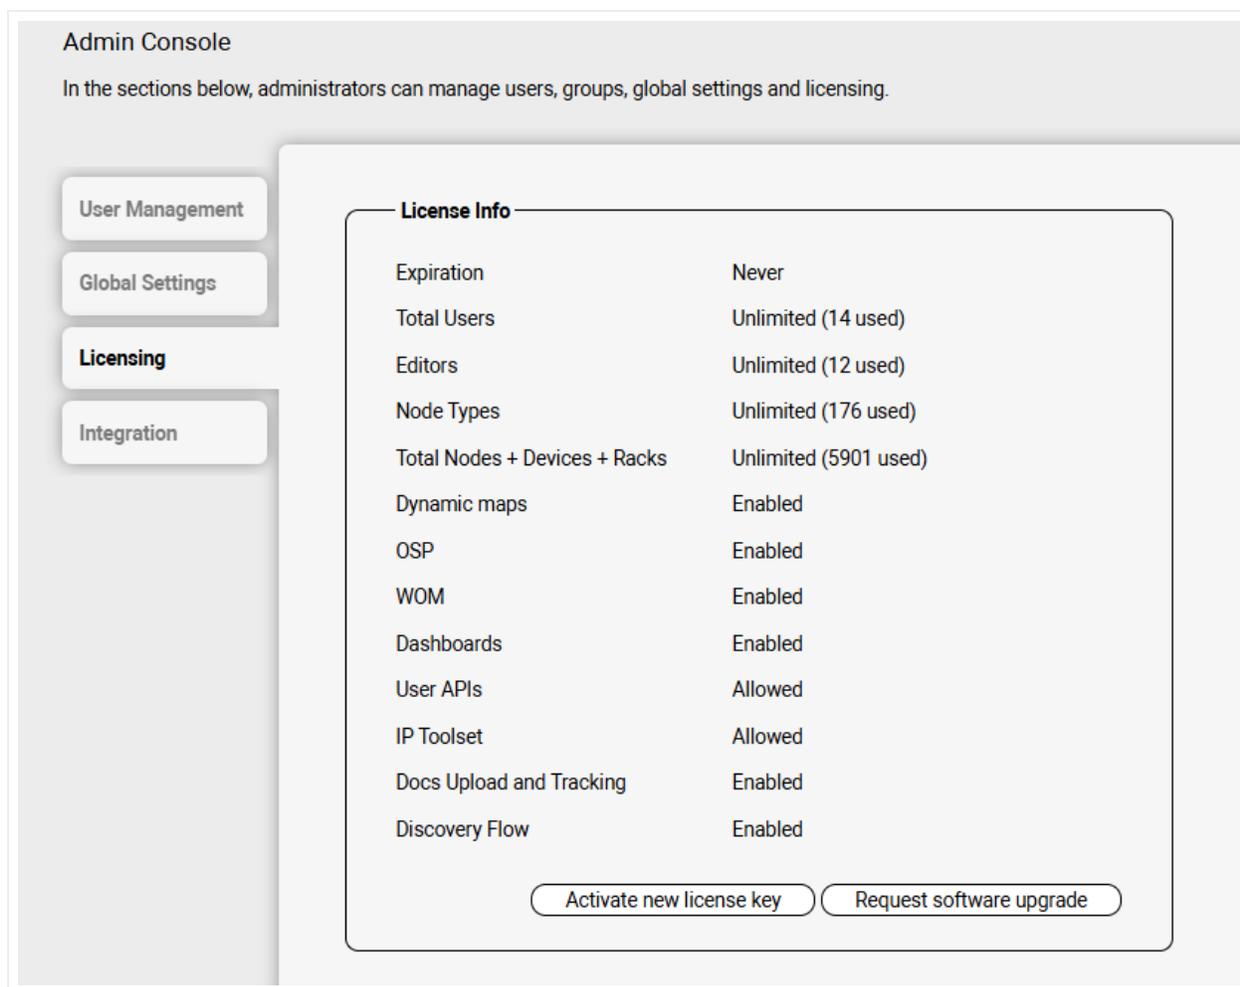


### License info section

- 1) Expiration: The number of days remaining until the installation requires a new license. This is usually only relevant for yearly or trial versions of netTerrain. If you have a permanent netTerrain license the value should be 'Never'.
- 2) Total Users: number of users of any kind that are licensed vs. the number of users set up in the system.
- 3) Editors: Maximum number of users that can be created in netTerrain with a default role of editor or higher.
- 4) Nodes + Devices + Racks: the sum of the instances of those three categories allowed by the license.
- 5) Node types: Maximum number of node types in the catalog.
- 6) OSP: Boolean that specifies whether Outside Plant (OSP) features (maps, circuit and strand management) are enabled or not.
- 7) WOM: Boolean that specifies whether the Work Order Management (WOM) feature is enabled or not.

- 8) Dashboard: Boolean that specifies whether the Dashboard feature is enabled or not.
- 9) User API: Boolean that specifies whether the REST API feature is enabled or not.
- 10) IP Toolset: Boolean that specifies whether the IP Toolset feature is enabled or not.
- 11) Docs Upload and Tracking: Boolean that specifies whether the feature is enabled or not.

## 4.7.1 Activating a new key

To activate a new netTerrain license key, simply select the link at the bottom of the admin console page. A new dialog to prompt the loading of a license key will pop up.

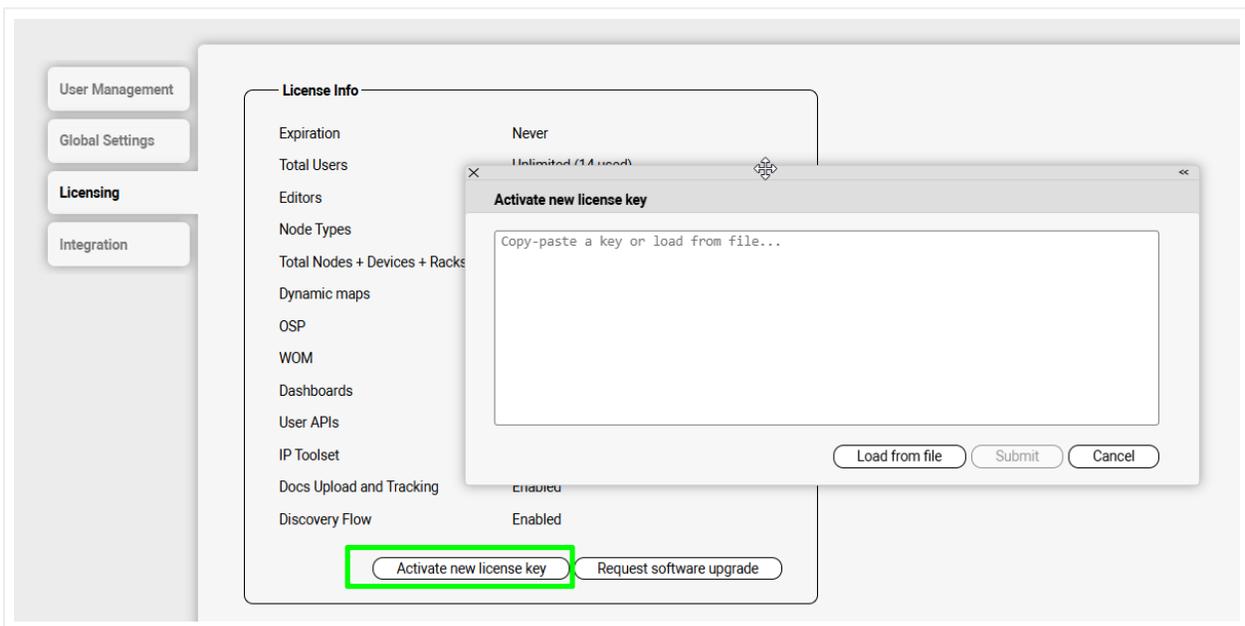

### *License key dialog*


You can enter a license key by simply copying and pasting the key provided by Graphical Networks or you can load it as a bin file using the 'Load from file' button. After submitting, the new license key settings are applied immediately. A restart of IIS is not necessary.

Contact Graphical Networks sales to request a new license key ([sales@graphicalnetworks.com](mailto:sales@graphicalnetworks.com)) or enter a ticket in the Graphical Networks customer portal.

## 4.8 Requesting a netTerrain upgrade patch

To upgrade the netTerrain server to a new version you can now request the upgrade patch directly from the admin console. This feature gives you the option to upgrade netTerrain via an upgrade Zendesk ticket, or email.

To start the upgrade process, head over to the admin console and scroll all the way down to the 'Request software upgrade' link:

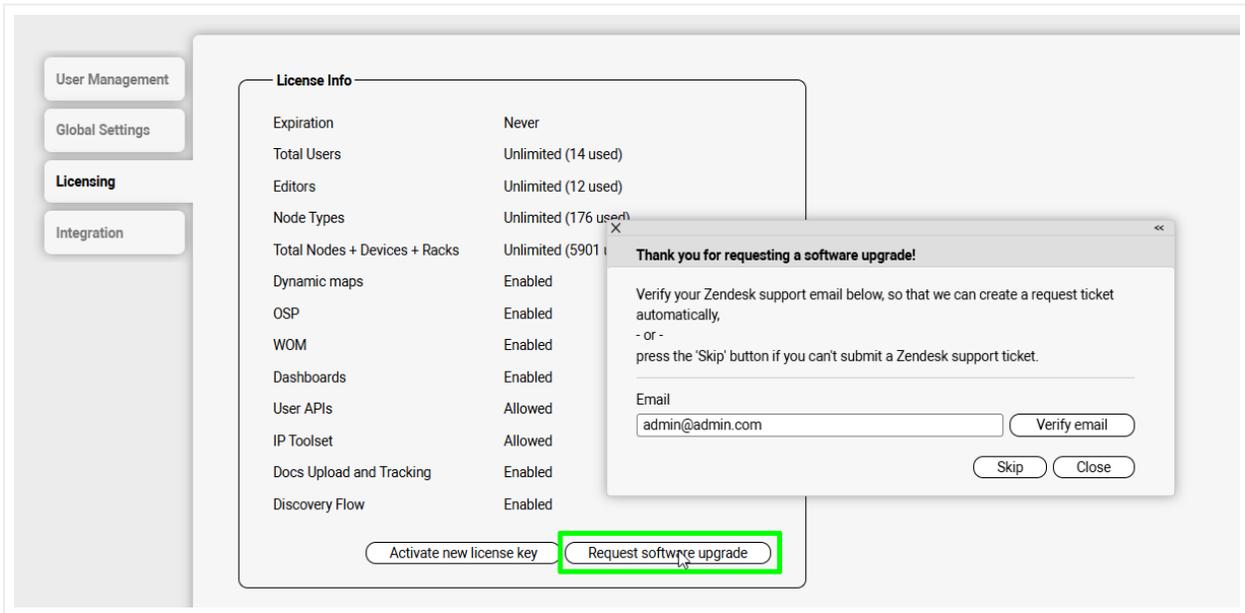

*Requesting a software upgrade*

### 4.8.1 Upgrade via Zendesk ticket

When clicking on this link, the admin can start the upgrade request process and automatically generate a Zendesk upgrade request ticket. This process requires the admin to have a valid Zendesk email to verify against the support account:

After verifying the Zendesk user, the admin can create the ticket, which will include some basic licensing and count information to speed up the upgrade request on our end (before we used to request this information manually in a process that was also error-prone and led to a lot of back and forth emails).

### Thank you for requesting a software upgrade! X

Verify your Zendesk support email below, so that we can create a request ticket automatically,  
- or -  
press the 'Skip' button if you can't submit a Zendesk support ticket.

---

Email  Verified!

Now that your Zendesk email has been verified press the  
'Create ticket' button on your right, to create the ticket.

Create ticket

---

Skip Close

*Verified Zendesk user*

## 4.8.2 Upgrade via ticket

In some cases, you may not be connected to the internet or perhaps you don't have a Zendesk account (you should, it's free...), in which case you can request the software upgrade via email. You can do that by skipping the automated Zendesk ticket process:

### Thank you for requesting a software upgrade! X

Instead of creating the Zendesk ticket you can request an upgrade via email.

---

Click on the 'Download PDF' button to fetch the upgrade PDF file. Download PDF


After clicking 'Download PDF' you will be prompted to download a small PDF file, before being redirected to the support site. In it, you want to create a support ticket for your software upgrade. Include the PDF file as an attachment in your support ticket.  
- or -  
just email us at [support@graphicalnetworks.com](mailto:support@graphicalnetworks.com) and attach the PDF file.

---

Prev Close

*Upgrading via email*

The process is super simple: download the PDF file that will include the same licensing information that is sent to Zendesk, and instead, attach it in an email:

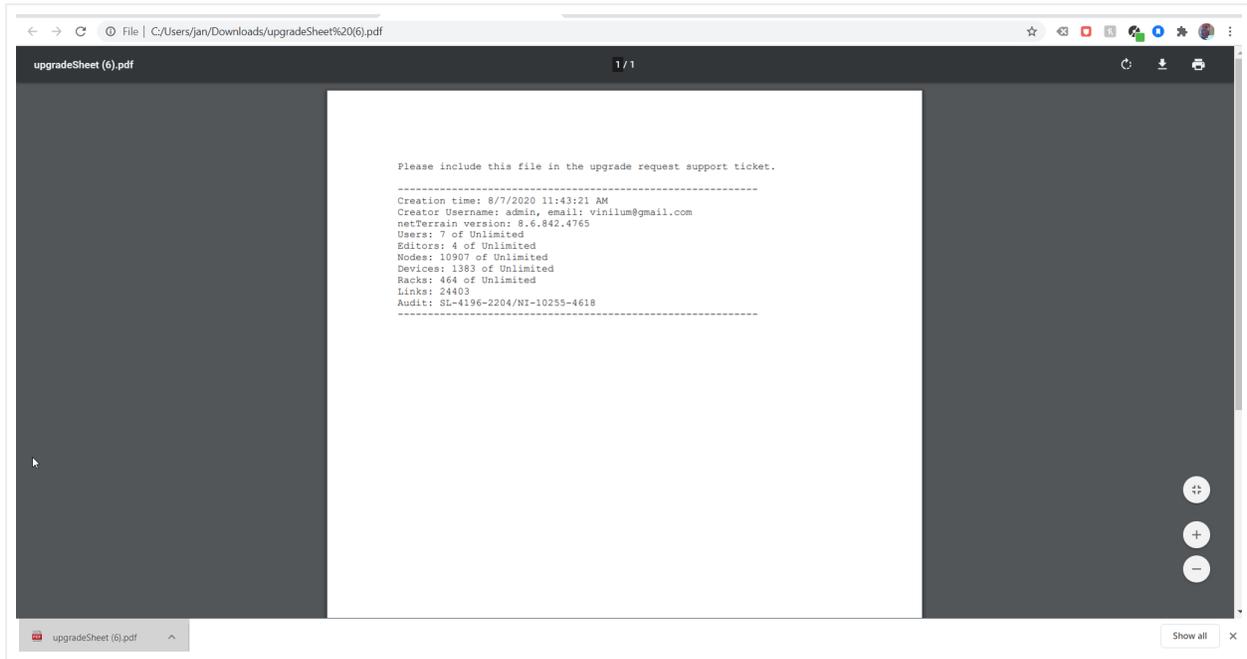

PDF upgrade sheet used by Graphical Networks to process the upgrade

## 4.9 Additional settings using the settings.xml file

In the netTerrain administration console you can currently adjust many global settings, as discussed above. There are, however, more settings that can help you control different aspects of the netTerrain software.

Anything that doesn't make it into the GUI (because it may be a bit too obscure or perhaps, we don't want somebody to just easily change it from the console) goes into a file called Settings.xml. This file can be found on the netTerrain app server inside the netTerrain root folder and can be edited with a simple text editor like notepad.

### 4.9.1 Authentication and security settings

These settings deal with how you login, and how netTerrain behaves in certain scenarios when it comes to security. As a side note, there is another file called web.config, which is the file that controls the basic configuration parameters, including the application connection string and more. In there you will find a few more settings related to authentication, such as your password strength and so on in case you are using native authentication.

Let's review the parameters:

- `PreserveLoginUrl`: this setting controls whether the URL should be preserved on your browser.
- `AutoLoginAsReadOnly`: turns login-less access to the system on or off. If turned on, you will be granted access to netTerrain automatically in read-only mode (you won't be associated with a user, of course), and you can log in later from within the tool if you want.
- `MaximumFailedLoginAttempts`: self-explanatory.
- `ActiveDirectorySyncGroupFilter,ActiveDirectorySyncUserFilter,ActiveDirectoryUserFilter`: Active Directory settings to tune your AD to properly synch up with netTerrain groups and users.
- `AuthenticationCookieTimeoutMinutes`: self-explanatory.
- `OAuthAuthenticationAllowInsecureHttp`: should only be set to false when working in an environment closed off to the Internet.
- Microsoft Open ID authentication parameters: self-explanatory.
- 2FA parameters: These parameters deal with the setup of multi-factor authentication.

## 4.9.2 Directories

There seems to be an endless array of settings related to folder, paths, and the like. Unless you must do something esoteric like integrating the output of these folders and paths with some external system and you must read it from a path or folder other than the default, then there shouldn't be a need to ever touch these. I am not going to explain the meaning of each, since they are quite self-explanatory, so here they are in their full glory:

- `SQLTablesDirectoryName`
- `SQLExpressionsDirectory`
- `QuotesFile`
- `DynamicReportsDirectoryName`
- `ErrorLogDirectory`
- `EmbeddedDocumentsPath`
- `WebApiModulesPath` and `WebApiNetPipeAddress`
- `DevExpressFilesPath`
- `NetVizImportQueuePath`
- `VisioImportQueuePath`
- `SupportLink`
- `SevenZipAppPath`
- `CollectorSettingsFileName`
- `ThemesPath`
- `DevExpressDefaultConnectionStringName`

## 4.9.3 Default Global Settings

This is a loose categorization of parameters that have to do with default settings that affect all users globally and are not related to more specific categories listed here or in the other two blogs. Below we'll briefly describe what each setting does:

### 4.9.3.1 DefaultDiagramId

Like the name suggests, here we define which diagramId should be the default diagram that users access in the absence of a cached diagramId. Normally this id corresponds to the top-level diagram and it shouldn't be changed. However, in some scenarios you may want new users that access the system (or existing users flushing the cache) to access a diagram other than the top level.

### 4.9.3.2 DefaultThemeName

This is the default theme or skin you want your users to see when they log into netTerrain. Each user can later override this with their own skin.

### 4.9.3.3 AllowSymbolsInExpressions

This one is a bit obscure. When set to true you can use symbols in your expressions (see database and scripting guide). We recommend leaving it false unless you work in an environment closed off to the internet.

### 4.9.3.4 DevExpressDefaultDashboard

This parameter lets you define the default dashboard view that will appear when users click on the report button.

## 4.9.4 netTerrain notifications and IT visualization parameters

Notification parameters include the ones you see for errors as well as those quirky quotes of the day and other alerts.

#### 4.9.4.1 ShowErrors and ErrorLog

When set to use you will see error notifications on the bottom right corner of netTerrain and errors will be logged.

#### 4.9.4.2 IntervalHideQuote and IntervalHideHelpMessage


These two settings let you set the display time of quotes and help messages (in milliseconds).



*Quote of the day*

#### 4.9.4.3 HelpMessageShowCount

This setting lets you determine how many times you want to display each help message category for new users that join netTerrain.

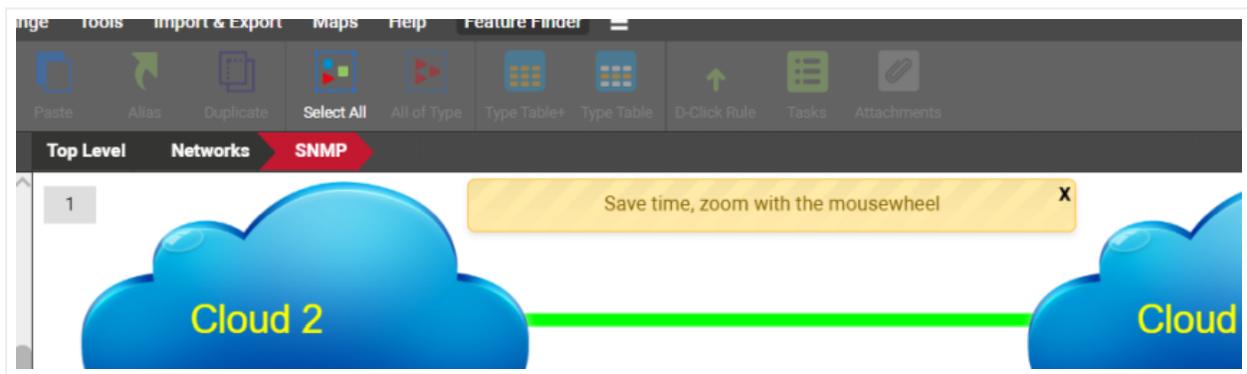

*Help notifications*

#### 4.9.4.4 ShowAlertIf90PercentsCapacityReached


When set to yes, this parameter will alert users when your netTerrain object license count has reached 90% of its capacity.

## 4.9.5 Usability and visualization

This section or set of parameters in the settings.xml file is one of the more useful ones as it lets you control certain aspects of the usability and visualization.

### 4.9.5.1 SearchStringLength

This parameter determines the minimum size of a search string that does not result in a search error. Users that enter a string with a smaller number of characters will get a search error notification. It should probably always be set to 3 characters.

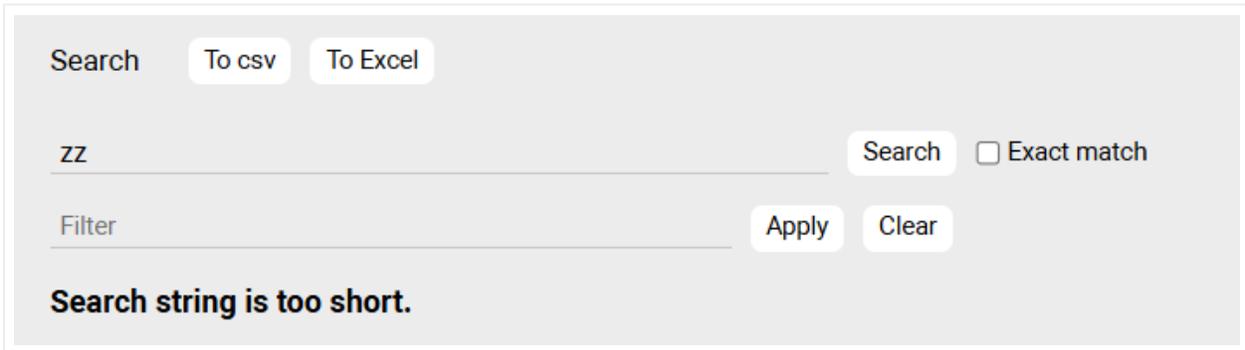

The screenshot shows a search interface with a search bar containing the text "zz". To the right of the search bar is a "Search" button and a checkbox labeled "Exact match". Below the search bar is a "Filter" label and two buttons: "Apply" and "Clear". At the bottom of the interface, a bold message reads "Search string is too short." The interface is styled with a light gray background and rounded corners.

*Search error notification*

### 4.9.5.2 EnableShortcutsToAddNodeRackDeviceAutomatically


When set to true, you can use simple shortcuts to add nodes, racks, and devices to netTerrain. These will be of the default generic type.

### 4.9.5.3 EmbeddedDocumentsFileSizeLimit

This parameter is very useful and determines the maximum file size in bytes that you allow for document uploads when you use the attachment feature. If users try to upload a document larger than this limit, they will get an error notification.

### 4.9.5.4 EmbeddedDocumentsExtensions

This parameter is also related to the parameter above and specifies which document extensions you allow users to upload to netTerrain.

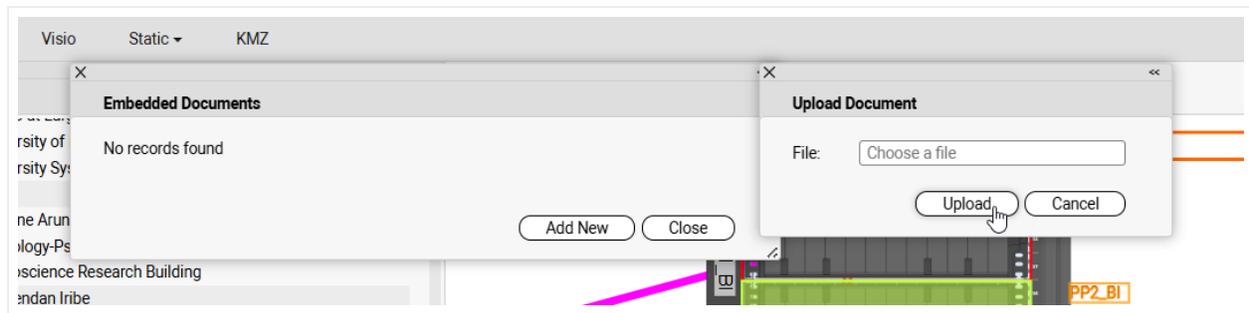

*Uploading a document*

### 4.9.5.5 LinkCreationByMouseHoverOver

When set to true, as soon as you hover the mouse over a node, it'll display all the snapping points for you to create a link.

### 4.9.5.6 Snapping

When set to true, objects on a diagram will snap nicely as soon as you approach some right angle or alignment with an adjacent object.

### 4.9.5.7 MinObjectsToShowSize

This one is geeky, and at the same time a bit confusing. This parameter basically lets you control the zoom level that netTerrain needs to set itself with an object node at the center, when the so-called auto-zoom controlled by the `AutoZoomToNodeFactor` (see below) kicks in.

Auto-zoom happens when you navigate to a diagram and a specific node is the context, such as when you go up from a node, or you reach a diagram by searching for a specific node and the node you come from is small. What exactly small means is what this parameter defines.

The `MinObjectsToShowSize` parameter is the minimum size in diagram units/metrics that defines the node as small. To find out if a node is small, netTerrain takes the smallest of the numbers associated with the width and height of the node as per the node settings and compares it to the setting. If the node size as defined above is smaller than the parameter number, then auto-zoom kicks in. The zoom level that will be used is defined by the parameter below.

This feature comes in very handy when you have dense diagrams, and it would be hard to see a node without netTerrain automatically zooming you in.

### 4.9.5.8 AutoZoomToNodeFactor

This is the zoom-level factor for the auto-zoom feature, as described above. This factor is determined as a percentage of the node size relative to the absolute diagram size.

### 4.9.5.9 MinRelativeNodeSizePerc

This parameter determines the minimum possible size of a node dropped on a diagram, relative to the size of the diagram at the given zoom level. This is useful, when you need to drop nodes on a diagram while zoomed in or out and the node happens to have a very small default size.

This setting makes sure that you can at least see the node. A parameter of 20, for example, means that regardless of the zoom level, a node you are dropping in (let's pretend it is rectangular), cannot be bigger than 20% of the length of the visible diagram.

### 4.9.5.10 MaxRelativeNodeSizePerc

This parameter determines the maximum possible size of a node dropped on a diagram, relative to the size of the diagram at the given zoom level. This is useful, when you need to drop nodes on a diagram while zoomed in to prevent them from being bigger than the visible part of the diagram itself.

A parameter of 20, for example, means that regardless of the zoom level, a node you are dropping in (let's pretend it is rectangular), cannot be bigger than 20% of the length of the visible diagram.

### 4.9.5.11 DynamicReportsInvalidProperty

A bit obscure, this parameter lets you specify what value you want to display when a property value is invalid within a dynamic query.

### 4.9.5.12 ShowNodeTitle, ShowLinkTitle and ShowFreeTextTitle

When any of these parameters is set to true then a user that hovers the mouse over a node or a link will see the name of that object pop up as a tooltip on the screen next to the mouse pointer.

### 4.9.5.13 IsInStockColumnEnabled

When this parameter is set to false, then the 'In Stock' option is not displayed for devices and racks in the catalog. Only when this parameter is set to true, will netTerrain control instance counts for inventory control (see Power User Guide).

## 4.9.6 Settings for fiber and outside plant diagram tuning

The features and functionality surrounding our outside plant tool seem to be prone to these settings controlled by the settings.xml file. This is probably the case because you can configure your Open Street Maps server and then control various visualization and functionality aspects of your circuits, strands, and fiber circuit layout records.

### 4.9.6.1 Map and general OSP settings

You can set up your Open Street Map server, which will involve a little bit of fiddling here and a whole lot of steps in your environment (see the Outside Plant section on your User Guide).

#### 4.9.6.1.1 Map sources

Open Street Map, which is the map technology or GIS system we use for our outside plant maps, includes three different layers or types of views to render maps. In addition netTerrain supports Google maps as well as ArcGIS maps. Other map sources can also be configured. All these map sources configured in the settings.xml file are available for users as options to switch a map view from one source to another.



OSM map sources


#### 4.9.6.2 ZoomedOutObjectMapping

This one is quite important for proper tuning of the outside plant diagrams and deals with the representation of objects that look very small as you zoom out. As opposed to other regular diagrams, in outside plant projects it is very common to have large geographical areas be represented on one diagram by one OSM map. In those diagrams you may have nodes that you only see once zoom in a lot. In zoomed out mode those nodes would then basically disappear. But if that's the case then you wouldn't know where to find them when you first access that map.

For that purpose, we let you control how you would want those nodes represented in zoomed out mode. We can show clusters of nodes at zoomed out levels, so that at least you know where on the map you have

nodes. We can also use halos, which are representations of the nodes that always look the same and have the same size on a diagram regardless of zoom level. The possible values are:

- 1 – Show clusters and halos
- 2 – Show halos only
- 3 – Show nothing

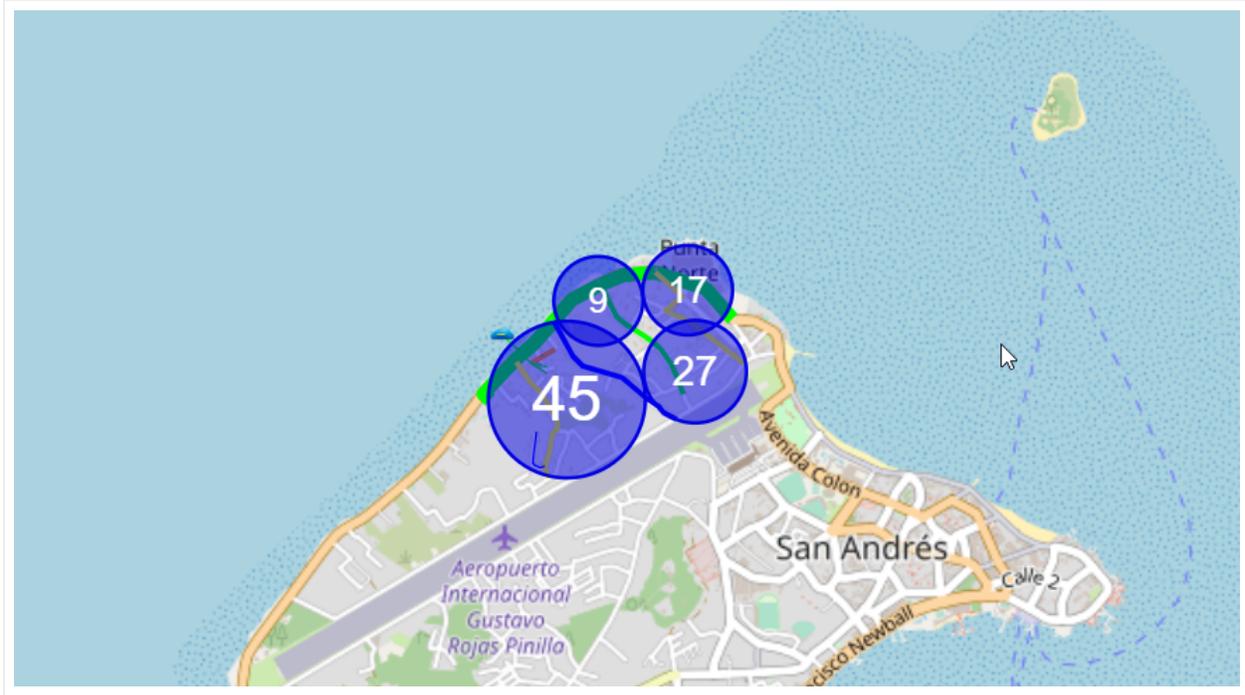

*Outside plant map showing clusters*

### 4.9.6.3 Circuit settings

Circuits are special Outside Plant elements that consist of end-to-end connections or services with their own special set of rules. For circuits we provide three settings:

- **CircuitNameLabel:** the representation of the name field in circuit tables views in case you don't want it to literally say 'Name'.
- **CircuitTableDeleteButtonLocation:** a bit obscure, this setting lets you control where on a table view you want the delete button to be located. 0 means left, 1 means right.
- **CircuitNamesNotEditable:** when set to true, circuit names cannot be edited on the table views after they have been created.

## 4.9.6.4 CLR settings

Circuit Layout Records (CLR) settings provide administrators with a finer control over the behavior and display of both circuit and block CLR in netTerrain diagrams.

### 4.9.6.4.1 BlockCLRPathLinkLabel

By default, path links show both the type and name of each link. This setting allows you to customize what information is displayed on path link labels within the Block CLR diagram. The default setting looks like this:

```
<add key="BlockCLRPathLinkLabel" value="{type}:{name}"/>
```

Use curly braces { } to insert dynamic values into the label:

Parameter	Description
{type}	The link type name
{name}	The link instance name
{property name}	Any custom property defined on the link

For example, if you change the setting to `<add key="BlockCLRPathLinkLabel" value="{type}" />`, netTerrain will display something like 'Fiber Cable' on the CLR diagram whereas would display the name of the instance (such as Cable-001).

You can also show custom properties. For example if there is a custom property called Cable ID, then to display the setting would look like `<add key="BlockCLRPathLinkLabel" value="{Cable ID}" />`.

You can even force static text to show up

(`<add key="BlockCLRPathLinkLabel" value="Path Link" />`) or hide any text completely (`<add key="BlockCLRPathLinkLabel" value="" />`).

### 4.9.6.4.2 Other CLR labels

- **BlockCLRStrandLabel:** Label for strand connections (supports {color}, {buffercolor}, {stripecolor}, {subunitcolor})
- **BlockCLRDeviceLabel:** Label for intermediate devices
- **BlockCLRCardLabel:** Label for cards
- **BlockCLRPortLabel:** Label for ports

- **BlockCLREndEqDeviceLabel:** Label for end equipment devices
- **BlockCLREndEqCardLabel:** Label for end equipment cards
- **BlockCLREndEqPortLabel:** Label for end equipment ports

Property names are case-insensitive ({Name} and {name} behave the same). If a property does not exist on the link, its value will be shown as empty. Changes to Settings.xml require an application restart or an IIS reset to take effect.

## 4.9.6.5 Strand settings

Strands are another special Outside Plant element with their own special set of rules. Strands pop up on a cable when a catalog manager creates that cable type in netTerrain with a non-zero strand count property value. For strands we also have some special foo that lets you fine-tune your fiber campus and outside plant diagrams:

 
- **StrandStatus0:** \*\*default status value for the strand when it is first created as part of the cable.
- **StrandStatusUndefined:** \*\*the value you want represented for strands when a status is not defined.
- **StrandModeUndefined:** \*\*same as above, but for strand modes.
- **StrandStatusValues:** \*\*the list of status values that are permitted for strands. The usual values are "0,2,4,6,8,12,24,48,72,144,288,512,1024".
- **StrandModeValues:** \*\*same as above but for strand modes. The typical values are "Single,Multi".
- **AddLinkTypeStrandsQtyValues:** \*\*list of all the possible strand counts that can be defined for a cable containing strands.
- **StrandNamesNotEditableOnDiagram:** \*\*when set to true, strands names cannot be changed on a diagram. They are predefined in the catalog.
- **StrandModeNotEditableOnDiagram:** \*\*same as above but for the mode.
- **HasStrandMarkerPosition:** here you can define the position for the marker on a port, if said port has strands connected. The possible values include 0 (bottom right of port); 1 (center) and 2 (bottom left).

## 4.9.6.6 Ribbon, subunit and stripe settings

### 4.9.6.6.1 StrandStripeColors

As the name shows, this setting defines the values for strand stripe colors when an instance is created (can be overridden later) and uses the following default TIA standard values:



	#F8A102
	#34FF34
	#963400
	#343434
	#FFFFFF
	#FE0000
	#000000
	#F8FF00
	#9698ED
	#FFCCC9
	#38FFF8

#### 4.9.6.6.2 RibbonStripeColors

Distinct from StrandStripeColors to allow different stripe patterns for Ribbon cables. The default stripe colors per subunit in blocks of 144 strands, separated with a comma. The pattern repeats per subunit (144 strands by default, configurable per link type).

##### Example patterns:

- "None" or "NoStripe": no stripes for any strand
- "None,Black": first 144 strands: no stripe, next 144: black stripe, then repeats
- "None,Black,Yellow": no stripe (1-144), black (145-288), yellow (289-432), then repeats

##### Common configurations:

- Corning 1728 (6 subunits of 288): "None,Black" - First half of each subunit no stripe, second half black stripe
- CommScope 864 (6 subunits of 144): "None,Black" - No stripes at all

## 4.9.6.7 BOM settings


Along with all the elements above, in Outside plant projects you can also define a Bill of Materials report that is generated from a circuit layout record.

Two settings help you customize these reports:

- **BOMReportCustomTextFilePath**: the location of a file that can contain custom text that appears in every BOM report. The default is the netTerrain root folder.
- **BOMReportBorderColor**: self-explanatory.

## 5 Help and Logs

The admin section help menu is slightly different from the help menu accessible from the project or catalog sections.

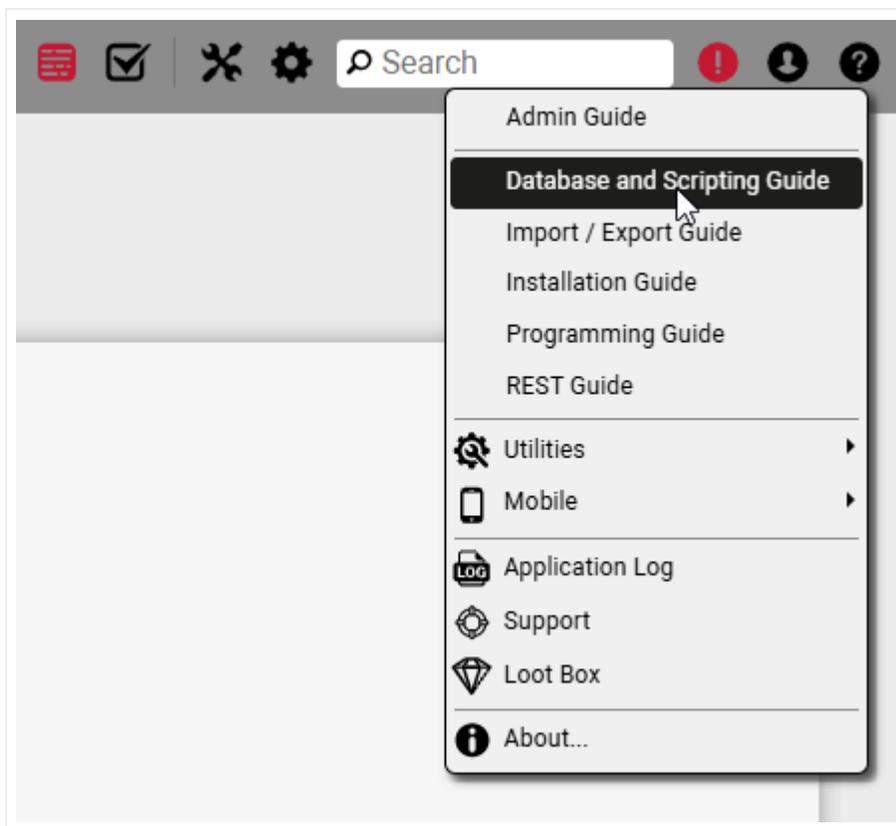


## 5.1 Guides

From the help menu users can access a wealth of information in our guides, including:


- Admin Guide
- Database and Scripting Guide: the guide that details the database structure, expressions, table views and reporting engine customization.
- Import / Export Guide: the guide to help administrators set up import and export processes on the client and/or the server.
- Installation Guide
- Programming Guide: the SOAP programming guide
- REST Guide: link to the swagger tool to test out the REST API

## 5.2 Log Management

You can access server logs directly from the admin console help menu:

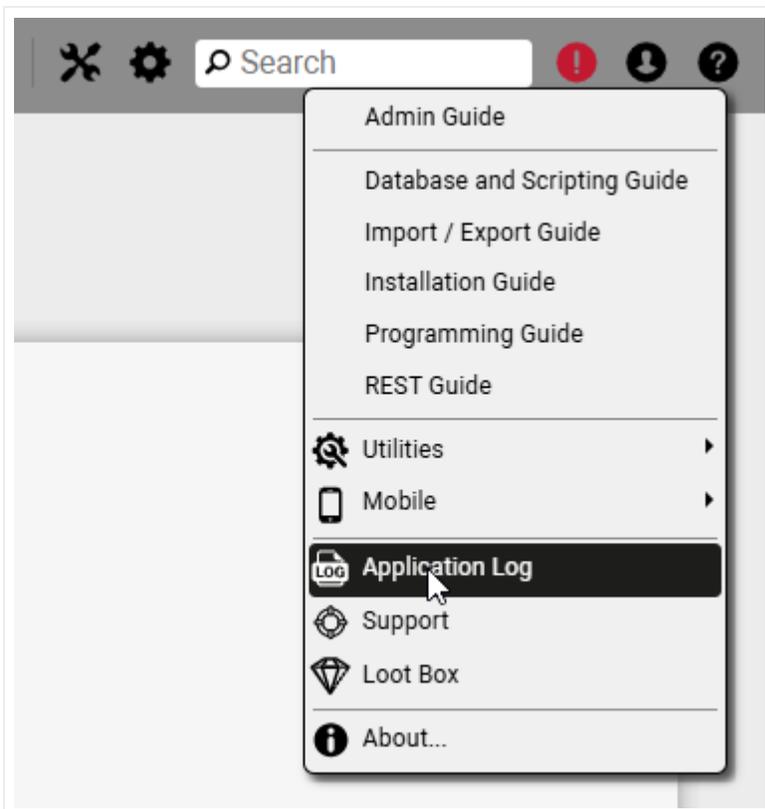

After clicking on the Application Log sub menu, netTerrain downloads the log files onto your computer, which you can open with your default text editor.

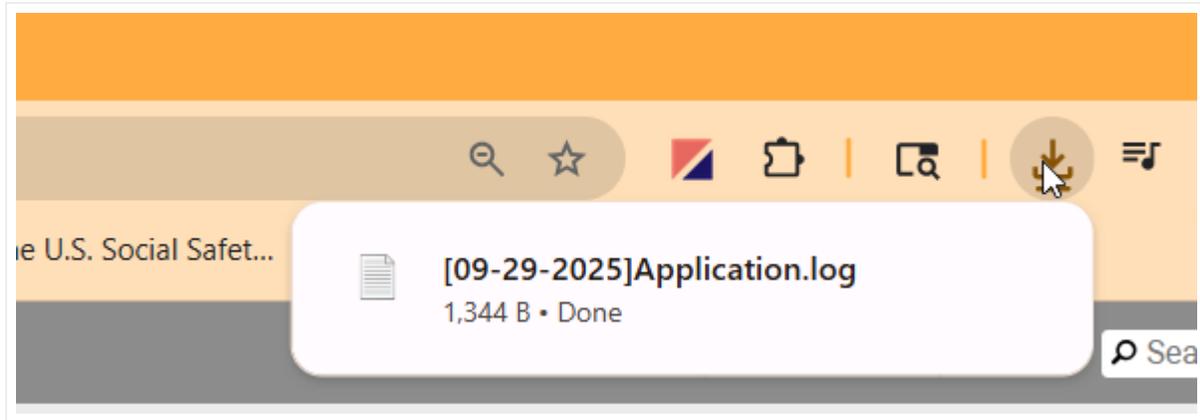

## 5.3 Other Menus

The other menus accessible from the admin help are self-explanatory. They include the same utilities (IP Toolset, Exporter Too, Excel Import Sheet and Collector) which you can access from the project side, the sub menu to obtain a QR code to download the netTerrain app on your phone, a sub menu to access the Graphical Networks support portal and the About dialog box.

# 6 Setting Up a Local OSM Server

This section describes how to set up a local OSM server in your environment, in case you can't (or don't want to) use the default OSM setup accessing the online OSM map base.

## 6.1 Getting ready

We assume that you (or your company) have a license of netTerrain OSP. We also assume that you possess some basic knowledge of browser navigation and general computer and networking knowledge. A basic knowledge of netTerrain functions, such as navigating diagrams and working with objects is also preferred. You (the lucky soul tasked with setting this up) should also be familiar with Linux commands, preferably Ubuntu 18.04. If you are not, brace yourself for the impact cause it will get a bit nasty.

## 6.1.1 Pre-installation

Your Ubuntu server should meet the following requirements:

- 15 or more Gb available disk space (If you plan on downloading large maps, i.e. continents, large countries, then more space may be needed.)
- 4 Gb or more RAM
- An account with root privileges
- Network Connectivity

## 6.1.2 Updating the Server

To make sure the Ubuntu server is up to date use the following commands:

```
sudo apt-get update  
  
sudo apt-get upgrade
```

## 6.1.3 Installing OpenStreetMap Dependencies

To allow OpenStreetMap (OSM) to work, several dependencies are needed. The OSM tile server stack is a collection of programs and libraries that work together to create a tile server. This tutorial demonstrates the most standard version that is also used on the main OpenStreetMap.org tile server.

To install OSM and all of its dependencies use:

```
sudo apt-get install libboost-all-dev git-core tar unzip wget bzip2  
build-essential autoconf libtool libxml2-dev libgeos-dev libgeos++-dev  
libpq-dev libbz2-dev libproj-dev munin-node munin libprotobuf-c0-dev  
protobuf-c-compiler libfreetype6-dev libtiff5-dev libicu-dev libgdal-  
dev libcairo-dev libcairomm-1.0-dev apache2 apache2-dev libagg-dev  
liblua5.2-dev ttf-unifont lua5.1 liblua5.1-dev libgeotiff-epsg curl
```

When prompted type "y" and press Enter. Brew some coffee since this may take a while (depending on your system).

## 6.1.4 Installing PostgreSQL / PostGIS

On Ubuntu there are pre-packaged versions of both PostgreSQL and PostGIS, so these can simply be installed via the Ubuntu package manager.

The PostgreSQL database is the database we're going to store map data and PostGIS adds some extra graphical support to it. To install, enter:

```
sudo apt-get install postgresql postgresql-contrib postgis
postgresql-10-postgis-2.4 postgresql-10-postgis-2.4-scripts
```

When prompted type "y" and press Enter.

## 6.1.5 Creating a Unix User

This step is optional. If you wish to add a non-root account to render the maps, perform the following (for username and password enter whatever suits you):

```
sudo useradd -m **_username_**
sudo passwd **_username password_**
```

## 6.1.6 Creating a Database User

Enter the username of the local user account you wish to render maps with:

```
sudo -u postgres -i
createuser **_username_**
```

At the prompt answer yes for superuser (although this isn't strictly necessary).

While still working as the "postgres" user, set up PostGIS on the PostgreSQL database (again, substitute your username for renderaccount below):

```
createdb --encoding=UTF8 -o**_username_** gis
psql --username=postgres --dbname=gis -c "CREATE EXTENSION postgis;"
```

```
psql --username=postgres --dbname=gis -c "CREATE EXTENSION
postgis_topology;"

psql --username=postgres --dbname=gis -c "CREATE EXTENSION hstore;"

psql (this will put you at a "postgres=#" prompt)

ALTER TABLE geometry_columns OWNER TO **_username_**; ALTER TABLE
spatial_ref_sys OWNER TO **_username_**; \q exit
```

## 6.2 Installing OSM2PGSQL

To help import and manage OpenStreetMap data into a database, we need some additional software. We will be using osm2pgsql.

### 6.2.1 Creating a Directory for OSM2PGSQL

To create a directory for OSM2PGSQL data enter the following:

```
mkdir ~/src

cd ~/src

git clone git://github.com/openstreetmap/osm2pgsql.git

cd osm2pgsql
```

### 6.2.2 Installing Perquisites for OSM2PGSQL

For OSM2PGSQL to work some dependencies are needed:

```
sudo apt-get install make cmake g++ libboost-dev libboost-system-dev
libboost-filesystem-dev libexpat1-dev zlib1g-dev libbz2-dev libpq-dev
libgeos-dev libgeos++-dev libproj-dev lua5.2 liblua5.2-dev
```

When prompted type "y" and press Enter.

## 6.2.3 Building OSM2PGSQL

To build and recompile pieces for OSM2PGSQL to function enter these commands:

```
mkdir build && cd build  
  
cmake ..  
  
make
```

If the output from the make command ended with “[100%] Built target osm2pgsql”) continue:

```
sudo make install
```

## 6.3 Installing Mapnik

Mapnik is an open-source toolkit for rendering maps, which supports a variety of geospatial data formats and provides flexible styling options for designing many kinds of maps.

### 6.3.1 Mapnik and Dependency Installation

The default version of Mapnik should be installed along with a few dependencies:

```
sudo apt-get install autoconf apache2-dev libtool libxml2-dev libbz2-  
dev libgeos-dev libgeos++-dev libproj-dev gdal-bin libmapnik-dev  
mapnik-utils python-mapnik
```

### 6.3.2 Checking Mapnik Install

To see if Mapnik installed properly enter the following:

```
python  
  
>>> import mapnik  
  
>>>
```

If there are no errors with a blank >>>, then continue. If not, check to make sure that all the dependencies for Mapnik were installed:

```
>>> quit()
```

### 6.3.3 Installing mod\_tile and Renderd

mod\_tile is an Apache module that handles requests for tiles; Renderd is a daemon that renders tiles when mod\_tile requests them. We will use the “switch2osm” branch of mod\_tile, which is modified so that it supports a standard Ubuntu server rather than one of OSM’s rendering servers.

### 6.3.4 Compiling mod\_tile

Here we will download the mod\_tile file and compile it, as follows:

```
cd ~/src

git clone -b switch2osm git://github.com/SomeoneElseOSM/mod_tile.git

cd mod_tile

./autogen.sh

./configure

make

sudo make install

sudo make install-mod_tile

sudo ldconfig
```

## 6.4 Stylesheet Configuration

In this section we proceed to download and configure a style sheet. The style we’ll use here is the “standard” map on the [openstreetmap.org](http://openstreetmap.org) website also known as the OpenStreetMap Carto.

## 6.4.1 Downloading OpenStreetMap Carto

Move to the ~/src directory and clone the openstreetmap-carto repository:

```
cd ~/src

git clone git://github.com/gravitystorm/openstreetmap-carto.git

cd openstreetmap-carto
```

## 6.4.2 Installing a Carto Compiler

Install the compiler:

```
sudo apt-get install npm nodejs

sudo npm install -g carto
```

To check the version, enter `carto -v`. The version response should be 1.1.0 or higher. Now we must convert the carto project into something that Mapnik can understand:

```
carto project.mml > mapnik.xml
```

## 6.5 Loading Data

We'll use "download.geofabrik.de" as our download location, though there are many others. In the example below we will use data from Azerbaijan to test you can use any continent/country but starting with a country that is not huge is best.

### 6.5.1 Downloading the Map Data

Download the data from GeoFabrik:

```
mkdir ~/data

cd ~/data

Here "/asia/azerbaijan" is used as an example. Enter the continent and
```

```
country of your choice:
```

```
wget http://download.geofabrik.de/asia/azerbaijan-latest.osm.pbf
```

## 6.5.2 Installing the Map Data into the Database.

To add the map data to the database, use the following command. Also, remember to change the file path at the end of the command to the file that you downloaded in the previous step.

```
osm2pgsql -d gis --create --slim -G --hstore --tag-transform-script  
~/src/openstreetmap-carto/openstreetmap-carto.lua -C 2500 --number-  
processes 1 -S ~/src/openstreetmap-carto/openstreetmap-carto.style ~/  
data/azerbaijan-latest.osm.pbf
```

This command can take several hours depending on how big the map is. After the command finished executing, it should end with something like “Osm2pgsql took 238s overall”.

It's worth explaining a little bit about what those options mean:

-d gis	The database to use.
--create	Load data into an empty database rather than trying to append to an existing database. (to append change to “--append”)
--slim	osm2pgsql can use different table layouts; “slim” tables works for rendering.
-G	Determines how multipolygons are processed.
--hstore	Allows tags for which there are no explicit database columns to be used for rendering.
--tag-transform-script	Defines the lua script used for tag processing, potentially making the style logic simpler.
-C 2500	Allocates 2.5 Gb of memory to osm2pgsql to the import process. Depending on how much memory you have you may want to lower or raise the memory used.
--number-processes 1	Uses 1 CPU. If have more cores you can increase the number.
-S	Create the database columns in this file.
* The last argument is the data file to load.	

## 6.6 Installing Shapefiles and Fonts

Although most of the data used to create the map are directly from the OpenStreetMap data file, some shapefiles are needed for low-zoom countries and fonts are needed for countries that use non-Latin characters.

### 6.6.1 Shapefile Installation

To download and index the shape files use:

```
cd ~/src/openstreemap-carto/  
  
scripts/get-shapedfiles.py
```

Sometimes this can take a while to complete, but it is finished it should end with “script completed”.

### 6.6.2 Font Installation

To install the fonts use:

```
sudo apt-get install fonts-noto-cjk fonts-noto-hinted fonts-noto-  
unhinted ttf-unifont
```

## 6.7 Setting up the Web Server

The config file for “renderd” is “/usr/local/etc/renderd.conf”. Edit that with a text editor such as nano (If nano is not installed use:

```
sudo apt-get install nano).
```

### 6.7.1 Editing the renderd.conf File

Use:

```
sudo nano /usr/local/etc/renderd.conf
```

In the “renderd” section change the num\_thread value if you have less than 4Gb of memory:

```
num_threads=4
```

The “ajt” section corresponds to a “named map style” called “ajt”. You can have more than one of these sections if you want, provided that the URI is different for each. The “XML” line will need changing to something like:

```
XML=/home/**_username_*/src/openstreetmap-carto/mapnik.xml
```

In the URI section, you enter whatever you want, but /hot/ allows for tiles to be generated easily:

```
URI=/hot/
```

To exit nano and save changes press Ctrl + x. At the prompt Enter y (for yes) and then press Enter.

## 6.8 Configuring Apache

As of now, Apache does not know that the mod\_tile and renderd exist. Here we will allow Apache, mod\_tile, and renderd to communicate.

### 6.8.1 Create Directories for mod\_tile and Renderd

Use:

```
sudo mkdir /var/lib/mod_tile  
  
sudo chown **_username_** /var/lib/mod_tile  
  
sudo mkdir /var/run/renderd  
  
sudo chown **_username_** /var/run/renderd
```

## 6.8.2 Setting up Communication for mod\_tile

We need to tell Apache about the “mod\_tile”, hence we need to edit the mod\_tile.conf file as follows:

```
sudo nano /etc/apache2/conf-available/mod_tile.conf
```

Add the following to the file:

```
LoadModule tile_module /usr/lib/apache2/modules/mod_tile.so
```

To exit nano press Ctrl + x. At the prompt enter y (for yes) and then press enter.

Now run the mod\_tile:

```
sudo a2enconf mod_tile
```

That will say that you need to run “service apache2 reload” to activate the new configuration, but we’ll do this later.

## 6.8.3 Setting up Communication for Renderd

Now we need to tell Apache about Renderd using:

```
sudo nano /etc/apache2/sites-available/000-default.conf
```

Now add the following between the “ServerAdmin” and DocumentRoot” lines as follows:

```
LoadTileConfigFile /usr/local/etc/renderd.conf  
ModTileRenderdSocketName /var/run/renderd/renderd.sock
```

Timeout before giving up for a tile to be rendered

```
ModTileRequestTimeout 0
```

Timeout before giving up for a tile to be rendered that is otherwise missing

```
ModTileMissingRequestTimeout 30
```

## 6.8.4 Restarting Apache

Save it and reload Apache twice to allow the configuration changes to load:

```
sudo service apache2 reload  
  
sudo service apache2 reload
```

## 6.9 Configuring netTerrain

For netTerrain to generate maps from the OSM server, some files need to be modified. This allows for communication between netTerrain and the OSM server.

### 6.9.1 Editing the Web.config File

On the host system that has netTerrain installed, edit the Web.config file. Navigate to C:\ProgramData\Graphical Networks\netTerrain\vis. Then open Web.config (you can use a simple text editor).

Find:

```
<!-- Sources of map tiles -->
```

Change the following:

```
<add key="MapSourceStandard" value="http://a.tile.openstreetmap.org/  
{z}/{x}/{y}.png" />
```

To:

```
<add key="MapSourceStandard" value="http://serveripaddress/hot/{z}/  
{x}/{y}.png" />
```

Save the file and exit.

If you point a web browser at: `http://serveripaddress/index.html` you should get Ubuntu/apache's "It works!" page.

#### **Attention!**

If the OSM server is within your network, use the private ip address of the server.

This can be found using the `ifconfig` command.

If the OSM server is not within your network, use the public ip address of the server.

## **6.10 Running Renderd**

Now it's time to run Renderd and try to render some tiles. First, we will run Renderd in the foreground and then in the background.

### **6.10.1 Running Renderd in the Foreground**

Use:

```
renderd -f -c /usr/local/etc/renderd.conf
```

You may see some warnings here – don't worry about those for now. You shouldn't get any errors. If you do, save the full output in a pastebin and ask a question about the problem in a proper forum such as [help.openstreetmap.org](http://help.openstreetmap.org)

Open `http://serveripaddress/hot/0/0/0.png` in a web browser.

You should see a map of the world in your browser and some more debug stuff on the command line, including "DEBUG: START TILE" and "DEBUG: DONE TILE". Ignore any message such as "DEBUG: Failed to read cmd on fd" as it is not really an error.

Assuming it all worked, press `Ctrl+c` to stop the foreground rendering process.

## 6.10.2 Running Renderd in the Background

First, edit the `~/src/mod_tile/debian/renderd.init` file so that `"RUNASUSER"` is set to the non-root account that you have used before, such as `Username`, then copy it to the system directory:

```
sudo nano ~/src/mod_tile/debian/renderd.init

sudo cp ~/src/mod_tile/debian/renderd.init /etc/init.d/renderd

sudo chmod u+x /etc/init.d/renderd

sudo cp ~/src/mod_tile/debian/renderd.service /lib/systemd/system/
```

To test the start command use:

```
sudo /etc/init.d/renderd start
```

To make it automatically start every time use:

```
sudo systemctl enable renderd
```

## 6.11 Viewing Tiles

This step is optional. To see tiles, we'll cheat and use an HTML file `"sample_leaflet.html"` in `mod_tile's "extra"` folder. This will generate a map on a web browser. This is useful if you already have a map you would like to render.

### 6.11.1 Copying the `mod_tile` file to the `/var/www/html` directory

Copy the `sample_leaflet.html` file to the `/var/www/html` directory as follows:

```
sudo cp ~/src/mod_tile/extra/sample_leaflet.html /var/www/html/
sample_leaflet.html
```

To display when a tile is sent to the browser enter:

```
tail -f /var/log/syslog | grep " TILE " (note the spaces around "TILE" there)
```

every time a tile is requested, and one every time rendering of one is completed.

When you load that page, you should see some tile requests. Zoom out gradually. You'll see requests for new tiles show up. Some low-zoom tiles may take a long time (several minutes) to render for the first time, but once done they'll be ready for the next time that they are needed.

## 6.11.2 Loading the Map in a Web Browser

Open the sample\_leaflet.html file on a web browser on a different system using:

```
http://serveripaddress/sample_leaflet.html
```

## 6.11.3 Acknowledgements

This guide is based on the Switch2osm guide: <https://switch2osm.org/manually-building-a-tile-server-18-04-lts/>



This guide is part of the official documentation for netTerrain,  
developed by Graphical Networks.



© 2025 Graphical Networks. All rights reserved.  
No part of this document may be reproduced or distributed  
without prior written permission from Graphical Networks.

For more information, please visit  
[www.graphicalnetworks.com](http://www.graphicalnetworks.com)